



[Manuals.plus](#) /

> [JVC](#) /

> JVC XS-N2239TC Wireless Stereo Speaker System User Manual

JVC XS-N2239TC

JVC XS-N2239TC Wireless Stereo Speaker System User Manual

Model: XS-N2239TC

1. INTRODUCTION

Thank you for purchasing the JVC XS-N2239TC Wireless Stereo Speaker System. This manual provides essential information for the safe and efficient use of your new speaker system. Please read these instructions thoroughly before operating the device and retain them for future reference.



Image of the JVC XS-N2239TC speaker system, showcasing its design and components.

2. Box CONTENTS

Please check that all the following items are included in your package:

- 1 x JVC XS-N2239TC Speaker Unit
- 1 x AUX Cable
- 1 x User Manual (this document)
- 1 x Charging Cable
- 1 x Warranty Card

3. SETUP

3.1 Placement

The JVC XS-N2239TC speakers are designed for versatile placement, suitable as Bookshelf or Floor Standing units. Ensure the speakers are placed on a stable, flat surface or floor, away from direct sunlight, heat sources, and moisture. For optimal stereo sound, position the two speakers appropriately within your listening area.

3.2 Power Connection

1. Connect the charging cable to the speaker's power input port.
2. Plug the other end of the charging cable into a suitable power outlet.
3. Ensure the speaker is fully charged before initial use for optimal battery life.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

Locate the power button on the speaker unit. Press and hold the button for a few seconds to power the speaker on or off. An indicator light will typically confirm the power status.

4.2 Connectivity

4.2.1 Wireless Connection

The speaker supports wireless streaming. To connect wirelessly:

1. Ensure the speaker is powered on and in pairing mode (refer to the speaker's indicator lights for status).
2. On your device (e.g., smartphone, tablet, television), enable wireless functionality.
3. Search for available devices and select "JVC XS-N2239TC" from the list.
4. Once connected, you can stream audio wirelessly to the speaker system.

4.2.2 USB Connection

The speaker features a plug-and-play USB card reader. Insert a USB storage device containing audio files into the designated USB port on the speaker. The speaker will automatically detect and begin playing compatible audio files.

4.2.3 AUX Connection

Use the provided AUX cable to connect the speaker to devices with a 3.5mm audio output jack, such as televisions or other audio sources. Plug one end of the AUX cable into the speaker's AUX input and the other end into your audio source's output.

4.3 Controls

4.3.1 Multifunctional Panel Keys

The speaker unit is equipped with multifunctional panel keys. These keys allow you to:

- Adjust volume (increase/decrease).
- Play/Pause audio playback.
- Navigate tracks (forward/backward) when playing from USB or wireless sources.

4.3.2 Remote Control

The included remote control provides convenient access to various functions from a distance. Use the remote to:

- Power on/off the speaker.
- Adjust volume.
- Control playback (play, pause, skip tracks).
- Switch input modes (e.g., Wireless, USB, AUX).

5. MAINTENANCE

5.1 Cleaning

To clean the speaker, use a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Ensure the speaker is powered off and unplugged before cleaning.

5.2 Water Resistance

The JVC XS-N2239TC speaker is designed with water resistance. While it can withstand splashes, it is not intended for submersion. Avoid exposing the speaker to excessive moisture or direct water jets to prevent damage.

6. TROUBLESHOOTING

If you encounter issues with your speaker system, please refer to the following common solutions:

- **No Power:** Ensure the charging cable is securely connected to both the speaker and a working power outlet. Check if the power button has been pressed correctly.
- **No Sound:** Verify the volume level on both the speaker and your connected device. Ensure the correct input mode (Wireless, USB, AUX) is selected. Check all cable connections.
- **Wireless Connection Issues:** Make sure the speaker is within range of your device. Try unpairing and re-pairing the speaker with your device. Ensure no other devices are interfering with the wireless signal.
- **USB Playback Issues:** Confirm the USB device is formatted correctly and contains compatible audio files. Try a different USB device.
- **Remote Control Not Working:** Check the remote control's batteries and replace them if necessary. Ensure there are no obstructions between the remote and the speaker's sensor.

If the problem persists, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	JVC
Model Name	JVC XS-N2239TC
Connectivity Technology	USB, Wireless
Wireless Technology Type	Wireless
Connectivity Protocol	USB
Audio Output Mode	Stereo
Speaker Type	Bookshelf
Mounting Type	Floor Standing
Product Features	Remote Control
Control Method	Remote
Compatible Devices	Television
Number of Audio Channels	2.1
Speaker Size	7.5 Centimetres
Subwoofer Speaker Diameter	5 Inches
Tweeter Driver Diameter	1 Inches
Audio Driver Type	Dynamic Driver
Colour	Black
Is Waterproof	TRUE

Water Resistance Level	Waterproof
Specific Uses For Product	Home Entertainment Systems
Battery Average Life	6 Hours
Item Weight	0.56 Kilograms

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This product comes with a **1 year warranty** provided by the manufacturer from the date of purchase. Please retain your purchase receipt and warranty card for any warranty claims.

8.2 Customer Support

For any complaints, technical assistance, or support regarding your JVC XS-N2239TC speaker system, please contact JVC customer care:

- **Customer Care Number:** +91-9910332380

Please have your product model number and purchase details ready when contacting support.