

[Manuals.plus](#) /

> [cimetech](#) /

> cimetech Wireless Keyboard Mouse Combo Instruction Manual

## cimetech 1-KF002+M013-Blue

# cimetech Wireless Keyboard Mouse Combo Instruction Manual

Model: 1-KF002+M013-Blue | Brand: cimetech

## 1. INTRODUCTION

Thank you for choosing the cimetech Wireless Keyboard Mouse Combo. This product provides a reliable and comfortable wireless solution for your computing needs, featuring a full-size keyboard with quiet keys and an ergonomic mouse. This manual will guide you through the setup, operation, and maintenance of your new device.



Image: The cimetech wireless keyboard and mouse combo in aqua green, showcasing its sleek design.

## 2. WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- 1 x cimetech Wireless Keyboard
- 1 x cimetech Wireless Mouse
- 1 x USB Receiver (stored in the mouse battery compartment)
- 1 x User Manual (this document)



Image: The underside of the keyboard showing the battery compartment and the USB receiver storage slot.

## 3. SETUP

---

### 3.1 Installing Batteries

1. Open the battery compartment cover on the back of the keyboard and mouse.
2. Insert 2 AAA batteries into the keyboard and 1 AA battery into the mouse, ensuring correct polarity (+/-). Batteries are not included.
3. Close the battery compartment covers securely.

### 3.2 Connecting the USB Receiver

1. Locate the USB receiver stored in the mouse battery compartment.
2. Plug the USB receiver into an available USB port on your computer.
3. Your computer should automatically detect and install the necessary drivers. This may take a few moments.



Image: A close-up view of the USB receiver plugged into a laptop, illustrating the 2.4G wireless connection.

### 3.3 Powering On

- For the mouse, slide the On/Off switch located on the bottom of the mouse to the 'On' position.
- The keyboard does not have a separate power switch; it activates automatically upon key press when the receiver is connected.

## 4. OPERATING YOUR CIMETECH WIRELESS COMBO

### 4.1 Keyboard Functions

The keyboard features a full-size layout with a numeric keypad and multimedia hotkeys for quick access to various functions.

- **Multimedia Hotkeys:** Use the 'Fn' key in combination with the F1-F12 keys to control media playback, volume, email, and internet browsing. Refer to the icons on the keys for specific functions.
- **Scissor-Switch Keys:** The keyboard utilizes scissor-switch technology, providing a comfortable and responsive typing experience with reduced noise.



Image: A detailed view of a keyboard key, highlighting the scissor switch mechanism for responsive and comfortable typing.

### 4.2 Mouse Functions

The wireless mouse is designed for comfort and precision.

- **DPI Adjustment:** The mouse supports adjustable DPI settings (800/1200/1600 DPI) to customize cursor sensitivity. Press the DPI button located behind the scroll wheel to cycle through the settings.
- **Silent Click:** The mouse features silent click buttons, minimizing noise during use.
- **Metal Scroll Wheel:** Provides smooth and precise scrolling.

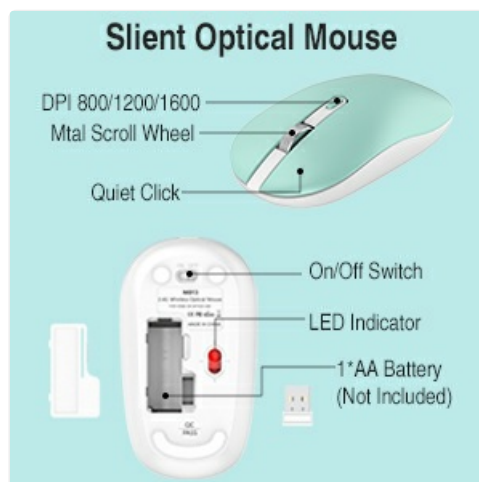


Image: A diagram illustrating the features of the silent optical mouse, including DPI settings, metal scroll wheel, quiet click, and battery compartment details.

### 4.3 Power Saving Features

To conserve battery life, both the keyboard and mouse feature automatic sleep modes:

- The keyboard enters sleep mode after 10 minutes of inactivity.
- The mouse enters sleep mode after 15 minutes of inactivity.
- To wake the devices, simply press any key on the keyboard or move/click the mouse.



Image: A visual representation of the auto-sleep feature for both the keyboard (10 min) and mouse (15 min) to conserve battery life.

### 5. MAINTENANCE AND CARE

Proper care will extend the life of your cimetech Wireless Combo:

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the keyboard and mouse. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not immerse the devices in water.
- **Battery Replacement:** Replace batteries when performance degrades or the devices stop responding. Always use new batteries of the specified type (AAA for keyboard, AA for mouse).
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage and store the devices in a cool, dry place.

### 6. TROUBLESHOOTING

If you encounter issues with your cimetech Wireless Combo, please refer to the following table:

| Problem                                     | Possible Cause                                                                          | Solution                                                                                                                                                  |
|---------------------------------------------|-----------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Keyboard/Mouse not responding               | Low batteries; USB receiver not properly connected; Device in sleep mode; Interference. | Replace batteries; Ensure USB receiver is firmly plugged in; Press any key/move mouse to wake; Move devices closer to receiver; Try a different USB port. |
| Lag or delayed response                     | Distance from receiver; Interference from other wireless devices.                       | Reduce distance between devices and receiver (within 10 meters/33 ft); Move away from other 2.4GHz devices (e.g., Wi-Fi routers, cordless phones).        |
| Mouse cursor erratic or not moving smoothly | Dirty optical sensor; Unsuitable surface.                                               | Clean the optical sensor on the bottom of the mouse; Use the mouse on a clean, non-reflective, opaque surface or a mouse pad.                             |

| Problem                     | Possible Cause                                   | Solution                                                                                                                                               |
|-----------------------------|--------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| Multimedia keys not working | Incorrect key combination;<br>Software conflict. | Ensure you are pressing the 'Fn' key simultaneously with the desired function key; Check your operating system's settings for media key functionality. |

## 7. SPECIFICATIONS

- **Model:** 1-KF002+M013-Blue
- **Connectivity:** 2.4GHz Wireless (USB Receiver)
- **Operating Range:** Up to 10 meters (33 feet)
- **Keyboard Dimensions:** 14.5 x 5.8 x 0.2 inches (approx. 36.8 x 14.7 x 0.5 cm)
- **Keyboard Keys:** 99 Keys (Full Size with Numeric Keypad)
- **Keyboard Battery:** 2 x AAA (not included)
- **Mouse DPI:** 800/1200/1600 DPI (Adjustable)
- **Mouse Battery:** 1 x AA (not included)
- **Compatibility:** Windows XP / Vista / 7 / 8 / 10 operating systems, PC, Desktop Computer, Laptop, Notebook.
- **Special Features:** Ergonomic Design, Lightweight, Portable, Less Noise Keys, Auto Sleep Mode.



Image: Icons representing wide compatibility with Windows XP/Vista, Windows 7/8, Windows 10, PC computers, and Mac notebooks.

## 8. WARRANTY AND SUPPORT

cimotech products are designed and manufactured to the highest quality standards. For specific warranty information and support, please refer to the warranty card included with your product or visit the official cimotech website. If you require further assistance, please contact cimotech customer service.

**Online Support:** Visit the cimotech official website for FAQs, driver downloads, and contact information.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question