

Rimous Universal Remote Control

Rimous Universal Remote Control for LG Smart TV

User Manual

INTRODUCTION

This manual provides comprehensive instructions for the Rimous Universal Remote Control, designed for seamless compatibility with various LG Smart TV models, including LCD, LED, OLED, UHD, 3D, and 4K televisions. This remote control is a direct replacement and requires no complex programming for most LG TVs. Please read this manual carefully to ensure proper use and longevity of your remote control.

SETUP

1. Battery Installation

The Rimous Universal Remote Control operates on two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, illustrating the correct orientation for AAA battery insertion.

2. Initial Use

This remote control is designed for immediate use with most LG Smart TVs. No programming or pairing is required. Once batteries are installed, point the remote towards your LG TV and begin operation.



Image: Front view of the remote control, indicating compatibility with various LG Smart TV types.

OPERATING INSTRUCTIONS

The Rimous Universal Remote Control features an ergonomic design for comfortable grip and intuitive button placement. Below is a guide to the primary functions of the remote's buttons.



Function Button

 Turns the TV on and off.

List: Access the saved channels list.

 
VOL +/-: Adjusts the volume.

CH +/-: Changes channels.

FAV: Access your favorite channel list

MUTE: Cuts off the sound temporarily.

 Accesses the "NETFLIX"

 Accesses the "Amazon",

BACK: Return to the previous step

EXIT: Exits the menu.

SLEEP: Accesses the sleep timer

Color buttons (Yellow / Blue / Red / Green): Shortcuts key for interactive functions.

Image: Detailed layout of the remote control buttons with their functions labeled.

Power Button (): Turns the TV on and off.

Number Buttons (0-9): Directly select channels.

LIST: Accesses the saved channels list.

FLASHBK: Returns to the previously viewed channel.

VOL +/-: Adjusts the volume level.

CH +/-: Changes channels up or down.

INFO: Displays information about the current program.

FAV: Accesses your favorite channel list.

MUTE: Cuts off the sound temporarily.

Netflix Button: Direct access to the Netflix application.

Amazon Button: Direct access to the Amazon application.

Navigation Pad (Up, Down, Left, Right, OK): Navigates menus and confirms selections.

BACK: Returns to the previous step or menu.

EXIT: Exits the current menu or application.

SLEEP: Accesses the sleep timer function.

Color Buttons (Red, Green, Yellow, Blue): Provide shortcuts for interactive functions within certain applications or TV menus.

Media Control Buttons (Play, Pause, Stop, Rewind, Fast Forward) Control media playback.

High Performance

Farther transmitting distance, sensitive button, stable performance

Easy to Grip

Ergonomic design, all the buttons at your fingertips



Image: The remote control held in a hand, illustrating its comfortable and ergonomic design.

MAINTENANCE

Cleaning

To maintain the remote control's appearance and functionality, wipe it regularly with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the remote's surface and internal components.

Battery Replacement

Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction. Dispose of used batteries according to local regulations.

TROUBLESHOOTING

- **Remote is not responding:**
 - Ensure the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the TV's infrared sensor.
 - Ensure you are within the effective operating range and pointing the remote directly at the TV.
- **Buttons require multiple presses:**
 - This often indicates low battery power. Replace the batteries.
 - Clean the remote's surface, especially around the buttons, to ensure no debris is interfering with button presses.
- **Remote works intermittently:**
 - Check battery connections for looseness.
 - Ensure there are no strong light sources (like direct sunlight or certain types of lighting) interfering with the infrared signal.

SPECIFICATIONS

Brand	Rimous
Compatible Devices	LG LED LCD HDTV 3D 4K Smart TV (all models)
Connectivity Technology	Infrared
Power Source	2 x AAA Batteries (not included)
Special Feature	Ergonomic, Universal, No Setup Required
Dimensions	6.77 x 1.85 x 0.91 inches
Item Weight	1.76 ounces

WARRANTY AND SUPPORT

This Rimous Universal Remote Control is designed for reliability and performance. For any questions, technical assistance, or warranty inquiries, please contact the manufacturer or your retailer. Please refer to your purchase documentation for specific warranty terms and contact information.