

Candy CSWS 4852DWE/1-S

Candy Smart CSWS 4852DWE/1-S Washer Dryer Instruction Manual

Model: CSWS 4852DWE/1-S

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Candy Smart CSWS 4852DWE/1-S washer dryer. Please read it thoroughly before installation and use, and keep it for future reference.



Image 1.1: Front view of the Candy Smart CSWS 4852DWE/1-S washer dryer. This image displays the appliance's control panel, detergent drawer, and front-loading door.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play on or in the appliance.
- Keep packaging materials out of reach of children.
- Do not operate the appliance if it is damaged or malfunctioning.
- Unplug the appliance before cleaning or performing any maintenance.

- Do not install or store the appliance where it will be exposed to the weather.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage. Remove all transit bolts from the rear of the machine before use. Keep packaging for potential future transport.

3.2 Positioning

Place the washer dryer on a firm, level floor. Ensure there is adequate space around the appliance for ventilation and access. The dimensions are approximately 85 cm (height) x 60 cm (width) x 53 cm (depth).



Image 3.1: Side view of the Candy Smart CSWS 4852DWE/1-S washer dryer with dimensions. This image illustrates the appliance's

3.3 Connecting Water and Power

- Connect the water inlet hose to a cold water tap.
- Position the drain hose (supplied) into a suitable drain or sink, ensuring it is securely fastened to prevent displacement during operation.
- Plug the power cable into a grounded electrical outlet. The appliance operates on 230 Volts.

3.4 Leveling

Adjust the appliance's feet to ensure it is perfectly level. This prevents excessive vibration and noise during operation.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The control panel features a program selector knob, a digital display, and touch-sensitive buttons for various functions. Use the knob to select programs and the touch controls for additional settings like temperature, spin speed, and special options.

4.2 Loading Laundry

- Open the door and load laundry, ensuring not to exceed the maximum capacity: 8 kg for washing and 5 kg for drying.
- Close the door firmly.

4.3 Detergent Dispenser

Pull out the detergent drawer and add the appropriate amount of detergent and fabric softener to the designated compartments according to the detergent manufacturer's instructions and the selected program.

4.4 Selecting a Program

Turn the program selector knob to choose one of the 15 available cycles. Common programs include:

- **Cotton:** For durable cotton items.
- **Eco:** Energy-efficient wash for normally soiled cottons.
- **Wool:** Certified Woolmark Apparel Care program for wool garments.
- **Delicates:** For fragile items requiring gentle care.
- **Synthetics:** For synthetic and mixed fabric items.
- **Prewash:** For heavily soiled items.

4.5 Special Functions

- **NFC Connectivity:** Use the Candy Simply-Fi app on your smartphone to access additional programs, monitor cycles, and perform diagnostics via NFC.
- **Easy Iron Steam Function:** Reduces wrinkles and refreshes garments, making ironing easier.
- **Delayed Start:** Postpone the start of a cycle by up to 24 hours to suit your schedule.
- **Drying Temperature Management:** Adjust the drying temperature to protect different fabric types.

4.6 Starting a Cycle

After selecting the program and any desired options, press the Start/Pause button to begin the cycle.

4.7 Ending a Cycle

The appliance will signal the end of the cycle. Wait for the door lock indicator to turn off before opening the door and unloading the laundry.

5. MAINTENANCE AND CARE

5.1 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.

5.2 Cleaning the Detergent Drawer

Regularly remove and clean the detergent drawer under running water to prevent detergent residue buildup.

5.3 Cleaning the Filter

The filter should be cleaned periodically to ensure efficient drainage and prevent blockages.

1. Open the filter cover located at the bottom front of the appliance.
2. Place a shallow container underneath to collect any residual water.
3. Unscrew the filter by turning it counter-clockwise.
4. Remove any lint, debris, or foreign objects.
5. Rinse the filter under running water.
6. Screw the filter back in clockwise and close the cover.



Image 5.1: Close-up of the washer dryer's filter compartment and removed filter. This image shows the accessible drain filter, which should be regularly cleaned to maintain appliance performance.

6. TROUBLESHOOTING

If you encounter issues with your appliance, consult the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Appliance does not start	No power supply; Door not closed; Program not selected.	Check power plug and fuse; Ensure door is firmly closed; Select a program and press Start.
Excessive noise/vibration	Transit bolts not removed; Appliance not level; Uneven load.	Remove transit bolts; Adjust leveling feet; Redistribute laundry inside the drum.
Water not draining	Drain hose kinked or blocked; Filter blocked.	Check and clear drain hose; Clean the drain filter (refer to Section 5.3).
Poor drying performance	Overloaded dryer; Incorrect program/temperature; Lint filter blocked.	Reduce load size; Select appropriate drying program and temperature; Clean the lint filter.

7. SPECIFICATIONS

Key technical specifications for the Candy Smart CSWS 4852DWE/1-S washer dryer:

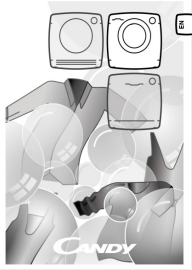
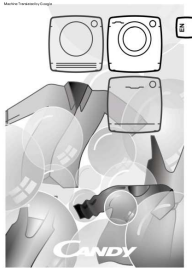
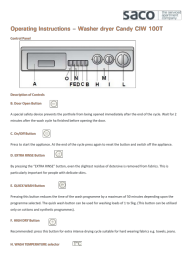
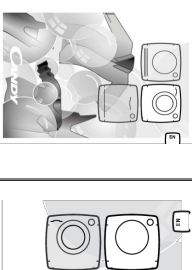
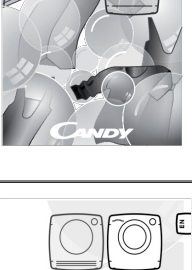
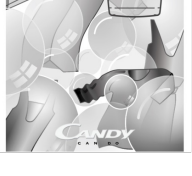
- **Model Number:** CSWS 4852DWE/1-S
- **Brand:** Candy
- **Washing Capacity:** 8 Kilograms
- **Drying Capacity:** 5 Kilograms
- **Maximum Spin Speed:** 1400 RPM
- **Dimensions (H x W x D):** 85 cm x 60 cm x 53 cm
- **Product Weight:** 65 Kilograms
- **Voltage:** 230 Volts
- **Wattage:** 124 Watts
- **Annual Energy Consumption:** 63 Kilowatt-hours (Washing only)
- **Drum Material:** Stainless Steel
- **Control Type:** Button, Touch
- **Special Features:** Woolmark Apparel Care Certified, Easy Iron Steam Function, NFC Connectivity, Delayed Start 24H
- **Included Components:** Power cable, Washer dryer unit, Drain hose

8. WARRANTY AND SUPPORT

Your Candy Smart CSWS 4852DWE/1-S washer dryer is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, spare parts, or to schedule a service appointment, please contact Candy customer support. Contact details can typically be found on the manufacturer's website or in the documentation provided with your appliance.

Related Documents - CSWS 4852DWE/1-S

	<p>Candy Washer Dryer User Manual - Installation, Operation, and Maintenance</p> <p>Comprehensive user manual for the Candy washer dryer, covering safety, installation, program selection, controls, maintenance, troubleshooting, and Smart Touch features. Includes a detailed table of programmes and error code guide.</p>
	<p>Candy Washing Machine User Manual</p> <p>Comprehensive user manual for Candy washing machines, covering installation, operation, maintenance, troubleshooting, and program details. Includes safety instructions and energy-saving tips.</p>
	<p>Candy CIW 100T Washer Dryer: Operating Instructions and Guide</p> <p>Detailed operating instructions for the Candy CIW 100T washer dryer, covering control panel functions, wash programs, and drying cycles for optimal use. Learn how to operate your appliance efficiently.</p>
	<p>Candy Washing Machine and Dryer User Manual</p> <p>Comprehensive user manual for Candy washing machines and dryers, covering installation, operation, maintenance, troubleshooting, and safety guidelines. Learn how to use your appliance efficiently and effectively.</p>
	<p>Candy Smart 1D NFC Tumble Dryer User Manual and Instructions</p> <p>Comprehensive user manual for the Candy Smart 1D NFC tumble dryer, covering safety, installation, operation, maintenance, troubleshooting, and program selection. Includes technical specifications and energy efficiency information.</p>
	<p>Candy Washing Machine User Manual: Installation, Operation, and Maintenance</p> <p>Comprehensive user manual for Candy washing machines, covering installation, safety rules, program selection, maintenance, troubleshooting, and Smart Touch features. Includes detailed instructions for optimal use and care.</p>