

[Manuals.plus](#) /

› [NKF](#) /

› NKF RM-C1240 Smart LCD TV Remote Control User Manual for JVC TVs

NKF RM-C1240

NKF RM-C1240 Smart LCD TV Remote Control User Manual

For JVC TV Models: LT19EM74, LT24EM74, LT28EM74, LT42EM74, LT29EM75, LT32EM75, LT43EM75, LT48EM75, LT49EM75, LT55EM75

1. INTRODUCTION

Thank you for choosing the NKF RM-C1240 Smart LCD TV Remote Control. This manual provides essential information for the proper setup, operation, and maintenance of your new remote control. Please read these instructions carefully before use to ensure optimal performance and longevity of the product.

2. PRODUCT OVERVIEW

The NKF RM-C1240 is a replacement remote control designed for various JVC LCD TV models. It offers full functionality without the need for complex programming, providing immediate control over your television's features.

2.1 Compatible JVC TV Models

- LT19EM74
- LT24EM74
- LT28EM74
- LT42EM74
- LT29EM75
- LT32EM75
- LT43EM75
- LT48EM75
- LT49EM75
- LT55EM75

2.2 Remote Control Layout



Figure 1: Angled front view of the NKF RM-C1240 remote control, showcasing its ergonomic design and button layout.





Figure 2: Direct front view of the NK-F RM-C1240 remote control, highlighting all buttons and their labels.







Figure 3: Back view of the NKF RM-C1240 remote control, showing the battery compartment and its cover.

3. SETUP

3.1 Battery Installation

The NKF RM-C1240 remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two new 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Important: Ensure correct battery polarity. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote will not be used for an extended period.

3.2 Initial Use

This remote control is designed for immediate use with compatible JVC TV models. No programming or pairing is required. Simply install the batteries, and the remote is ready to operate your TV.

4. OPERATING INSTRUCTIONS

The NKF RM-C1240 remote control provides full access to all standard functions of your JVC TV. Below is a general guide to common button functions:

Button	Function
POWER	Turns the TV on or off.
INPUT	Selects the input source (HDMI, AV, etc.).
NETFLIX	Direct access to the Netflix application.
YouTube	Direct access to the YouTube application.
VOL +/-	Adjusts the volume level.
CH +/-	Changes TV channels.
MUTE	Mutes or unmutes the TV sound.
OK / Navigation	Confirms selections and navigates menus.
MENU	Opens the TV's main menu.
EXIT	Exits the current menu or function.

Button	Function
Number Buttons (0-9)	Direct channel selection.
Playback Controls	Play, Pause, Stop, Rewind, Fast Forward for media playback.

5. MAINTENANCE

5.1 Cleaning

To clean your remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

5.2 Battery Care

- Replace batteries when the remote's response becomes sluggish or inconsistent.
- Always replace both batteries at the same time.
- Dispose of used batteries responsibly according to local regulations.

6. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common solutions:

Problem	Solution
Remote is not working.	Check if the batteries are inserted correctly with the correct polarity. Replace with new AAA batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Buttons are unresponsive.	Clean the remote control surface, especially around the buttons, to remove any dirt or debris. Replace batteries.
Remote only works intermittently.	This often indicates low battery power. Replace the batteries. Ensure you are within the effective range and line of sight of the TV.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

- **Model:** RM-C1240
- **Brand:** NKF
- **Compatible Devices:** JVC Televisions
- **Connectivity Technology:** Infrared
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 8.66 x 1.57 x 0.79 inches
- **Item Weight:** 3.2 ounces
- **Special Feature:** No Programming Required

8. WARRANTY AND SUPPORT

For any issues or inquiries regarding your NKF RM-C1240 remote control, please refer to the retailer's return policy or contact the seller directly for assistance. Specific warranty details may vary by purchase location and seller.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B08KY2CL7X>

More documents and user manuals: <https://manuals.plus/>