

Manuals.plus /

› Daewoo /

› Daewoo 20L 800W Microwave Oven User Manual

Daewoo SDA2089

Daewoo 20L 800W Microwave Oven User Manual

Model: SDA2089

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Do not allow the cord to hang over the edge of a table or counter, or touch hot surfaces.
- Always ensure the appliance is unplugged from the electrical outlet before cleaning, servicing, or moving.
- This appliance is intended for household use only.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Only use utensils that are suitable for use in microwave ovens.
- When heating food in plastic or paper containers, keep a close eye on the oven due to the possibility of ignition.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- The appliance should be cleaned regularly and any food deposits removed.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

PRODUCT OVERVIEW

The Daewoo 20L 800W Microwave Oven (Model SDA2089) is designed for convenient and efficient food preparation. It features a 20-liter capacity, 800 watts of power, 6 power levels, and a manual 30-minute timer.



Image: Front view of the Daewoo 20L 800W Microwave Oven, showing the door, control panel with dials and buttons, and the Daewoo logo.

Components:

- Microwave Oven Unit
- Glass Turntable
- Turntable Ring
- Instruction Manual

SETUP AND INSTALLATION

Unpacking:

1. Remove all packaging materials from inside the oven cavity and from the oven door.
2. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged.
3. Ensure all components, including the glass turntable and turntable ring, are present.



Image: The Daewoo Microwave Oven shown within its retail packaging box, highlighting the product's presentation.

Placement:

- Place the microwave oven on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in it.
- Ensure adequate ventilation: leave a minimum of 20cm (8 inches) clearance above the oven, 10cm (4 inches) at the rear, and 5cm (2 inches) on each side.
- Do not block air vents.
- Keep the oven away from heat and water sources.
- Ensure the power cord is not trapped or kinked.



Image: Daewoo Microwave Oven positioned on a kitchen countertop, demonstrating typical placement with surrounding space.

Electrical Connection:

Plug the microwave oven into a grounded electrical outlet. Ensure the voltage and frequency of your power supply match the specifications on the appliance rating label.

OPERATING INSTRUCTIONS

The Daewoo SDA2089 microwave features twin dial controls for simple operation.

Setting Cooking Time and Power Level:

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Turn the **Power Level** dial to select the desired power setting (e.g., High, Medium-High, Medium, Medium-Low, Low, Defrost). The microwave offers 6 power levels.
4. Turn the **Timer** dial to set the desired cooking time, up to 30 minutes.
5. The microwave will start cooking automatically once the timer is set.
6. When the set time expires, the microwave will beep to indicate cooking is complete.

Defrost Function:

To defrost food, turn the **Power Level** dial to the "Defrost" setting. Then, use the **Timer** dial to set the appropriate defrosting time based on the food's weight and type. It is recommended to turn the food over periodically during defrosting for even results.

Stopping Cooking:

- To pause cooking, open the oven door. Cooking will resume when the door is closed.
- To stop cooking completely, turn the **Timer** dial back to "0" or open the door and remove the food.

MAINTENANCE AND CLEANING

Regular cleaning of your microwave oven will ensure its longevity and efficient operation.

General Cleaning:

- Always unplug the oven from the power outlet before cleaning.
- Clean the oven cavity after every use with a damp cloth to prevent food residue from drying and sticking.
- For stubborn stains, a mild detergent can be used. Avoid abrasive cleaners or scouring pads.
- The easy-clean enamelled white coated cavity facilitates cleaning and helps prevent rust build-up.

Cleaning the Turntable and Ring:

- Remove the glass turntable and turntable ring.
- Wash them in warm, soapy water or in a dishwasher.
- Wipe the oven floor and the area beneath the turntable ring to remove any debris.
- Ensure the turntable and ring are dry before placing them back in the oven.

Exterior Cleaning:

- Wipe the exterior surfaces with a soft, damp cloth.
- Clean the control panel carefully with a soft, damp cloth. Do not use excessive water.

TROUBLESHOOTING

If you experience issues with your microwave oven, consult the table below for common problems and solutions.

Problem	Possible Cause	Solution
Oven will not start	Power cord not plugged in securely.	Ensure the power cord is firmly plugged into the outlet.
	Door is not closed properly.	Close the oven door securely.
	Timer is not set.	Set the cooking time using the timer dial.
Food not cooking evenly	Food not stirred or turned.	Stir or turn food halfway through cooking.
	Incorrect power level or cooking time.	Adjust power level and cooking time as needed.
Excessive condensation inside oven	High moisture content in food.	This is normal for some foods. Wipe the interior after use.
Oven light not working	Light bulb needs replacement.	Contact qualified service personnel for bulb replacement. Do not attempt to replace it yourself.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Daewoo
Model Number	SDA2089
Capacity	20 litres
Power / Wattage	800 watts
Power Levels	6
Timer	30 minute manual timer
Material	Stainless Steel, Glass
Product Dimensions (L x W x H)	49.6 x 35.4 x 29.2 cm
Item Weight	12.4 kg
Installation Type	Countertop
Included Components	Microwave, Glass Turntable

WARRANTY AND SUPPORT

This Daewoo microwave oven comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or to inquire about replacement parts, please contact Daewoo customer service. Contact information can typically be found on the product packaging, the official Daewoo website, or the warranty card.

When contacting support, please have your product model number (SDA2089) and purchase date available.

