

Collective Minds CM00115

Collective Minds Dual Charge Station for PS5 DualSense Controllers - User Manual

Model: CM00115

INTRODUCTION

The Collective Minds Dual Charge Station is designed to efficiently charge two PlayStation 5 DualSense wireless controllers simultaneously. This manual provides essential information for proper setup, operation, and maintenance of your charging station.

PACKAGE CONTENTS

- Collective Minds Dual Charge Station
- 1 Power Cable (USB Type-C)

SETUP INSTRUCTIONS

1. **Unpack the Charging Station:** Carefully remove the Collective Minds Dual Charge Station and its power cable from the packaging.
2. **Connect Power:** Insert the USB Type-C end of the provided power cable into the port on the back of the charging station. Connect the other end of the cable to a compatible USB power source, such as a USB port on your PlayStation 5 console or a USB wall adapter (not included).



Image: Front view of the Collective Minds Dual Charge Station.

3. **Placement:** Place the charging station on a stable, flat surface near your PlayStation 5 console for convenient access.

OPERATING INSTRUCTIONS

1. **Charging Controllers:** Gently align your PlayStation 5 DualSense controller(s) with the charging port(s) on the station and place them into the slots. Ensure the controller makes full contact with the charging pins.



Image: Two DualSense controllers placed on the charging station.

2. **Charge Status Indication:** The charging station utilizes the built-in LED indicators on the PS5 DualSense controllers to show their charging status. When a controller is charging, its light bar will typically pulse orange. Once fully charged, the light bar will turn off.

Your browser does not support the video tag.

Video: Demonstrates how to charge PS5 DualSense controllers using the Collective Minds Dual Charge Station and how the controller LEDs indicate charge status.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe down the charging station. Avoid using abrasive cleaners or solvents, as these can damage the finish.
- **Storage:** When not in use for extended periods, disconnect the power cable and store the charging station in a cool, dry place.

TROUBLESHOOTING

- **Controller Not Charging:**
 - Ensure the power cable is securely connected to both the charging station and the power source.
 - Verify that the power source (e.g., PS5 USB port) is active and providing power.
 - Confirm that the controller is correctly seated in the charging slot and making proper contact with the charging pins.
 - Try charging a different controller (if available) to determine if the issue is with the station or the controller.
- **LED Indicators Not Functioning:** The charging station relies on the controller's built-in LEDs. If the LEDs are not indicating charge status, refer to the "Controller Not Charging" steps above. If the issue persists, the controller itself may have a fault.
- **Loose Connection:** If controllers feel loose or unstable in the charging slots, ensure they are inserted correctly. Avoid forcing controllers into the slots.

SPECIFICATIONS

Brand	Collective Minds
Model Number	CM00115
Compatible Devices	PlayStation 5 DualSense Controllers
Connector Type	USB Type C
Total USB Ports	2 (for charging controllers)
Wattage	18 watts
Output Voltage	2.8 Volts (DC)
Power Source	Corded Electric
Item Weight	340 Grams
Additional Features	Fast Charging

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your product or visit the official Collective Minds website. Keep your proof of purchase for warranty claims.

Contact Information:

- Manufacturer: Collective Minds
- Website: [Collective Minds Store on Amazon](#) (for general product information)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question