

[Manuals.plus](#) /

> [Xtrasaver](#) /

> OEM Replacement Remote Control for Skyworth TV Remote Control Latest Version for 32E2 43E2 43E2B TV

Xtrasaver OEM Replacement Remote Control

User Manual

XTRASAVER OEM REPLACEMENT REMOTE CONTROL FOR SKYWORTH TV

Models: 32E2, 43E2, 43E2B

1. Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your new Xtrasaver OEM Replacement Remote Control. This remote is specifically designed to be compatible with Skyworth TV models 32E2, 43E2, and 43E2B, offering a seamless replacement experience without the need for complex programming.

2. Product Overview

The Xtrasaver OEM Replacement Remote Control is a direct replacement for your original Skyworth TV remote. It features all the essential buttons for navigating your television's functions, including power, volume, channel control, menu access, and input selection.





Figure 2.1: Front view of the Xtrasaver OEM Replacement Remote Control. This image displays the full layout of the remote control, including the power button, number pad, navigation cluster, volume and channel controls, and media playback buttons.

3. Setup

Setting up your new remote control is a simple process that requires no programming or pairing. Follow these steps:

1. **Insert Batteries:** Locate the battery compartment on the back of the remote control. Open the cover.

2. **Battery Type:** Insert two (2) 1.5V AAA alkaline batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
3. **Close Compartment:** Close the battery compartment cover securely.
4. **Ready for Use:** The remote control is now ready to operate your Skyworth TV. No further setup is required.

4. Operating Instructions

Familiarize yourself with the functions of each button on your remote control:

Button	Function
Power (red button with universal power symbol)	Turns the TV on or off.
Picture	Adjusts picture settings or modes.
Sound	Adjusts sound settings or modes.
MTS	Selects Multi-channel Television Sound (MTS) options.
0-9 (Number Buttons)	Directly selects TV channels or enters numerical values.
List	Displays a list of channels or programs.
Info	Displays current program information.
Menu	Accesses the TV's main menu.
Source	Selects input source (HDMI, AV, etc.).
Navigation Arrows (Up, Down, Left, Right)	Navigates through menus and options.
OK	Confirms selections in menus.
Back	Returns to the previous screen or menu.
Home	Accesses the TV's home screen or smart features.
Exit	Exits current menu or application.
Vol +/-	Increases or decreases the volume level.
CH +/-	Changes to the next or previous channel.
Quick	Accesses quick settings or a shortcut menu.
Guide	Displays the electronic program guide (EPG).
Subtitle	Toggles subtitles on or off.
Freeze	Pauses the current video frame.
AD	Activates Audio Description for visually impaired users.
C.C.	Toggles Closed Captions on or off.
Fav	Accesses favorite channels or content.

Button	Function
Media Playback Buttons (Rewind, Play/Pause, Fast Forward, Stop, Previous, Next)	Controls media playback functions (e.g., for USB content or streaming apps).
Color Buttons (R, G, Y, B)	Perform specific functions within menus or applications, often indicated on-screen.

5. Maintenance

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Damage:** Do not drop the remote, expose it to extreme temperatures, or immerse it in liquids.

6. Troubleshooting

If you encounter issues with your remote control, refer to the following common solutions:

- **Remote Not Responding:**
 - Check the batteries. Ensure they are inserted correctly with the correct polarity.
 - Replace old batteries with new 1.5V AAA alkaline batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Confirm the remote is pointed directly at the TV.
- **Some Buttons Not Working:**
 - This remote is an OEM replacement and should work without programming. If specific buttons do not function, ensure your TV model (32E2, 43E2, 43E2B) is listed as compatible.
 - Clean the remote's surface and buttons to remove any debris that might be obstructing button presses.
- **Intermittent Operation:**
 - Weak batteries are often the cause of intermittent operation. Replace them.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the TV's IR sensor.

If the issue persists after trying these steps, please contact customer support.

7. Specifications

Feature	Detail
Brand	Xtrasaver

Feature	Detail
Compatible Devices	Skyworth TV models 32E2, 43E2, 43E2B
Connectivity Technology	Infrared
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Item Weight	2.89 ounces
Package Dimensions	8.07 x 1.97 x 1.1 inches
Special Feature	Ergonomic
Max Number of Supported Devices	1

8. Warranty and Support

This product is an OEM replacement remote control. For any issues or support inquiries, please contact the seller, Xtrasaver, directly through the platform where the purchase was made. Refer to your purchase documentation for specific return and support policies.

Manufacturer: Xtrasaver

Date First Available: October 9, 2020