

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [COSORI](#) /

› [COSORI Vacuum Sealer Food Saver Machine User Manual](#)

## COSORI B08KYM5M3D

# COSORI Vacuum Sealer Food Saver Machine User Manual

Model: B08KYM5M3D

## INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your COSORI Vacuum Sealer Food Saver Machine. Please read all instructions carefully before first use and retain this manual for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use the appliance only for its intended household purpose.
- Do not use outdoors.
- Place the appliance on a stable, dry, and level surface.
- Avoid contact with moving parts.

## PRODUCT OVERVIEW

Familiarize yourself with the components of your COSORI Vacuum Sealer:



*Image: COSORI Vacuum Sealer Food Saver Machine, showing its compact design and control panel.*

- **Lid:** Secures the bag during vacuuming and sealing.
- **Control Panel:** Contains buttons for various functions (Vacuum Seal, Seal Only, Pulse, Moist, Dry,

Canister, Stop).

- **Vacuum Chamber:** Area where air is removed from the bag.
- **Sealing Strip:** Heats to create a strong, airtight seal.
- **Gasket:** Creates a vacuum-tight seal around the vacuum chamber.
- **Accessory Port:** Used for vacuum sealing with external canisters or accessories.
- **Power Cord:** Connects the appliance to an electrical outlet.

## SETUP

1. Unpack the vacuum sealer and remove all packaging materials.
2. Place the appliance on a flat, dry, and stable surface.
3. Ensure the power cord is easily accessible.
4. Plug the power cord into a standard electrical outlet. The indicator lights may flash briefly.

## OPERATING INSTRUCTIONS

### Preparing Bags

- Use only COSORI vacuum sealer bags or other compatible, textured vacuum sealer bags.
- Ensure the bag is clean and dry.
- Leave at least 3 inches (7.6 cm) of space between the food and the top of the bag to allow for proper sealing.

### Vacuum Sealing Dry Food

1. Place the open end of the bag into the vacuum chamber. Ensure the bag lies flat and is free of wrinkles.
2. Close the lid firmly until both side latches click into place.
3. Press the **Dry** button if the food is dry.
4. Press the **Vacuum Seal** button. The machine will automatically remove air and then seal the bag.
5. Once the process is complete, the indicator light will turn off. Press the side latches to open the lid and remove the sealed bag.

### Vacuum Sealing Moist Food

1. Follow steps 1 and 2 from "Vacuum Sealing Dry Food".
2. Press the **Moist** button if the food contains moisture.
3. Press the **Vacuum Seal** button. The machine will automatically remove air and then seal the bag.
4. Once the process is complete, the indicator light will turn off. Press the side latches to open the lid and remove the sealed bag.

### Seal Only Function

Use this function to create a seal without vacuuming, or to create custom-sized bags from a roll.

1. Place the open end of the bag directly over the sealing strip.
2. Close the lid firmly until both side latches click into place.
3. Press the **Seal Only** button. The machine will heat the sealing strip to create a seal.

4. Once the process is complete, the indicator light will turn off. Press the side latches to open the lid and remove the sealed bag.

### Pulse Vacuum Function

This function allows manual control over the vacuum pressure, ideal for delicate foods.

1. Place the open end of the bag into the vacuum chamber.
2. Close the lid firmly until both side latches click into place.
3. Repeatedly press the **Pulse** button to remove air in short bursts. Observe the bag to prevent crushing delicate items.
4. Once the desired vacuum level is reached, press the **Seal Only** button to seal the bag.
5. Once the process is complete, the indicator light will turn off. Press the side latches to open the lid and remove the sealed bag.

### Canister Vacuum Function

Use this function with COSORI vacuum canisters or other compatible accessories.

1. Connect one end of the accessory hose (not included) to the accessory port on the vacuum sealer and the other end to the port on your canister.
2. Close the lid of the vacuum sealer firmly until both side latches click into place.
3. Press the **Canister** button. The machine will automatically remove air from the canister.
4. Once the process is complete, the indicator light will turn off. Remove the accessory hose from both the sealer and the canister.

## MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your vacuum sealer.

- Always unplug the appliance before cleaning.
- Wipe the exterior of the machine with a damp cloth and mild soap. Do not use abrasive cleaners or solvents.
- Clean the vacuum chamber and drip tray regularly, especially after sealing moist foods. Use a soft cloth or sponge.
- Inspect the sealing strip and gaskets for any food debris or damage. Clean them gently if necessary.
- Ensure all parts are completely dry before storing or next use.

## TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not turn on.	Power cord not plugged in; outlet malfunction.	Ensure power cord is securely plugged into a working outlet.

Problem	Possible Cause	Solution
Machine is not vacuuming properly.	Lid not closed properly; bag not positioned correctly; gaskets are dirty or damaged.	Ensure lid is latched securely. Reposition bag so opening is fully within the vacuum chamber. Clean or inspect gaskets for damage.
Bag is not sealing properly.	Sealing strip is dirty or worn; bag material is unsuitable; moisture in sealing area.	Clean the sealing strip. Use COSORI vacuum sealer bags. Ensure the bag opening is dry before sealing.
Air leaks into bag after sealing.	Bag has a puncture; seal is incomplete.	Inspect bag for holes and use a new bag if necessary. Ensure the seal is complete and even.

## SPECIFICATIONS

- **Model:** B08KYM5M3D
- **Power:** 120V~60Hz, 120W
- **Max. Seal Width:** 11.8 inches (30 cm)
- **Vacuum Pressure:** -80kPa
- **Dimensions:** Approximately 14.5 x 6.5 x 3.5 inches (36.8 x 16.5 x 8.9 cm)
- **Weight:** Approximately 3.5 lbs (1.6 kg)

## WARRANTY AND SUPPORT

COSORI provides a standard manufacturer's warranty for this product. For detailed warranty information, product registration, or customer support, please visit the official COSORI website or contact their customer service team. Please have your model number (B08KYM5M3D) and proof of purchase ready when contacting support.