

Severin JG 3521

SEVERIN JG 3521 Programmable Yogurt Maker User Manual

Model: JG 3521 | Brand: Severin

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. This appliance is intended for household use only.

1.1 General Safety

- Do not immerse the appliance in water or any other liquids.
- Keep the appliance out of reach of children.
- Do not operate the appliance if it has been damaged or is not working properly.
- Always unplug the appliance when not in use, before cleaning, or in case of malfunction.

1.2 Electrical Safety

- Ensure the voltage indicated on the rating label matches your mains voltage.
- Do not use the appliance with an external timer or separate remote-control system.
- Do not pull the power cord to disconnect from the outlet.

1.3 Cleaning and Care Safety

- Allow the appliance to cool down completely before cleaning.
- Clean the appliance and its accessories thoroughly after each use.

2. PRODUCT OVERVIEW

The SEVERIN JG 3521 Yogurt Maker is designed for easy preparation of homemade yogurt. It features a compact design and intuitive controls.



Image: The SEVERIN JG 3521 Yogurt Maker, showing the main unit with its transparent lid and seven glass jars filled with yogurt inside.

2.1 Components

- Main Unit with heating element
- Transparent Lid with handle
- 7 Glass Jars (150 ml each) with airtight lids
- Easy-Select Rotary Knob with LED display

SEVERIN

Arrêt automatique
après écoulement du
temps de préparation

Couvercle
transparent
avec poignée



Bouton rotatif
«Easy Select» avec
affichage LED

Garanti sans **BPA**

Image: A diagram highlighting key features of the yogurt maker, including automatic shut-off, transparent lid with handle, Easy-Select rotary knob with LED display, and BPA-free guarantee.

3. SETUP

3.1 Unpacking

1. Carefully remove the yogurt maker and all accessories from the packaging.
2. Dispose of all packaging materials responsibly.

3.2 Initial Cleaning

1. Before first use, wash the glass jars and their lids in warm soapy water. Rinse thoroughly and dry.
2. Wipe the main unit with a damp cloth. Do not immerse the main unit in water.

3.3 Placement

- Place the yogurt maker on a stable, flat, and heat-resistant surface.

- Ensure there is adequate ventilation around the appliance.
- Keep away from direct sunlight and heat sources.

4. OPERATING INSTRUCTIONS

The SEVERIN JG 3521 offers 5 automatic programs and a customizable program for various yogurt types.

**5 programmes automatiques
pour un succès garanti**

**7 pots de yaourts en
verre de 150 ml inclus**



Image: The yogurt maker with text overlays indicating "5 automatic programs for guaranteed success" and "7 x 150 ml glass yogurt jars included".

4.1 Preparing Yogurt

1. Prepare your yogurt mixture (milk and starter culture) according to your recipe.
2. Pour the mixture into the clean glass jars. Do not overfill.
3. Place the jars into the yogurt maker.
4. Cover the yogurt maker with the transparent lid.
5. Plug the appliance into a suitable power outlet.

4.2 Program Selection

Use the Easy-Select rotary knob to choose your desired program:

Program	Yogurt Type	Description
P1	Normal/Greek Yogurt	Standard program for thick, creamy yogurt.
P2	Drinking Yogurt	For thinner, drinkable yogurt.
P3	Soy/Vegan Yogurt	Optimized for plant-based milk alternatives.
P4	Lactose-Free Yogurt	Specific settings for lactose-free preparations.
P5	Coconut Yogurt	Tailored for coconut milk yogurt.
P6	Custom	Allows manual setting of temperature and time.

4.3 Starting and Finishing

- 1. Once the program is selected, the appliance will automatically start the fermentation process.
- 2. The LED display will show the remaining time.
- 3. The appliance will automatically switch off once the program is complete.
- 4. Carefully remove the jars from the yogurt maker.
- 5. Place lids on the jars and refrigerate the yogurt for at least 2-3 hours before serving to allow it to firm up.



Image: A person on a kitchen counter preparing homemade yogurt with various toppings like berries, kiwi, and granola, demonstrating the versatility of the yogurt maker.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and hygienic operation of your yogurt maker.

5.1 Daily Cleaning

1. Unplug the appliance and allow it to cool down completely.
2. Wash the glass jars and lids with warm soapy water or in a dishwasher.
3. Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or scourers.
4. Ensure all parts are completely dry before storing.

5.2 Storage

- Store the yogurt maker in a dry, cool place, away from direct sunlight.
- Keep the power cord neatly coiled.

6. TROUBLESHOOTING

If you encounter issues with your yogurt maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Yogurt is too runny	Insufficient fermentation time or temperature; inactive starter culture; low-fat milk.	Increase fermentation time; use fresh starter culture; use whole milk or add milk powder.
Yogurt is too thick/curdled	Over-fermentation; too high temperature.	Reduce fermentation time; ensure correct program selection.
Appliance does not turn on	Not plugged in; power outage; faulty outlet.	Check power connection; test outlet with another appliance.
Unpleasant odor	Improper cleaning; spoiled ingredients.	Clean all parts thoroughly; use fresh ingredients.

7. SPECIFICATIONS

Feature	Detail
Brand	Severin
Model Number	JG 3521
Color	Black/Silver
Product Dimensions (L x W x H)	25 x 25.3 x 14 cm
Weight	1 Kilogram
Capacity	1050 Milliliters (7 x 150 ml jars)
Power	13 Watts
Voltage	230 Volts


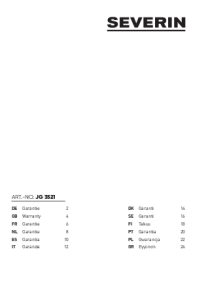


Feature	Detail
Automatic Shut-off	Yes
Material	BPA-free components, Glass jars
Features	Cable winder, Non-slip rubber feet, Overheat protection

8. WARRANTY AND SUPPORT

SEVERIN products are designed for performance, ease of use, and durability.

- This appliance is guaranteed for **2 years** from the date of purchase.
- For support, spare parts, or further information, please visit the official Severin brand store or contact their customer service.
- Official Severin Brand Store: [Visit Store](#)

Related Documents - JG 3521

	<p>SEVERIN JG 3521 Digitaler Joghurtbereiter Bedienungsanleitung</p> <p>Entdecken Sie den SEVERIN JG 3521 Digitalen Joghurtbereiter. Diese Anleitung bietet detaillierte Informationen zur Verwendung, Sicherheit und Rezepten für die Zubereitung von hausgemachtem Joghurt.</p>
	<p>SEVERIN JG 3521 Warranty Information and Terms</p> <p>Comprehensive warranty details for the SEVERIN JG 3521 appliance, outlining coverage, exclusions, claim procedures, and consumer rights.</p>
	<p>SEVERIN FILKA KA 4850/KA 4851 Coffee Maker Safety and Operating Instructions</p> <p>Comprehensive safety instructions, troubleshooting guide, and technical specifications for the SEVERIN FILKA KA 4850 and KA 4851 automatic filter coffee machines. Learn about proper usage, maintenance, and error codes.</p>
	<p>SEVERIN Piccola Fully Automatic Coffee Maker Instruction Manual</p> <p>Comprehensive guide for the SEVERIN Piccola fully automatic coffee maker, covering setup, operation, maintenance, troubleshooting, and tips for optimal coffee enjoyment. Learn to brew perfect coffee and milk specialities.</p>



SEVERIN KV 8090 Fully Automatic Coffee Machine User Manual

Comprehensive user manual for the SEVERIN KV 8090 fully automatic coffee machine. Includes setup, operation, cleaning, maintenance, troubleshooting, and technical specifications.



SEVERIN EZ 7405 / EZ 7406 Ice Cream Maker with Yoghurt Function User Manual

Comprehensive user manual for the SEVERIN EZ 7405 and EZ 7406 ice cream maker with yoghurt function. Learn about setup, operation, safety instructions, cleaning, and troubleshooting for making ice cream and yoghurt.

ART-NR.	BEZUGS-NR.	BEZUGS-NR.
01	01	01
02	02	02
03	03	03
04	04	04
05	05	05
06	06	06
07	07	07
08	08	08
09	09	09
10	10	10
11	11	11
12	12	12
13	13	13
14	14	14
15	15	15
16	16	16
17	17	17
18	18	18
19	19	19
20	20	20
21	21	21
22	22	22
23	23	23
24	24	24
25	25	25
26	26	26
27	27	27
28	28	28
29	29	29
30	30	30
31	31	31
32	32	32
33	33	33
34	34	34
35	35	35
36	36	36
37	37	37
38	38	38
39	39	39
40	40	40
41	41	41
42	42	42
43	43	43
44	44	44
45	45	45
46	46	46
47	47	47
48	48	48
49	49	49
50	50	50
51	51	51
52	52	52
53	53	53
54	54	54
55	55	55
56	56	56
57	57	57
58	58	58
59	59	59
60	60	60
61	61	61
62	62	62
63	63	63
64	64	64
65	65	65
66	66	66
67	67	67
68	68	68
69	69	69
70	70	70
71	71	71
72	72	72
73	73	73
74	74	74
75	75	75
76	76	76
77	77	77
78	78	78
79	79	79
80	80	80
81	81	81
82	82	82
83	83	83
84	84	84
85	85	85
86	86	86
87	87	87
88	88	88
89	89	89
90	90	90
91	91	91
92	92	92
93	93	93
94	94	94
95	95	95
96	96	96
97	97	97
98	98	98
99	99	99
100	100	100