

[Manuals.plus](#) /

› [iClever](#) /

› iClever DK03 Bluetooth Keyboard and Mouse User Manual

iClever DK03 Combo

iClever DK03 Bluetooth Keyboard and Mouse User Manual

Model: DK03 Combo | Brand: iClever

INTRODUCTION

This user manual provides detailed instructions for setting up, operating, and maintaining your iClever DK03 Dual-Mode Wireless Keyboard and Mouse Combo. This combo offers versatile connectivity options, including Bluetooth 4.2 and 2.4G wireless, allowing seamless switching between multiple devices.



Image: The iClever DK03 Dual-Mode Wireless Keyboard and Mouse Combo, showcasing the full-size keyboard, ergonomic mouse, and USB receiver.

PACKAGE CONTENTS

Please verify that all items are present in the package:

- 1x Dual Mode Keyboard
- 1x Dual Mode Mouse

- 1x USB Receiver (for 2.4G wireless connection)
- 1x Keyboard Cover (silicone)
- 1x Charging Cable (USB-C)
- 1x User Manual (this document)

SETUP INSTRUCTIONS

Initial Charging

Before first use, ensure both the keyboard and mouse are fully charged. Connect the provided USB-C charging cable to the charging port on each device and to a USB power source. The charging indicator light will turn off when fully charged.

LONG-LASTING RECHARGEABLE BATTERY

Standby time exceeds 2160 hours.
Intelligent power saving- it will
automatically enter power saving
mode when not in use.



2 Hours
Charging Time





90 Days
Standby Time





Image: The iClever keyboard and mouse connected to a charging cable, illustrating the long-lasting rechargeable battery feature.

Connecting the Keyboard and Mouse

The iClever DK03 combo supports three connection channels: one 2.4G wireless channel via USB receiver and two Bluetooth channels (BT1 and BT2).

2.4G Wireless Connection (USB Receiver)

1. Insert the USB receiver into an available USB port on your computer.
2. Turn on the keyboard and mouse using their respective ON/OFF switches.
3. On the keyboard, press the **2.4G** key. The 2.4G indicator light will illuminate.
4. On the mouse, ensure the switch on the bottom is set to the 2.4G position.
5. The keyboard and mouse should automatically connect to your device.

VERSATILE DUAL -MODE KEYBOARD

Easy to setup and switch
between **3** devices at a time



Image: Close-up of the iClever keyboard showing the 2.4G, BT1, and BT2 channel selection buttons.

Bluetooth Connection (BT1 / BT2)

1. Turn on the keyboard and mouse using their respective ON/OFF switches.
2. On the keyboard, press and hold either the **BT1** or **BT2** key for 3-5 seconds until the corresponding indicator light flashes rapidly. This indicates pairing mode.
3. On the mouse, switch the button on the bottom to the desired Bluetooth channel (BT1 or BT2) and press the pairing button until the indicator light flashes.

4. On your device (computer, tablet, smartphone), go to Bluetooth settings and search for new devices.
5. Select "iClever IC-DK03 KB" for the keyboard and "iClever Mouse" (or similar) for the mouse from the list of available devices.
6. Follow any on-screen prompts to complete the pairing process. The indicator light on the keyboard/mouse will stop flashing and remain solid when successfully connected.



Image: Diagram illustrating the iClever DK03 keyboard and mouse connecting to multiple devices (tablet, laptop, smartphone) via different channels.

Your browser does not support the video tag.

Video: An official product video demonstrating the iClever DK03 Bluetooth Keyboard and Mouse Combo, including setup and usage.

OPERATING INSTRUCTIONS

Switching Between Devices

To switch between connected devices:

- On the keyboard, press the **2.4G**, **BT1**, or **BT2** key to select the desired channel. The corresponding indicator light will illuminate.
- On the mouse, switch the button on the bottom to the corresponding 2.4G, BT1, or BT2 position.

The keyboard and mouse will automatically connect to the device paired with the selected channel.

System Compatibility Selection

The keyboard is compatible with various operating systems. To optimize key functions for your system:

- For Mac/iOS devices, press **Fn + Q**.
- For Windows/Android devices, press **Fn + W**.



Image: Close-up of the iClever keyboard showing the dual-labeled keys for Windows/Android and Mac/iPad compatibility.

Multimedia and Function Keys

The keyboard features a full set of function keys (F1-F12) and multimedia shortcuts. These functions can be accessed directly or by pressing the **Fn** key in combination with the desired function key.

- **Fn + F1-F12:** Access various multimedia and system functions (e.g., brightness, volume, playback controls).
- The keyboard also includes an independent number pad for efficient data entry.



Image: The iClever keyboard highlighting the multimedia function keys and full numeric keypad.

MAINTENANCE

Battery Management

Both the keyboard and mouse are equipped with rechargeable lithium-ion batteries. A full charge provides up to 90 hours of continuous use. To conserve energy, both devices will enter standby mode after a period of inactivity. Simply click the mouse or press any key on the keyboard to wake them up.

- Recharge when the battery indicator light flashes or when performance degrades.
- Use the provided USB-C cable for charging.

- Avoid exposing the devices to extreme temperatures or direct sunlight.

Cleaning

To clean your keyboard and mouse:

- Turn off both devices before cleaning.
- Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution.
- Do not use abrasive cleaners, solvents, or aerosol sprays directly on the devices.
- The included silicone keyboard cover can be removed and washed with mild soap and water. Ensure it is completely dry before placing it back on the keyboard.

TROUBLESHOOTING

Problem	Solution
Keyboard/Mouse not connecting via Bluetooth.	Ensure devices are in pairing mode (indicator light flashing rapidly). Check that Bluetooth is enabled on your device. Remove previous pairings for the iClever combo from your device's Bluetooth settings and try pairing again. Ensure the keyboard and mouse are charged.
2.4G wireless connection issues.	Ensure the USB receiver is securely plugged into a working USB port. Try plugging the receiver into a different USB port. Ensure the keyboard and mouse are set to the 2.4G channel. Ensure the keyboard and mouse are charged.
Keys not responding or delayed response.	Check battery level and recharge if necessary. Ensure the keyboard is within operating range (up to 10 meters for Bluetooth, 15 meters for 2.4G). If the keyboard has entered standby mode, press any key to wake it up. Note that the first few keystrokes might be missed during wake-up.

For more detailed troubleshooting, please refer to the official Troubleshooting Guide (PDF) available[here](#).

SPECIFICATIONS

Feature	Detail
Product Dimensions	16.8 x 4.92 x 0.62 inches (Keyboard)
Item Weight	15.2 ounces
Model Number	DK03 Combo
Connectivity Technology	2.4Ghz Wireless + Bluetooth 1 + Bluetooth 2
Special Features	USB-C Charge, Multi-device support, Laptop typing experience, Multi-OS compatibility
Compatible Devices	PC, Laptop, iMac, Macbook, Tablet, Smartphone, iPhone, iPad

Feature	Detail
Battery Type	Rechargeable Lithium-ion
Battery Life (Continuous Use)	Up to 90 hours

ULTRA THIN AND SPACE SAVING KEYBOARD



Image: Technical drawing showing the ultra-thin design and dimensions of the iClever DK03 keyboard and mouse.

WARRANTY AND SUPPORT

iClever products typically come with a standard manufacturer's warranty. Please refer to the warranty card included in your package or visit the official iClever website for specific warranty terms and conditions.

For technical support, product inquiries, or assistance with any issues, please contact iClever customer service. Contact information can usually be found on the product packaging, the official iClever website, or through your purchase platform.

The manufacturer, Thousandshores Inc, provides 24-hour customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question