

[manuals.plus](#) /› [FINTIE](#) /› [FINTIE Keyboard Case for Samsung Galaxy Tab A7 10.4 Inch \(SM-T500/T503/T505/T507/T509\) Instruction Manual](#)**FINTIE CSAY023**

FINTIE Keyboard Case for Samsung Galaxy Tab A7 10.4 Inch Instruction Manual

Model: CSAY023 | Compatible with Samsung Galaxy Tab A7 10.4 Inch (2022/2020) Models: SM-T500/T503/T505/T507/T509

INTRODUCTION

This manual provides detailed instructions for the FINTIE Keyboard Case, designed for the Samsung Galaxy Tab A7 10.4 Inch. It covers installation, operation, maintenance, and troubleshooting to ensure optimal use of your device with the keyboard case.



Image: The FINTIE Keyboard Case in 'Composition Book' design, shown with a Samsung Galaxy Tab A7 tablet and its detachable Bluetooth keyboard.

COMPATIBILITY

This FINTIE Keyboard Case is specifically designed for the **Samsung Galaxy Tab A7 10.4 Inch (2022/2020 Model)**. It is compatible with the following model numbers:

- SM-T500
- SM-T503
- SM-T505
- SM-T507
- SM-T509

Important: This case is NOT compatible with Samsung Galaxy Tab A8 10.5 Inch (2022) or Samsung Tab A7 Lite 8.7 Inch (2021).



ATTENTION

ONLY Fit Samsung Galaxy Tab A7 10.4 Inch (2022/2020)

(Model: SM-T500/T503/T505/T507/T509)



Samsung Tab A7 10.4 inch (2022/2020)
(SM-T500/T503/T505/T507/T509)

Samsung Tab A8 10.5 inch (2022)
(SM-X200/X205/X207)

Samsung Tab A7 Lite 8.7 inch (2021)
(SM-T220/T225/T227)

Image: A visual chart indicating compatibility with Samsung Galaxy Tab A7 10.4 Inch models (SM-T500/T503/T505/T507/T509) and incompatibility with other models like Tab A8 10.5 Inch and Tab A7 Lite 8.7 Inch.

PACKAGE CONTENTS

Upon opening the package, please verify that all items are present:

- 1 x FINTIE Keyboard Case
- 1 x Wireless Bluetooth Keyboard
- 1 x USB Charging Cable
- 1 x User Manual

SETUP AND INSTALLATION

1. Installing the Tablet into the Case

1. Align your Samsung Galaxy Tab A7 with the hard shell back cover of the case.
2. Gently press the tablet into the case, ensuring all corners and edges are securely fitted. The precise cutouts should align with your tablet's ports, buttons, and camera.

2. Pairing the Bluetooth Keyboard

1. Turn on the keyboard by sliding the 'ON/OFF' switch to the 'ON' position. The power indicator light will illuminate briefly.
2. Press the 'Connect' button on the keyboard. The Bluetooth indicator light will start blinking, indicating it is in pairing mode.
3. On your Samsung Galaxy Tab A7, go to **Settings > Connected devices > Bluetooth**.
4. Turn on Bluetooth and search for available devices.
5. Select "Fintie Bluetooth Keyboard" from the list of available devices.
6. Follow any on-screen prompts to complete the pairing process. The Bluetooth indicator light on the keyboard will stop blinking once successfully paired.

3. Charging the Keyboard

The keyboard is powered by a built-in Lithium Polymer battery. To charge:

1. Connect the provided USB charging cable to the keyboard's charging port.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The 'Charge' indicator light will illuminate during charging and turn off when the battery is full.

A full charge typically takes 2-3 hours and provides approximately 100 hours of continuous use or 100 days of standby time.

Your browser does not support the video tag.

Video: This video demonstrates the installation of the tablet into the FINTIE case, the process of pairing the Bluetooth keyboard with the tablet, and how to use the case in various modes. It also highlights the precise cutouts for ports and speakers.


OPERATING INSTRUCTIONS

1. Using the Keyboard

The wireless Bluetooth keyboard offers a tactile typing experience with scissor-switch keys for comfortable and efficient input. It is magnetically detachable, allowing for flexible use.

SCISSOR SWITCH

Good Resilience and Fine Comfortability.

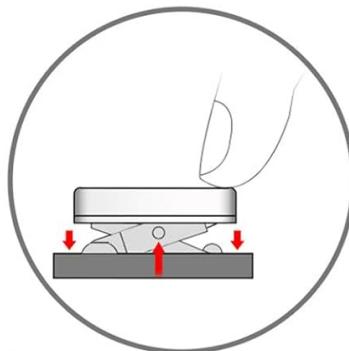

Long life battery



Fast, fluid typing keys



Magnetically Detachable



Thinner & Lighter



Raised edges to protect tablet screen



Durable & Anti-scratch

Image: Close-up of the FINTIE Bluetooth keyboard, highlighting its scissor-switch mechanism, long battery life, fast typing, magnetic detachability, thin and light design, raised edges for screen protection, and durable, anti-scratch properties.

2. Adjusting Viewing Angles

The case features multiple grooves that allow you to prop up your tablet at various angles, providing optimal viewing for different activities such as typing, watching videos, or browsing.



Multiple Viewing

It turns into a convenient stand, gives you a best viewing angle.



Image: The FINTIE Keyboard Case demonstrating three different viewing angles for the tablet, illustrating its versatility as a stand.

3. Different Modes

- **Typing Mode:** Position the tablet in one of the grooves and place the magnetic keyboard in front for a laptop-like experience.
- **Viewing Mode:** Remove the keyboard and adjust the tablet to a comfortable angle for watching videos or presentations.
- **Tablet Mode:** Fold the case completely back or detach the keyboard for handheld tablet use.


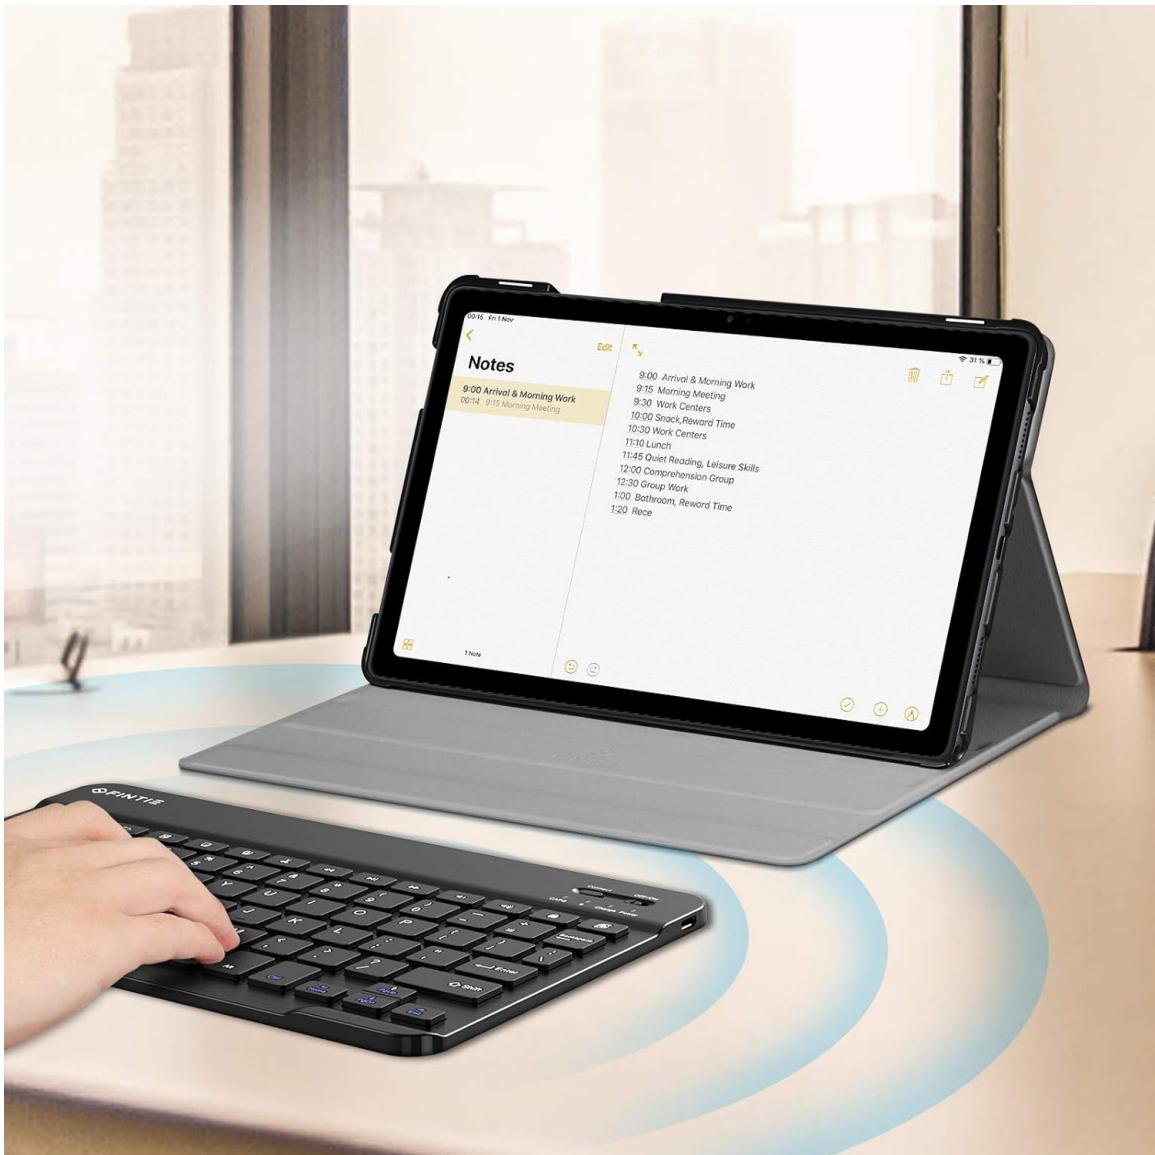


Image: A person using the FINTIE keyboard case with a Samsung Galaxy Tab A7, demonstrating the typing mode with the tablet propped up and the keyboard in use.

Maintenance

To maintain the longevity and appearance of your FINTIE Keyboard Case:

- Wipe the exterior with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- Keep the keyboard free from dust and debris. Use a soft brush or compressed air to clean between keys.
- Avoid exposing the case and keyboard to extreme temperatures or direct sunlight for extended periods.
- Ensure the keyboard is fully charged before long periods of non-use to preserve battery health.

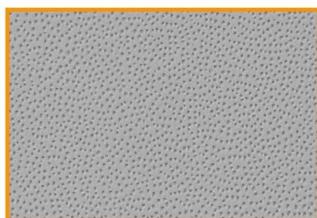

Anti-slip Soft Interior



Premium Durable PU Exterior



Sturdy PC Backshell

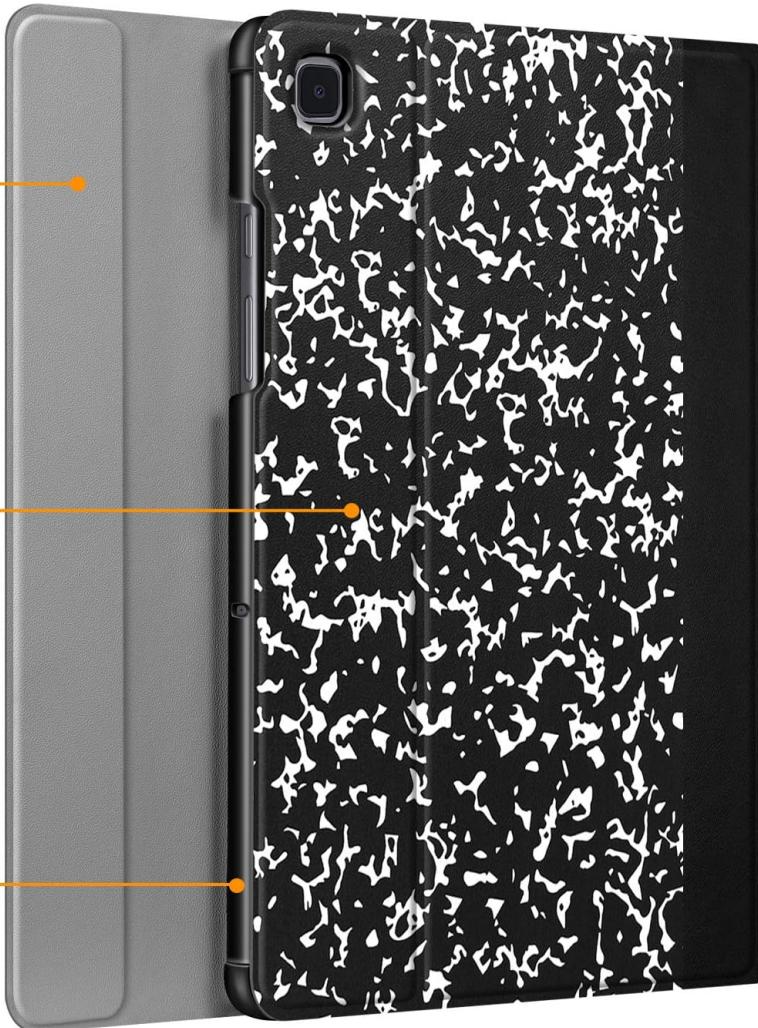


Image: Detailed view of the FINTIE Keyboard Case, showcasing its anti-slip soft interior, premium durable PU exterior, and sturdy PC backshell, highlighting the quality materials used.



High Quality Material & Craftsmanship

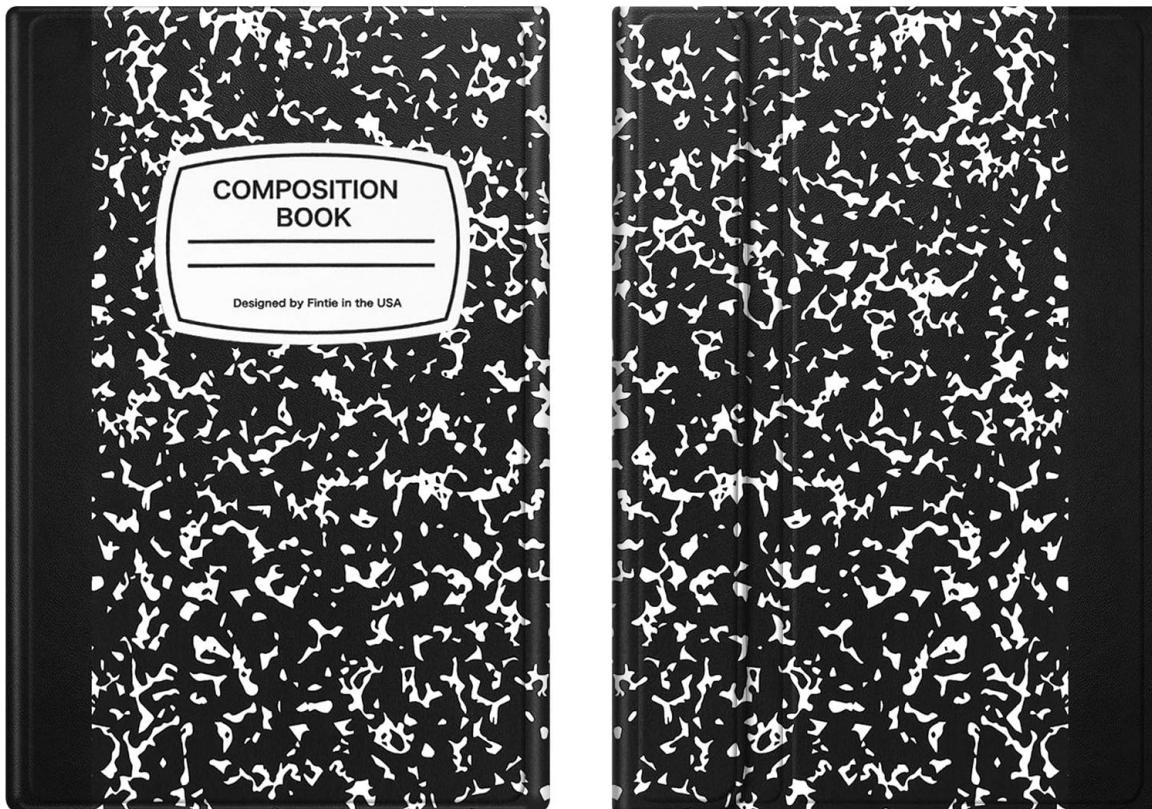


Image: Front and back view of the FINTIE Keyboard Case in the 'Composition Book' design, emphasizing its material quality and craftsmanship.

TROUBLESHOOTING

Keyboard Not Connecting

- Ensure the keyboard is turned on and fully charged.
- Verify that Bluetooth is enabled on your tablet.
- Make sure the keyboard is in pairing mode (Bluetooth indicator blinking).
- Forget the device from your tablet's Bluetooth settings and attempt to re-pair.
- Restart both your tablet and the keyboard.

Keys Not Responding

- Check the keyboard's battery level and charge if necessary.
- Ensure the keyboard is properly connected via Bluetooth.
- Clean any debris that might be lodged under the keys.

SPECIFICATIONS

Feature	Specification
Product Dimensions	11 x 7 x 1.5 inches
Item Weight	1.65 pounds
Model Number	CSAY023
Batteries	1 Lithium Polymer battery (included)
Connectivity Technology	Bluetooth
Keyboard Description	Micro USB (for charging)
Material	Acrylonitrile Butadiene Styrene, Faux Leather, Polycarbonate, Silicone

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the FINTIE official website or the documentation included with your product. FINTIE is committed to providing quality products and customer satisfaction.