

Maxax 2262/2W

Maxax 2262/2W Dusk to Dawn Outdoor Wall Sconce Instruction Manual

Model: 2262/2W

INTRODUCTION

Thank you for choosing the Maxax 2262/2W Dusk to Dawn Outdoor Wall Sconce. This manual provides essential information for the safe installation, operation, and maintenance of your new outdoor lighting fixture. Please read these instructions thoroughly before installation and retain them for future reference.



Image: Two Maxax 2262/2W outdoor wall sconces installed on a building exterior, showcasing their modern design and bubble glass.

IMPORTANT SAFETY INFORMATION

WARNING: Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.

- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC).
- Consult a qualified electrician if you are unsure about the installation process.
- Use only UL/ETL listed wire connectors.
- Do not exceed the recommended wattage for the bulb (Max 40W E26).
- Ensure the fixture is properly grounded.
- Wear safety glasses and gloves during installation.

PACKAGE CONTENTS

Carefully unpack your fixture and check that all parts are included. If any parts are missing or damaged, do not attempt to

assemble or install the product. Contact customer service for assistance.

- Outdoor Wall Sconce Fixture (2 units)
- Mounting Hardware (screws, wire nuts, mounting plate)
- Bubble Glass Shade
- Instruction Manual

Note: E26 bulb (Max 40W) is **NOT** included and must be purchased separately.

PRODUCT SPECIFICATIONS

Brand	Maxax
Model Number	2262/2W
Dimensions (L x W x H)	3.9" x 6.3" x 11"
Material	Metal, Glass
Finish	Matte Black
Light Source Type	Incandescent (E26 base)
Max Wattage	40W (E26 bulb, not included)
Voltage	110 Volts
Special Feature	Dusk to Dawn Sensor, Waterproof
Indoor/Outdoor Usage	Outdoor

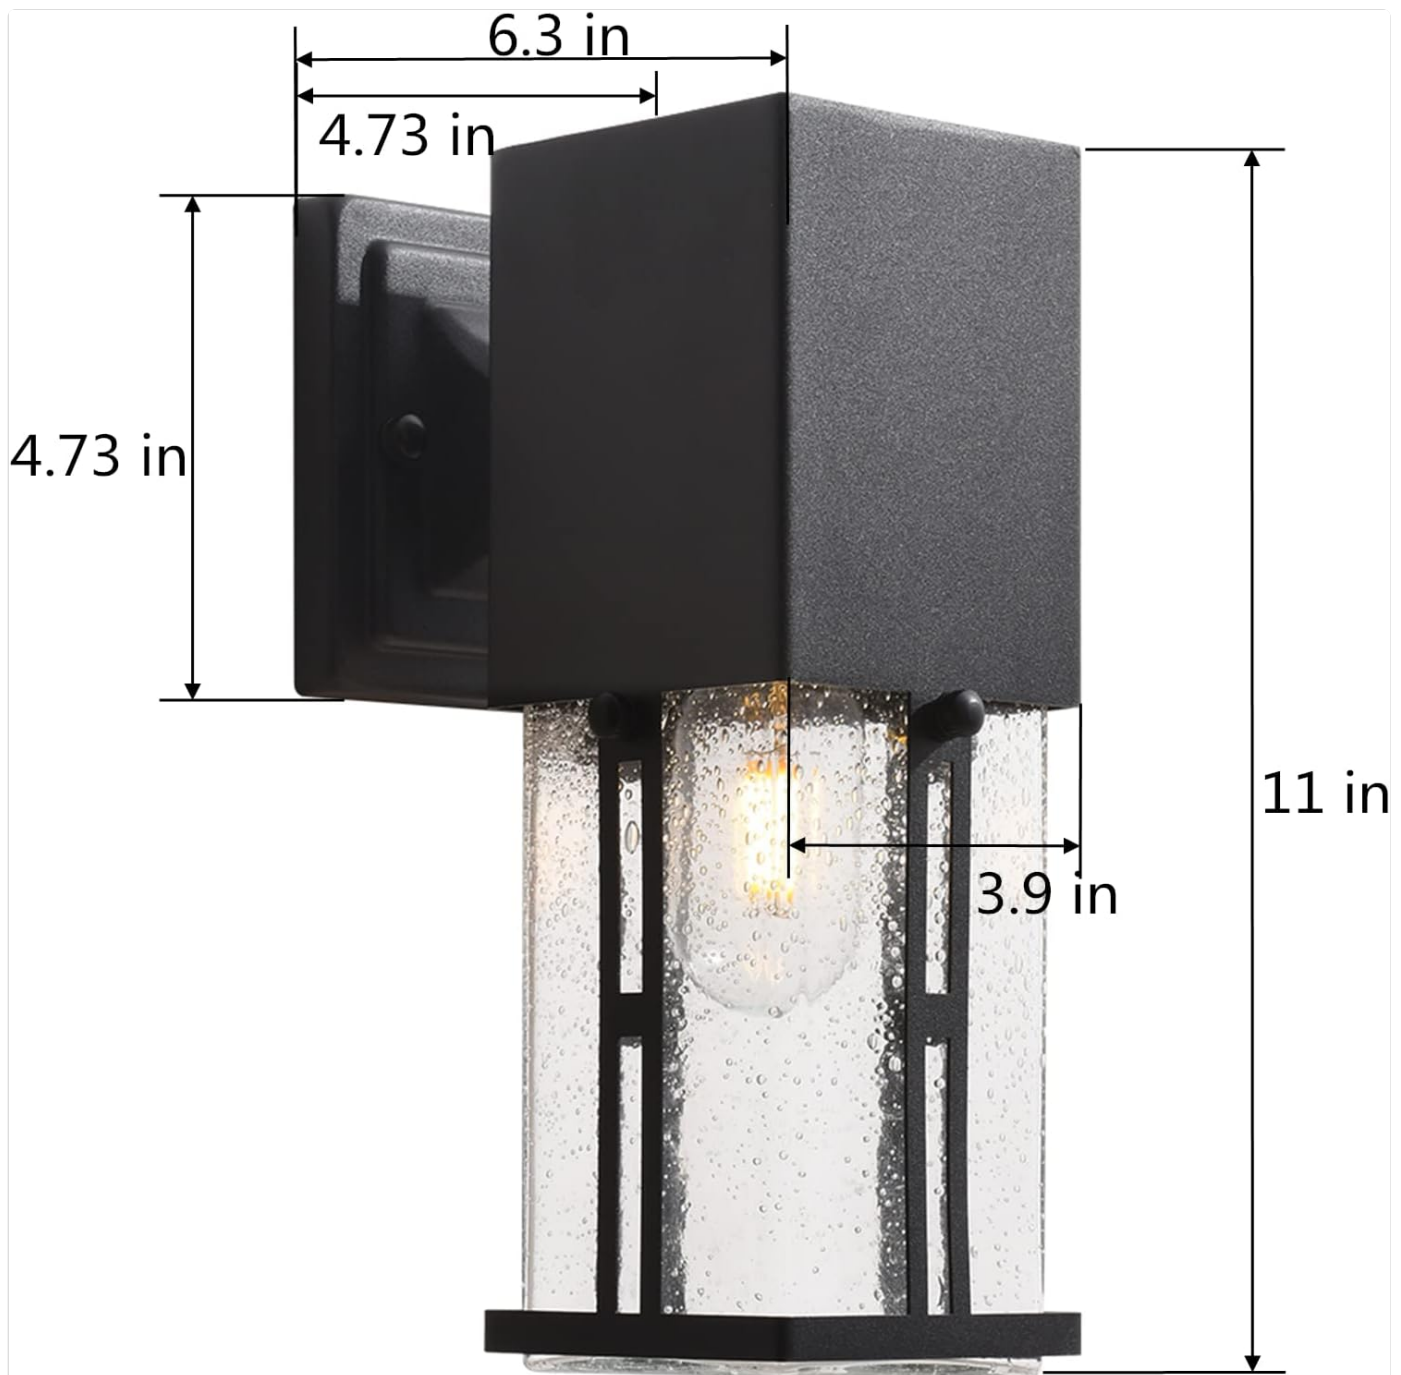 


Image: Detailed dimensions of the Maxax 2262/2W wall sconce, indicating height, width, and depth.

INSTALLATION INSTRUCTIONS

Before You Begin:

- Turn off power at the circuit breaker or fuse box.
- Ensure the mounting surface is clean, dry, and structurally sound.
- Gather necessary tools: screwdriver, wire strippers, electrical tape, safety glasses, gloves.

Step-by-Step Installation:

1. **Prepare Wiring:** Carefully pull the electrical wires from the outlet box.
2. **Attach Mounting Plate:** Secure the mounting plate to the outlet box using the provided screws. Ensure the plate is level and firmly attached.
3. **Make Electrical Connections:**

- Connect the **black** wire from the fixture to the **black** (Live) wire from the outlet box using a wire nut.
 - Connect the **white** wire from the fixture to the **white** (Neutral) wire from the outlet box using a wire nut.
 - Connect the **ground** wire from the fixture to the **ground** wire from the outlet box (or to the green grounding screw on the mounting plate) using a wire nut.
 - Wrap all wire connections with electrical tape for added security.
4. **Mount Fixture:** Carefully tuck all wires into the outlet box. Align the fixture with the mounting plate and secure it with the provided screws.
 5. **Install Bulb:** Insert an E26 base bulb (Max 40W, not included) into the socket.
 6. **Attach Glass Shade:** Secure the bubble glass shade to the fixture according to the design.
 7. **Restore Power:** Turn the power back on at the circuit breaker.



Image: Maxax wall sconce mounted on an exterior wall, demonstrating its placement suitability.

Dusk to Dawn Functionality:

This Maxax outdoor wall sconce is equipped with a built-in high-sensitivity photoelectric sensor, enabling automatic dusk-to-dawn operation.

- **Automatic On:** The light fixture will automatically turn on when the ambient light levels drop at dusk.
- **Automatic Off:** The light fixture will automatically turn off when sufficient natural light is detected at dawn.

Ensure the sensor is not obstructed by objects, eaves, or other light sources (like other bright lights) that could interfere with its proper function. For optimal performance, install the fixture in a location where the sensor can accurately detect natural light levels.



Image: Visual representation of the automatic dusk-to-dawn feature, showing the light off in daylight and on in darkness.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your outdoor wall sconce.

- **Cleaning:** To clean the fixture, ensure the power is off. Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or glass.
- **Glass Care:** The bubble glass shade can be cleaned with a mild glass cleaner. Ensure it is completely dry before restoring power.
- **Bulb Replacement:** Always turn off power before replacing the bulb. Allow the bulb to cool completely before touching. Replace with an E26 base bulb, not exceeding 40W.
- **Inspection:** Periodically check for any loose connections or signs of wear. If any damage is observed, consult a qualified electrician.

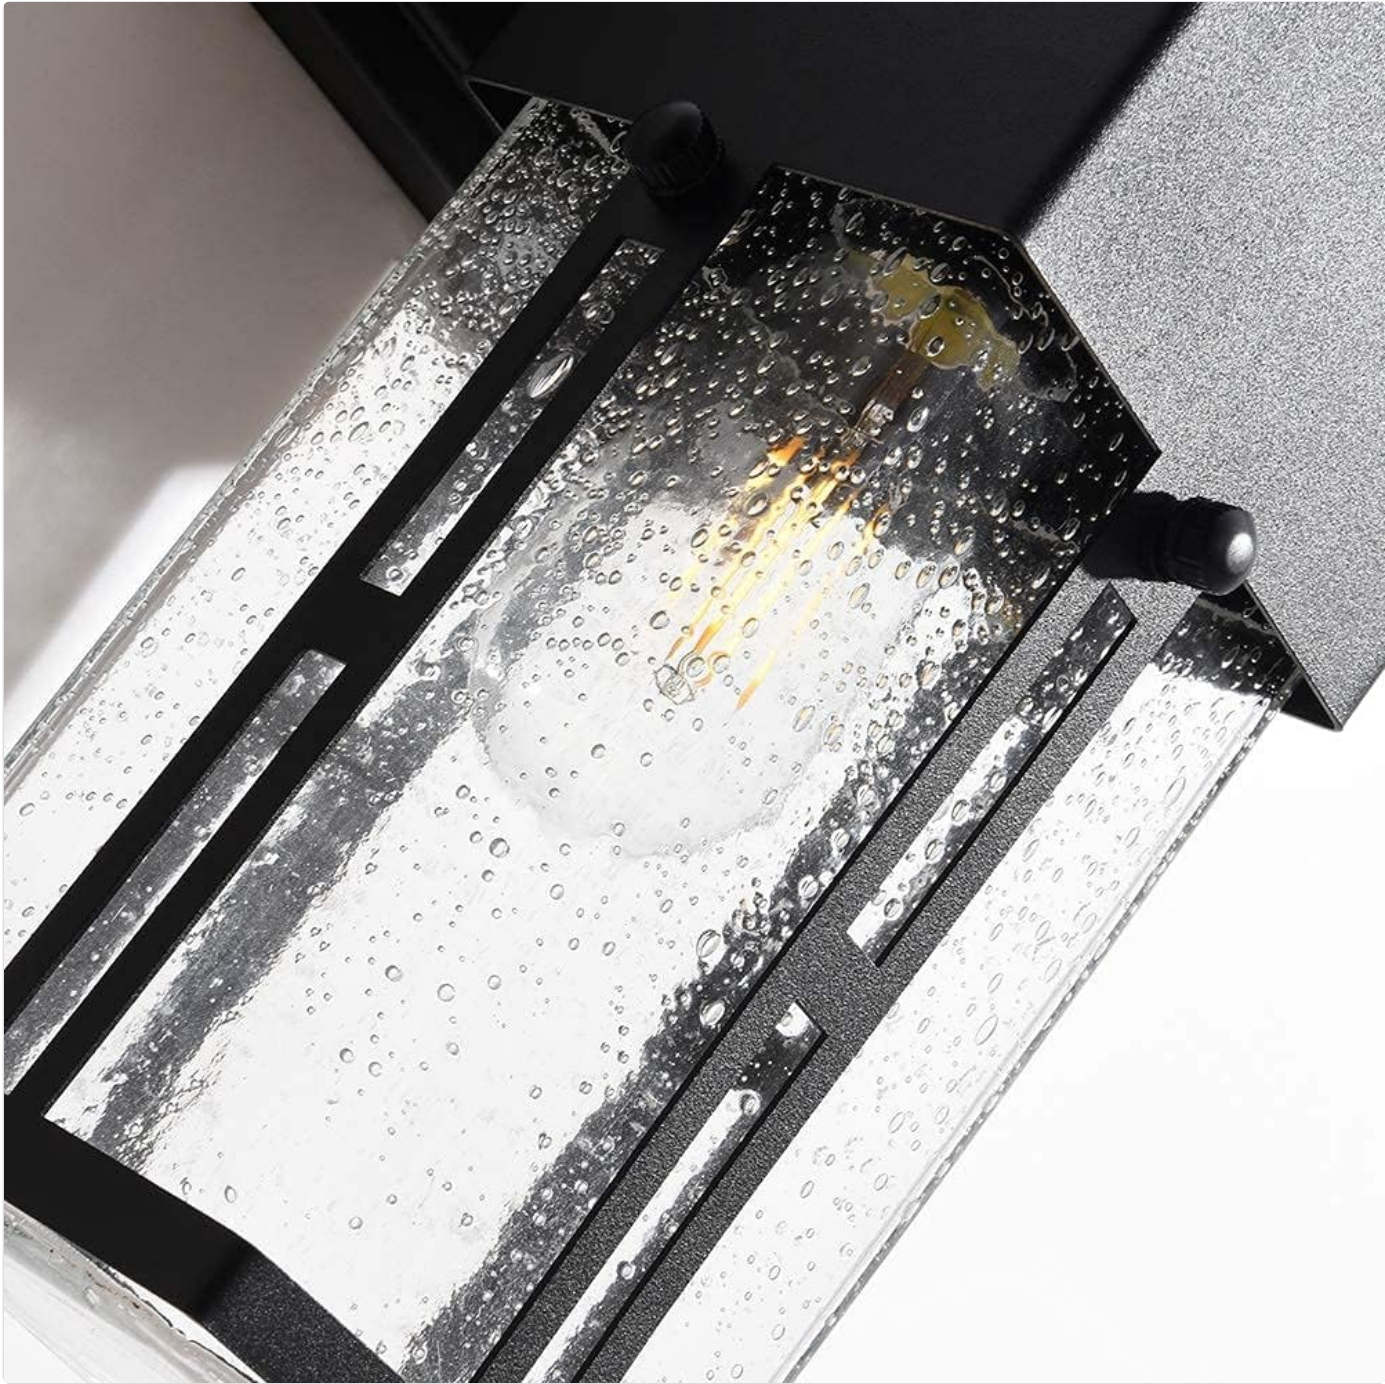 


Image: Close-up of the bubble glass, showing its unique texture.

TROUBLESHOOTING

If you encounter issues with your Maxax outdoor wall sconce, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

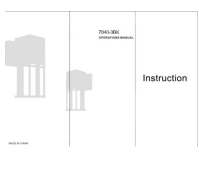
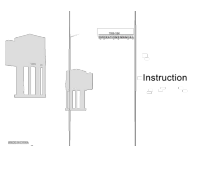
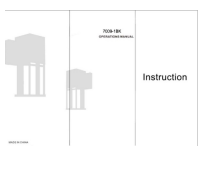
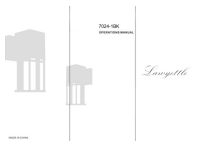
Problem	Possible Cause	Solution
Light does not turn on at night.	No power to the fixture. Bulb is faulty or not installed correctly. Dusk to dawn sensor is obstructed or detecting too much light.	Check circuit breaker/fuse. Replace bulb; ensure it's screwed in tightly. Relocate fixture or clear obstructions from sensor.
Light stays on during the day.	Dusk to dawn sensor is obstructed or not detecting enough light. Sensor is faulty.	Clear obstructions from sensor; ensure it's exposed to natural daylight. Contact customer support if sensor is suspected to be faulty.
Light flickers.	Loose wire connection. Faulty bulb.	Turn off power and check all wire connections. Replace bulb.



WARRANTY AND CUSTOMER SUPPORT

Maxax products are designed for quality and durability. For warranty information or technical support, please refer to the product packaging or contact your retailer. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the [Maxax Store on Amazon](#).

Related Documents - 2262/2W

	Maxax 7040-3BK Dusk to Dawn Outdoor Wall Light Installation and Operations Manual Comprehensive installation and operations manual for the Maxax 7040-3BK outdoor wall light, featuring an elegant design and an intelligent dusk-to-dawn sensor. Includes detailed placement guides, assembly steps, parts list, wiring diagram, warnings, and troubleshooting tips.
	Maxax 7059-1BK Outdoor Wall Light Operations Manual and Installation Guide Detailed operations manual and installation guide for the Maxax 7059-1BK outdoor wall light, featuring dusk-to-dawn sensor, motion detection, and adjustable brightness. Includes placement tips, troubleshooting, and specifications.
	Maxax 7009-1BK Outdoor Wall Light Operations Manual and Installation Guide Comprehensive operations manual and installation guide for the Maxax 7009-1BK outdoor wall light, featuring a dusk-to-dawn sensor. Includes placement tips, assembly instructions, parts list, and troubleshooting.
	Maxax 7024-1BK Montpelier Outdoor Wall Light - Operations Manual Comprehensive operations and installation manual for the Maxax 7024-1BK Montpelier outdoor wall light, featuring a dusk-to-dawn sensor and integrated LED.

 A photograph of the Maxax 7078-1BK Outdoor Wall Lamp, which is a modern, rectangular fixture with a dark finish, mounted on a wall.	<p>Maxax 7078-1BK Outdoor Wall Lamp Operations Manual and Installation Guide</p> <p>Operations manual and installation guide for the Maxax 7078-1BK Outdoor Wall Lamp. Includes placement advice, assembly instructions, wiring diagram, parts list, and remote control operation.</p>
 A photograph of the Maxax Collision 1-Light Gold/Wood Island Pendant, which is a modern, cylindrical fixture with a gold and wood finish, hanging from a ceiling.	<p>Maxax Collision 1-Light Gold/Wood Island Pendant Assembly Instructions</p> <p>Detailed assembly instructions for the Maxax Collision 1-Light Gold/Wood Island Pendant (Model 9001-1WD). Includes parts list, step-by-step guidance, and safety information for proper installation. UPC: 726954078055.</p>