

NKF SE-R0418

NKF SE-R0418 Blu-Ray DVD Remote Control User Manual

For Toshiba BDX3300KU, BDX530, BDX2300KU, BDX3300, and compatible models

1. INTRODUCTION

This manual provides instructions for the NKF SE-R0418 replacement remote control. This remote is designed to operate various Toshiba Blu-Ray DVD player models without requiring any programming. Simply install batteries to begin use.

2. PACKAGE CONTENTS

- 1x NKF SE-R0418 Remote Control

Note: Batteries and a user manual are not included in the package. This document serves as the user manual.

3. SETUP

3.1 Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) 1.5V AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Back of the remote control showing the battery compartment.

The remote control does not require any programming or pairing. Once batteries are installed, it is ready for use with compatible Toshiba Blu-Ray DVD players.

4. OPERATING INSTRUCTIONS

4.1 Remote Control Layout

The NKF SE-R0418 remote control features a standard layout for Blu-Ray DVD player functions. Refer to the image below for button identification.



Image: Front view of the NKF SE-R0418 remote control.

4.2 Basic Functions

- **POWER:** Turns the Blu-Ray DVD player on or off.
- **OPEN/CLOSE:** Opens or closes the disc tray.

- **Number Pad (0-9):** Used for direct track selection or inputting numbers.
- **GOTO:** Navigates to a specific time or chapter.
- **TOP MENU:** Accesses the main menu of a disc.
- **POP UP/MENU:** Displays the pop-up menu during playback.
- **PLAY, PAUSE, STOP, REV, FWD, SKIP:** Standard media playback controls.
- **Navigation (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **RETURN:** Goes back to the previous menu or screen.
- **NETFLIX:** Direct access button for the Netflix application (if supported by the player).
- **PROGRAM, DIGEST, ZOOM, BOOKMARK, SUB, AUDIO, 2nd AUDIO, ANGLE, A-B, REPEAT, DISPLAY, CONNECTED:** Advanced function buttons for specific disc features.

5. COMPATIBLE MODELS

This remote control is compatible with the following Toshiba Blu-Ray DVD player models:

- BDX3300KU
- BDX530
- BDX2300KU
- BDX3300
- BDX5300
- BDX5300KU
- SD-5300
- SD5300
- BDK23
- BDK23KU
- BDK33
- BDK33KU

6. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new 1.5V AAA batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage.

7. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are installed correctly with the correct polarity.

- Replace old batteries with new 1.5V AAA batteries.
- Ensure there are no obstructions between the remote control and the Blu-Ray DVD player's infrared sensor.
- Confirm the remote is pointed directly at the player.
- **Specific functions not working:**
 - Verify that the function is supported by your specific Blu-Ray DVD player model.
 - Some functions may only be available during certain playback modes or disc menus.

8. SPECIFICATIONS

- **Model:** SE-R0418
- **Power Supply:** 2 x 1.5V AAA Batteries (not included)
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** Toshiba Blu-Ray DVD Players
- **Max Number of Supported Devices:** 1
- **Product Dimensions:** 7.87 x 1.97 x 0.79 inches (approximately)
- **Item Weight:** 3.2 ounces (without batteries)

9. IMPORTANT NOTES

This remote control is a replacement unit and may not include all features or exact button placements of an original equipment manufacturer (OEM) remote. Its primary function is to provide essential control over compatible Toshiba Blu-Ray DVD players.

© 2023 NKF. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question