

nooa G-9932

nooa Cordless Hair Clippers User Manual

Model: G-9932

1. INTRODUCTION

Thank you for choosing the nooa Cordless Hair Clippers. This professional haircut kit is designed for smooth and fast trimming, offering versatility and convenience for personal grooming. This manual provides essential information for the safe and effective use, maintenance, and care of your new hair clipper.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Hair Clipper
- 4 x Plastic Guide Combs (various lengths)
- 1 x Hair Comb
- 1 x Hair Cutting Scissor
- 1 x Cleaning Brush
- 1 x Cleaning Sponge
- 1 x Protective Cap
- 1 x USB Charging Cable
- 1 x Storage Bag



Image 2.1: The nooa Cordless Hair Clipper shown with all its accompanying accessories, including guide combs, scissors, cleaning tools, charging cable, and storage bag.

3. IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all safety instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always turn off the hair clipper before attempting to remove or attach the cutter head.
- Do not wash the hair clipper with water while it is connected to the charging cable.
- Ensure the charging port is completely dry and free of water before connecting the USB charging cable.
- When the LED indicator displays a battery power level below 10%, it is recommended to charge the device promptly.
- Keep this product out of reach of children to prevent accidents.

4. PRODUCT OVERVIEW

The nooa Cordless Hair Clipper features a self-sharpening ceramic titanium alloy blade for precise cutting. It includes an adjustable trimming length setting directly on the clipper body and supports additional guide

combs for extended length options. An LED display provides battery status and operational mode information.

200%SUPERIOR SHARP

Self-sharpening Precision Blades

High-quality ceramic cutter head, not easy to corrode and conduct heat



Image 4.1: A detailed view of the clipper's precision blades, highlighting the ceramic cutter and titanium alloy components, along with the adjustable length dial.

POWERFUL MOTOR, BUT QUIET



Image 4.2: The hair clipper is depicted next to a sleeping infant, emphasizing its low noise operation (below 60 decibels) during use.

5. CHARGING THE DEVICE

The hair clipper is equipped with a rechargeable 2500mAh lithium battery. To charge the device:

1. Ensure the clipper is turned off.
2. Connect the provided USB charging cable to the charging port on the bottom of the clipper.
3. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port.
4. The LED indicator will display the charging status and current battery percentage.

A full charge typically takes approximately 3 hours and provides up to 200 minutes of cordless operation. It is recommended to use the provided USB charging cable for optimal performance.

HIGH-PERFORMANCE POWER HAIR CLIPPER

It can be used with corded or cordless
Fast charge + long use



Image 5.1: The hair clipper is shown connected to its USB charging cable, with the LED display indicating battery charge status and operational modes.

6. SETUP AND LENGTH ADJUSTMENT

The clipper offers precise length adjustment through its integrated dial and additional guide combs.

6.1 Adjusting Cutting Length

The clipper itself has 5 accurate trimming length settings: 0.8mm, 1.2mm, 1.6mm, 2.0mm, and 2.5mm. Rotate the dial on the clipper body to select your desired length.

6.2 Attaching Guide Combs

For longer cutting lengths, attach one of the four plastic guide combs. These combs provide additional trimming lengths, extending the range from 0.8mm up to 14.5mm when combined with the clipper's internal settings.

1. Ensure the clipper is turned off.
2. Select the desired guide comb.

3. Align the comb with the clipper head and push it firmly until it clicks into place.
4. To remove, gently pull the comb away from the clipper head.



Image 6.1: The hair clipper's adjustable length dial is shown in detail, alongside the four interchangeable guide combs (3mm, 6mm, 9mm, 12mm) that offer a total of 20 length options.

7. OPERATING THE HAIR CLIPPER

The nooa hair clipper is designed for ease of use, suitable for both beginners and experienced users.

1. **Power On/Off:** Press the power button to turn the clipper on or off.
2. **Speed Settings:** The clipper offers two speed settings. The first speed setting operates at less than 60 decibels, suitable for general use or sensitive areas. The second speed setting provides more power for thicker or coarser hair, or for faster trimming.
3. **Trimming:** Hold the clipper firmly and move it against the direction of hair growth for an even cut. Use the included hair comb to guide and lift hair as needed.



Image 7.1: A collage demonstrating the versatility of the nooa hair clipper, showing its use for beard trimming, children's haircuts, and professional-style fades.

8. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your hair clipper.

8.1 Waterproof Design

The nooa hair clipper is waterproof, allowing for easy cleaning under running water. However, ensure the charging port is dry before charging.

8.2 Cleaning the Blades

1. Turn off the clipper.
2. Gently push the blade head to detach it from the clipper body.
3. Rinse the detached blade head under running water to remove hair clippings.
4. Use the provided cleaning brush to remove any stubborn hair or debris.
5. Allow the blade head to air dry completely before reattaching it to the clipper.

6. Periodically apply a small amount of clipper oil (not included) to the blades for smooth operation and to prevent rust.



Disassemble the blade head to rinse under running water.



Image 8.1: A three-step visual guide demonstrating how to remove the blade head from the clipper and rinse it under running water for cleaning.

9. TROUBLESHOOTING

If you encounter any issues with your nooa hair clipper, please refer to the following common solutions:

Problem	Possible Cause	Solution
Clipper does not turn on or has low power.	Battery is depleted.	Charge the clipper fully (approximately 3 hours). Check the LED display for battery level.
Clipper is not cutting effectively or pulls hair.	Blades are dull, dirty, or not properly aligned.	Clean the blades thoroughly. Ensure no hair is trapped. Apply clipper oil. If blades are dull, consider professional sharpening or replacement.

Problem	Possible Cause	Solution
Clipper makes unusual noise.	Blades may be dry or misaligned.	Turn off the clipper, remove and clean the blades, then reattach them securely. Apply clipper oil. If the issue persists, contact customer support.

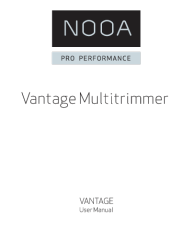
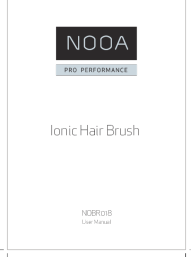


10. SPECIFICATIONS

Feature	Detail
Brand	nooa
Model Number	G-9932
Blade Material	Ceramic, Titanium Alloy
Power Source	Battery Powered (Cordless/Corded use)
Battery Type	1 Lithium Polymer battery (included)
Battery Capacity	2500mAh
Charging Time	Approx. 3 hours
Run Time	Approx. 200 minutes
Waterproof	Yes
Noise Level	Less than 60 decibels (at first speed setting)
Product Dimensions	22 x 10 x 5.5 cm
Product Weight	442 g
UPC	791711043317

11. WARRANTY AND SUPPORT

The nooa Cordless Hair Clippers come with a 12-month quality warranty from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

For technical support, warranty service, or any questions regarding your product, please contact nooa customer service through the retailer where the product was purchased.

 <p>NOOA PRO PERFORMANCE</p> <p>Vantage Multitrimmer</p> <p>VANTAGE User Manual</p>	<p>NOOA Vantage Multitrimmer User Manual</p> <p>Comprehensive user manual for the NOOA Vantage Multitrimmer, detailing features, safety instructions, charging, attachment usage, and maintenance for optimal performance.</p>
 <p>NOOA PRO PERFORMANCE</p> <p>Ionic Hair Brush</p> <p>NOBR018 User Manual</p>	<p>NOOA NOBR018 Ionic Hair Brush User Manual - Features, Safety, and Operation</p> <p>Comprehensive user manual for the NOOA NOBR018 Ionic Hair Brush. Learn about product features, safety warnings, battery handling, operation, maintenance, and specifications.</p>
 <p>NOOA PRO PERFORMANCE</p> <p>BODY ANALYSER SCALE</p> <p>Model NO602</p>	<p>NOOA Body Analyzer Scale NO602 Instruction Manual</p> <p>Instruction manual for the NOOA Body Analyzer Scale Model NO602, detailing features, usage, maintenance, and troubleshooting for body composition analysis.</p>
 <p>NOOA PRO PERFORMANCE</p> <p>BODY ANALYSER SCALE</p> <p>Model NO601H</p>	<p>NOOA Body Analyzer Scale Instruction Manual</p> <p>Comprehensive guide to the NOOA Body Analyzer Scale (Model NO601H), detailing its features for measuring body fat, water, muscle, bone, and estimating calorie needs, along with usage instructions and maintenance tips.</p>