

[Manuals.plus](#) /

› [NKF](#) /

› NKF AA59-00559A Replacement Remote Control Instruction Manual

NKF AA59-00559A

Instruction Manual

NKF AA59-00559A REPLACEMENT REMOTE CONTROL FOR SAMSUNG TV

Introduction



Image: The NKF AA59-00559A Replacement Remote Control.

This manual provides essential information for the proper setup, operation, and maintenance of your NKF AA59-00559A Replacement Remote Control. This remote is designed as a direct replacement for various Samsung TV models, offering full functionality without the need for complex programming.

Setup

The NKF AA59-00559A replacement remote control requires no programming or pairing. Simply install the batteries to begin operation.

1. **Battery Installation:** Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or outwards to open it.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery cover by sliding it back into place until it clicks securely.







Image: Rear view of the remote control with the battery cover removed, illustrating the battery insertion process.

Once batteries are installed, the remote is ready for immediate use with compatible Samsung TV models.

Operating Instructions

This replacement remote control functions identically to the original Samsung remote. Point the remote directly at your television's infrared receiver for optimal performance.





Image: Front view of the remote control, displaying the layout of all buttons.

Key Functions:

- **Power Button (●):** Turns the TV on or off.
- **Source Button:** Selects input sources (HDMI, AV, Component, etc.).
- **Number Pad (0-9):** Direct channel selection.
- **Volume Up/Down (+/- VOL):** Adjusts the volume level.
- **Channel Up/Down (CH ▲ / ▼):** Changes TV channels.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Menu Button:** Accesses the TV's main menu.
- **Tools Button:** Provides quick access to common TV functions and settings.
- **Info Button:** Displays information about the current program or input.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Navigates through menus and selects options.
- **Return Button:** Returns to the previous screen or menu.
- **Exit Button:** Exits the current menu or function.
- **Color Buttons (A, B, C, D):** Used for specific functions within certain applications or menus, as indicated on the TV screen.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback.

Compatible TV Models

This remote control is compatible with a wide range of Samsung TV models, including but not limited to:

- UN55ES6580F, UN60ES6500F, UN60ES6500FXZA, PN60E6500EFXZA
- UN40ES6500F, UN40ES6500FXZA, UN65ES6500, UN65ES6500F, UN65ES6500FXZA
- UN32ES6500, UN32ES6500F, UN32ES6500FXZA, UN40ES6500, UN40ES6550, UN40ES6580
- UN46ES6500, UN46ES6550, UN46ES6580, UN55ES6500, UN55ES6550, UN55ES6580
- UN60ES6500, UN50ES6500, UN50ES6580

- PN51E6500EF, PN60E6500EF, PN51E6500, PN60E6500
- PN51E7000FF, PN60E7000FF, PN64E7000FF, PN51E7000, PN60E7000, PN64E7000
- UN55ES6500F, UN55ES6500FXZA

If your Samsung TV model is not listed, please refer to your TV's original manual or contact customer support to confirm compatibility.

Maintenance

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new alkaline batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

Troubleshooting

If you experience issues with your remote control, try the following troubleshooting steps:

- 1. Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with new ones. Weak or dead batteries are a common cause of remote control issues.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Confirm you are pointing the remote directly at the TV.
- 2. Limited Range:**
 - Replace the batteries. Low battery power can reduce the remote's effective range.
 - Ensure the TV's infrared sensor is clean and not obstructed.
- 3. Specific Buttons Not Working:**
 - This is often an indication of low batteries. Try replacing them.
 - Ensure the remote is compatible with your specific TV model.

If the problem persists after attempting these steps, please contact customer support for further assistance.

Specifications

Model:	AA59-00559A
Brand:	NKF
Connectivity Technology:	Infrared (IR)
Compatible Devices:	Samsung Televisions
Power Source:	2 x AAA Batteries (not included)

Product Dimensions:	8.66 x 1.97 x 0.79 inches (22 x 5 x 2 cm)
Item Weight:	3.2 ounces (90.7 grams)
Special Feature:	No Programming Required

Warranty and Support

While specific warranty details are not provided in this manual, NKF aims to provide reliable products. If you encounter any issues or have questions regarding your remote control, please contact the seller or NKF customer support directly. For support, please refer to the contact information provided at the point of purchase or visit the [NKF Brand Store on Amazon](#).

When contacting support, please have your product model (AA59-00559A) and details of your issue ready.

© 2024 NKF. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question