

[Manuals.plus](#) /

› [CALYPSO](#) /

› CALYPSO K5801/4 Digital Quartz Watch User Manual

CALYPSO K5801/4

CALYPSO K5801/4 Digital Quartz Watch User Manual

Your guide to understanding and operating your CALYPSO K5801/4 digital watch.

1. INTRODUCTION

Thank you for choosing the CALYPSO K5801/4 Digital Quartz Watch. This manual provides detailed instructions for the proper setup, operation, and maintenance of your watch. Please read this manual thoroughly to ensure optimal performance and longevity of your device.

The CALYPSO K5801/4 is a versatile digital watch designed for daily use, featuring multiple functions and a durable construction.

2. PRODUCT OVERVIEW

The CALYPSO K5801/4 digital watch combines functionality with a robust design. Key features include:

- Water resistance up to 100 meters (10 ATM).
- Durable polycarbonate round case.
- Comfortable and water-resistant plastic strap.
- Integrated stopwatch function.
- Countdown timer function.
- Daily alarm function.
- Backlight for low-light visibility.



Image 1: Front view of the CALYPSO K5801/4 Digital Quartz Watch, displaying the digital time, day of the week, and compass markings on the bezel.

3. SETUP

3.1 Initial Power On

Your watch is typically ready for use upon purchase. If the display is blank, it may indicate a low battery or a protective film. Remove any protective film from the screen. If the issue persists, refer to the Troubleshooting section.

3.2 Setting Time and Date

1. **Enter Time Setting Mode:** Press and hold the **MODE** button (usually bottom-left) until the seconds begin to flash. This indicates you are in time setting mode.
2. **Select Item to Adjust:** Press the **LIGHT** button (usually top-left) to cycle through the adjustable items: seconds, hour, minute, year, month, day.
3. **Adjust Value:** Use the **ST/STP** button (usually top-right) to increase the selected value. Hold the button to rapidly advance the value.

4. **Confirm and Exit:** Once all settings are correct, press the **MODE** button again to exit the time setting mode.

4. OPERATING INSTRUCTIONS

4.1 Mode Navigation

Press the **MODE** button to cycle through the different functions of the watch. The typical sequence is: Time Display → Stopwatch → Timer → Alarm.

4.2 Stopwatch Function

1. **Enter Stopwatch Mode:** Press the **MODE** button until "ST" or "STOPWATCH" appears on the display.
2. **Start/Stop:** Press the **ST/STP** button to start the stopwatch. Press it again to stop.
3. **Reset:** While the stopwatch is stopped, press the **LIGHT** button to reset the stopwatch to zero.

4.3 Timer Function

1. **Enter Timer Mode:** Press the **MODE** button until "TR" or "TIMER" appears on the display.
2. **Set Timer:** In Timer mode, press and hold the **LIGHT** button until the timer digits flash. Use the **ST/STP** button to adjust the hours, minutes, and seconds. Press **LIGHT** to move between hours, minutes, and seconds.
3. **Start/Stop Timer:** Press the **ST/STP** button to start the countdown. Press again to pause/resume.
4. **Reset Timer:** While the timer is stopped, press the **LIGHT** button to reset it to the preset time.

4.4 Alarm Function

1. **Enter Alarm Mode:** Press the **MODE** button until "AL" or "ALARM" appears on the display.
2. **Set Alarm Time:** In Alarm mode, press and hold the **LIGHT** button until the alarm hour digits flash. Use the **ST/STP** button to adjust the hour and minute. Press **LIGHT** to switch between hour and minute.
3. **Activate/Deactivate Alarm:** Press the **ST/STP** button (while not in setting mode) to toggle the alarm ON/OFF. An alarm icon will appear/disappear on the display.
4. **Stop Alarm Sound:** When the alarm sounds, press any button to silence it.

4.5 Light Function

Press the **LIGHT** button (usually top-left) to illuminate the display for a few seconds, allowing visibility in dark conditions.

5. MAINTENANCE

5.1 Water Resistance

Your CALYPSO K5801/4 watch is water-resistant up to 100 meters (10 ATM). This means it is suitable for swimming, snorkeling, and showering. However, it is not recommended for scuba diving. Do not operate buttons underwater, as this can compromise the water seal.

5.2 Cleaning

To clean your watch, wipe it with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, followed by rinsing with clean water and drying thoroughly. Avoid using harsh chemicals or abrasive materials, as these can

damage the case and strap.

5.3 Battery Replacement

When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should be performed by a qualified watch technician to ensure the water resistance seal is properly maintained.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery (recommended by a professional).
Buttons are unresponsive.	Watch may be in a locked mode or internal malfunction.	Try a soft reset (if applicable, consult a professional). Avoid pressing buttons underwater.
Time is incorrect.	Time not set correctly or accidental adjustment.	Refer to Section 3.2 "Setting Time and Date" to re-adjust.
Water inside the watch.	Water resistance compromised (e.g., buttons pressed underwater, seal damage).	Immediately take the watch to a qualified technician for inspection and repair. Do not attempt to dry it yourself.

7. SPECIFICATIONS

Feature	Detail
Model Number	K5801/4
Brand	CALYPSO
Movement	Digital Quartz
Case Material	Polycarbonate
Strap Material	Plastic
Water Resistance	10 ATM (100 meters)
Functions	Time, Date, Day, Stopwatch, Timer, Alarm, Backlight
Dimensions (L x W x H)	20 x 20 x 20 cm (approximate, based on product data)
Weight	65 grams

8. WARRANTY AND SUPPORT

CALYPSO watches are manufactured to high-quality standards. For specific warranty information, please refer to the warranty card included with your purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

For further assistance or technical support, please contact the authorized CALYPSO service center in your region.

© 2024 CALYPSO. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question