

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Skechers](#) /

› [Skechers Men's Digital Watch and Bracelet Set Instruction Manual \(Model SR9053\)](#)

Skechers SR9053

Skechers Men's Digital Watch and Bracelet Set Instruction Manual

Model: **SR9053**

INTRODUCTION

Thank you for choosing the Skechers Men's Digital Watch and Bracelet Set. This versatile set combines a functional digital watch with stylish bracelet accessories, designed for everyday wear. This manual provides essential information for the proper setup, operation, maintenance, and care of your new watch and bracelets.

The watch features a durable gunmetal and black metal case, a comfortable black silicone band, and a digital movement with a negative display and chronograph function. It is water resistant up to 30 meters (100 feet).

PACKAGE CONTENTS

- Skechers Men's Digital Watch (Model SR9053)
- Three bonus bracelet accessories
- Instruction Manual (this document)

MEN'S CASE SIZE GUIDE

Wrists come in all sizes. Use this handy guide to find the right watch for you!

Print on 8.5 x 11 paper at 100% scale.

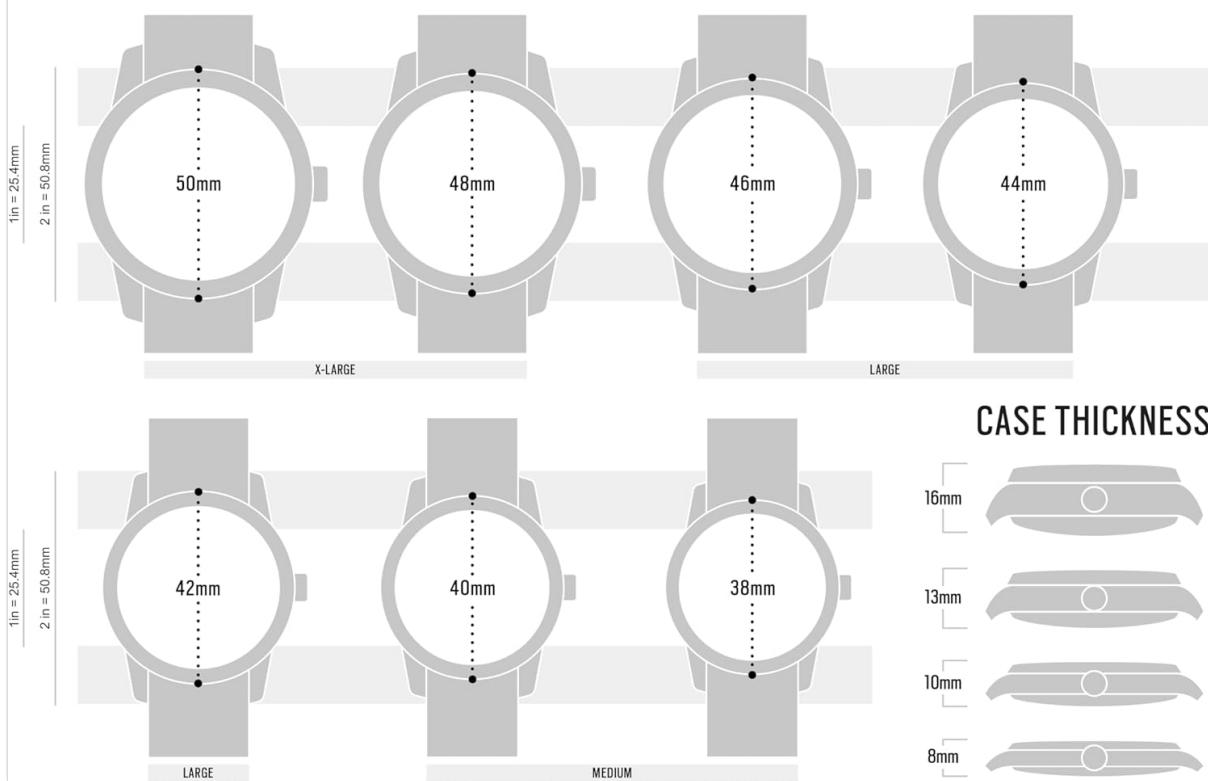


Image: The Skechers watch and bracelet set packaging box, featuring the Skechers logo and a modern design.

SETUP

1. Initial Inspection

Upon unboxing, carefully inspect the watch and bracelets for any signs of damage. Ensure all components are present as listed in the package contents.

2. Setting the Time and Date

- 1. Identify Buttons:** Locate the "MODE", "LIGHT", "START", and "RESET" buttons on the watch case.
- 2. Enter Time Setting Mode:** Press the "MODE" button repeatedly until the time display begins to flash, indicating it is ready for adjustment.
- 3. Adjust Time/Date:** Use the "START" button to increase the value and the "RESET" button to move to the next setting (e.g., hours, minutes, month, day, year).
- 4. Exit Setting Mode:** Once all settings are correct, press the "MODE" button again to return to the normal time display.



Image: Front view of the Skechers digital watch face, showing the time display and the "LIGHT", "MODE", "START", and "RESET" buttons on the sides of the case.

3. Fitting the Watch and Bracelets

The watch features an adjustable silicone band with a buckle closure. Adjust the band to a comfortable fit on your wrist. The bonus bracelets are designed to be worn alongside the watch or individually. Their stackable design allows for various styling options.





Image: A person's wrist wearing the Skechers digital watch alongside three stackable bracelets in black and gray tones.

OPERATING INSTRUCTIONS

Watch Functions

- **Time Display:** Shows current time (12-hour or 24-hour format) and date.
- **Chronograph (Stopwatch):**
 - a. Press "MODE" until the chronograph display appears.
 - b. Press "START" to begin timing.
 - c. Press "START" again to pause.
 - d. Press "RESET" to clear the timer.
- **Light Function:** Press the "LIGHT" button to illuminate the display for better visibility in low-light conditions.

Water Resistance

This watch is water resistant to 30 meters (100 feet), indicated as 3ATM. This means it can withstand splashes or brief immersion in water. It is **not suitable** for swimming, showering, or diving. Avoid pressing buttons while the watch is wet or submerged to prevent water entry.

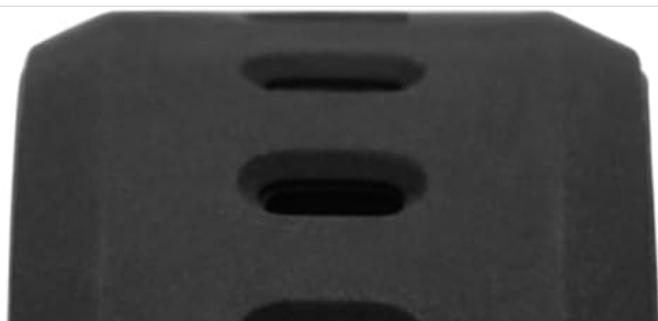




Image: Side view of the Skechers digital watch, highlighting the watch case, buttons, and the silicone band.

MAINTENANCE

Cleaning

- Wipe the watch case and silicone band with a soft, damp cloth.

- For the bracelets, use a dry, soft cloth to remove dust and debris. Avoid harsh chemicals or abrasive materials.
- Ensure the watch is completely dry before wearing after cleaning.

Battery Replacement

The watch requires 1 Lithium Ion battery (included). When the display becomes dim or the watch stops functioning, the battery may need replacement. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

Storage

Store your watch and bracelets in a cool, dry place away from direct sunlight and extreme temperatures. The original packaging box can be used for storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch display is blank or dim.	Low or depleted battery.	Replace the battery. Contact a professional watch technician.
Time/Date is incorrect.	Time settings need adjustment.	Refer to the "Setting the Time and Date" section.
Watch fogging up internally.	Water entry due to seal compromise or extreme temperature changes.	Stop using the watch immediately and seek professional repair to prevent further damage.
Buttons are unresponsive.	Buttons may be stuck or watch may be wet.	Ensure watch is dry. If issue persists, contact customer support.

SPECIFICATIONS

- **Model Number:** SR9053
- **Case Size:** 44mm
- **Band Size:** 22mm
- **Movement:** Digital Quartz
- **Case Material:** Alloy Metal
- **Band Material:** Silicone
- **Water Resistance:** 30m (100ft) / 3ATM
- **Battery Type:** 1 Lithium Ion battery (included)



Image: A visual guide illustrating various men's watch case sizes (38mm to 50mm) and case thicknesses, helping to understand watch dimensions.

WARRANTY INFORMATION

Skechers watches are manufactured to high-quality standards. This product is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of coverage. Keep your proof of purchase for warranty claims.

For returns or exchanges, please adhere to the retailer's return policy where the product was purchased.

CUSTOMER SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact Skechers customer support. You can find contact information on the official Skechers website or through the retailer from whom you purchased the product.

For more information about Skechers products, visit the official Skechers Store:[Skechers Store on Amazon](#).