

- Manuals.plus /
- › [Hspro](#) /
 - › HSPRO T15 Wireless Earbuds User Manual

Hspro T15

HSPRO T15 Wireless Earbuds User Manual

Model: T15

1. PRODUCT OVERVIEW

The HSPRO T15 Wireless Earbuds are designed for a comfortable and secure fit, offering high-quality audio and convenient features for various activities. This manual provides instructions for setup, operation, and maintenance.

Born for Workouts



Built-in Microphone



Hands-free Call



IPX7 Waterproof



HD Sound Richer Bass



15 Hrs Play Time



Soft Ear Hooks



Battery Status Display



Easy Buttons Control

Image 1.1: Overview of HSPRO T15 Wireless Earbuds, highlighting features such as built-in microphone, hands-free call, IPX7 waterproof rating, HD sound, 15 hours play time, soft ear hooks, battery status display, and easy button controls.

Easy Control Physical Buttons

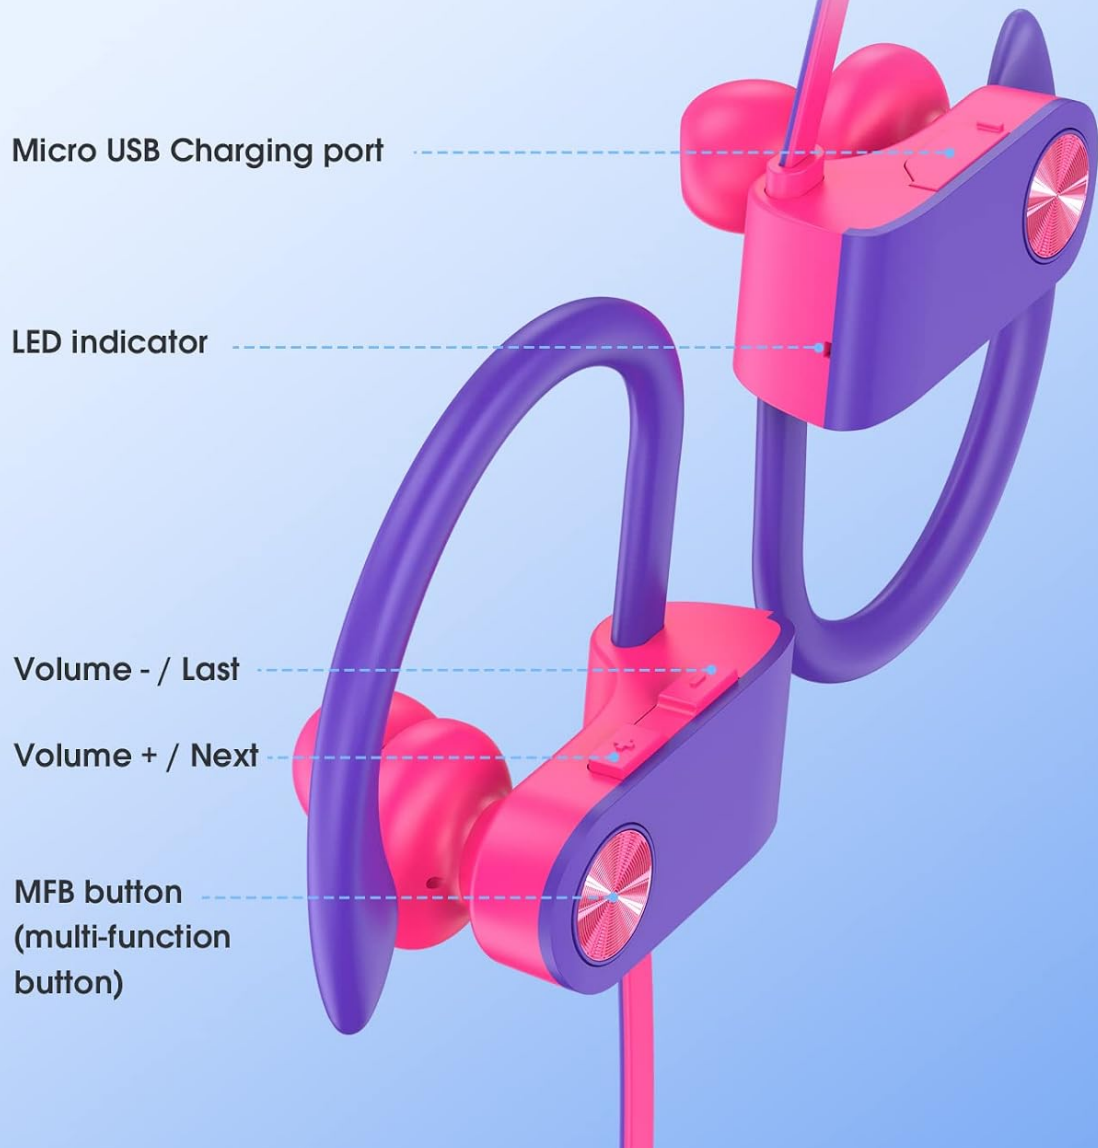


Image 1.2: Detailed diagram showing the Micro USB Charging port, LED indicator, Volume - / Last button, Volume + / Next button, and the Multi-Function Button (MFB) on the HSPRO T15 Earbuds.

2. SETUP AND FIRST USE

2.1 Unboxing and Initial Charge

Upon receiving your HSPRO T15 Wireless Earbuds, carefully open the packaging. The package typically includes the earbuds and a charging case. Before first use, ensure the earbuds are fully charged.

- Place both earbuds into the charging case.
- Connect the charging case to a power source using the provided USB-C cable.
- The LED indicator on the earbuds and/or case will show charging status. A full charge for the earbuds takes approximately 2 hours.

2.2 Pairing with Your Device

The HSPRO T15 earbuds feature one-step pairing for convenience.

1. Ensure both earbuds are in the charging case and the case is open.
2. Remove both earbuds from the charging case. They will automatically power on and enter pairing mode. The LED indicator on one earbud will flash, indicating it is ready to pair.
3. On your device (smartphone, tablet, etc.), go to the Bluetooth settings.
4. Search for available devices and select "HSPRO T15" from the list.
5. Once connected, a voice prompt will confirm successful pairing, and the LED indicators on the earbuds will turn off or flash slowly.

If pairing fails, place the earbuds back into the charging case, close the lid, and repeat the steps.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off

- **Power On:** Remove earbuds from the charging case. They will power on automatically. Alternatively, press and hold the Multi-Function Button (MFB) on both earbuds for 3 seconds.
- **Power Off:** Place earbuds back into the charging case. They will power off automatically. Alternatively, press and hold the MFB on both earbuds for 5 seconds.

3.2 Music Playback

- **Play/Pause:** Single tap the MFB on either earbud.
- **Next Track:** Double tap the MFB on the right earbud.
- **Previous Track:** Double tap the MFB on the left earbud.
- **Volume Up:** Triple tap the MFB on the right earbud.
- **Volume Down:** Triple tap the MFB on the left earbud.

3.3 Call Management

- **Answer/End Call:** Single tap the MFB on either earbud.
- **Reject Call:** Press and hold the MFB on either earbud for 2 seconds.

3.4 Voice Assistant

- **Activate Voice Assistant:** Press and hold the MFB on either earbud for 2 seconds (when not on a call).

3.5 Single Earbud Mode

You can use either the left or right earbud independently.

1. Remove one earbud from the charging case. It will automatically power on and connect to your device if previously paired.
2. The other earbud can remain in the charging case or be powered off.

4. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your HSPRO T15 Wireless Earbuds.

4.1 Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Gently clean the ear tips and charging contacts to prevent debris buildup.

4.2 Water Resistance

IPX7 Waterproof Protection

Protects the headphones from sweat and rain



Image 4.1: HSPRO T15 Earbuds demonstrating IPX7 waterproof protection, suitable for protection against sweat and rain.

The HSPRO T15 earbuds are rated IPX7 water resistant, protecting them from sweat and rain. This means they can withstand immersion in water up to 1 meter for 30 minutes. However, they are not designed for swimming or prolonged submersion. Ensure earbuds are dry before placing them back in the charging case to prevent damage.

4.3 Storage

- Store the earbuds in their charging case when not in use to protect them and keep them charged.
- Avoid storing in extreme temperatures or high humidity.

5. TROUBLESHOOTING

If you encounter issues with your HSPRO T15 Wireless Earbuds, refer to the following common solutions.

5.1 Earbuds Not Pairing or Connecting

- Ensure both earbuds are charged.
- Turn off Bluetooth on your device and turn it back on.
- Delete "HSPRO T15" from your device's Bluetooth list and attempt to re-pair.
- Place both earbuds back into the charging case, close the lid, wait a few seconds, then open and remove them to re-enter pairing mode.

5.2 No Sound or Low Volume

- Check the volume level on both your device and the earbuds.
- Ensure the earbuds are properly connected to your device.
- Clean any debris from the earbud speakers.

5.3 Earbuds Not Charging

- Ensure the charging cable is securely connected to both the case and the power source.
- Verify the power source is active.
- Clean the charging contacts on both the earbuds and the case.

5.4 Earbud Reset

If issues persist, a factory reset may resolve them. Consult the manufacturer's website or support for specific reset procedures for the T15 model, as this can vary.

6. SPECIFICATIONS

Feature	Specification
Brand	Hspro
Model Number	T15
Ear Placement	In Ear
Form Factor	In Ear
Control Method	Touch
Bluetooth Version	5.0
Bluetooth Range	10 Meters
Earbud Battery Life	Up to 15 Hours
Total Playtime (with case)	Up to 30 Hours
Earbud Charge Time	2 Hours
Water Resistance	IPX7 (Water Resistant)
Frequency Range	20Hz - 20,000Hz
Item Weight	4 Grams (per earbud)
Built-in Microphone	Yes

Compatible Devices	Smartphones, Laptops, Desktops, Tablets, Smart Speakers, Televisions, Car Audio Systems, Gaming Consoles
--------------------	--

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Specific warranty details for HSPRO products are typically provided with your purchase documentation or on the official HSPRO website. Please retain your proof of purchase for any warranty claims.

7.2 Customer Support

For further assistance, technical support, or inquiries not covered in this manual, please refer to the contact information provided with your product or visit the official HSPRO support website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08L5XMVHX>

More documents and user manuals: <https://manuals.plus/>