

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Merece](#) /

> [Merece 4-in-1 Laminator User Manual](#)

Merece SL299-EU

Merece 4-in-1 Laminator User Manual

Model: SL299-EU

Brand: Merece

INTRODUCTION

This manual provides comprehensive instructions for the Merece 4-in-1 Laminator, Model SL299-EU. This versatile device is designed for home, school, and office use, offering both hot and cold lamination, along with essential accessories for a complete document protection solution.

Key Features:

- **4-in-1 Deluxe Lamination Set:** Includes laminator, corner rounder, paper cutter, and 30 laminating pouches (10 x A4, 10 x A5, 10 x A6).
- **Fast and Smooth Lamination:** Features a rapid 3-minute warm-up time and a lamination speed of 280 mm/min. The two-roller system ensures smooth results, preventing wrinkles, bubbles, and curling.
- **Hot and Cold Lamination Modes:** Offers both thermal and cold lamination options. For cold lamination, use self-adhesive pouches (not included).
- **Compact Design & Wide Applications:** With a 230mm (A4 size) throat entry, this laminator is ideal for photos, postcards, letters, legal documents, menus, and business cards.
- **Built-in ABS Release Button:** Allows for easy clearing of document jams, protecting your important documents.

PRODUCT OVERVIEW



The Merece 4-in-1 Laminator, showcasing the main unit, paper cutter, and corner rounder.

Your browser does not support the video tag.

Official product video demonstrating the Merece 4-in-1 Laminator and its accessories.

SETUP

1. Unpack the laminator and all accessories from the packaging.
2. Place the laminator on a stable, flat surface with adequate ventilation.
3. Ensure the power switch is in the "OFF" position.
4. Plug the power cord into a suitable electrical outlet.

OPERATING INSTRUCTIONS

1. Preparing for Lamination

Before laminating, ensure your documents or photos are clean and free of dust. If necessary, use the included paper cutter or corner rounder to prepare your items.

Tragbarer Cutter


Ausrichtungsgitter, Lineal, Goniometer



Using the portable paper cutter to precisely trim documents or photos.

Eingebauter ABS-Auslöseknopf

Mit einer Taste entfernen Sie den Stau, um Ihre wichtigen Dokumente zu schützen

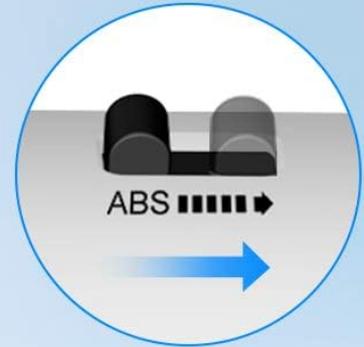

READY ● POWER ●
HOT OFF COLD
☹ ○ *

2
Herausziehen

Rounding the corners of a document using the corner rounder for a smooth, safe finish.

A4 Maximal 22,8 cm

Laminae vom Personalausweis zum Menü



Max: 22,8 cm

Foto / Karte / Zertifikat / Arbeitserlaubnis / Menü / Malerei



The laminator supports various document types up to A4 size (22.8 cm maximum width).

2. Hot Lamination

1. Turn on the laminator by selecting the "HOT" mode. The "POWER" indicator light will illuminate red.
2. Allow approximately 3 minutes for the machine to warm up. The "READY" indicator light will turn green when the laminator is ready for use.
3. Place your document or photo inside a laminating pouch, ensuring it is centered and there is an even border around

the item.

4. Insert the sealed edge of the laminating pouch into the laminator's entrance slot. The machine will automatically feed the pouch through.
5. Once the lamination process is complete, carefully remove the laminated item from the exit slot. Allow it to cool on a flat surface before handling.

3. Cold Lamination

1. For cold lamination, use self-adhesive laminating pouches (not included).
2. Turn on the laminator by selecting the "COLD" mode. The "POWER" indicator light will illuminate red. No warm-up time is required for cold lamination.
3. Place your document or photo inside the self-adhesive cold laminating pouch.
4. Insert the sealed edge of the pouch into the laminator's entrance slot. The machine will feed the pouch through.
5. Remove the laminated item once it exits the machine.

Heiß & Kalt Zwei Laminierungsoptionen

Laminae vom Personalausweis zum Menü



Preheat



Speed



Cold Option



Hot Option




The laminator supports both hot and cold lamination, with a quick preheat time for hot mode.

Easy Four Steps




- 1 Wählen Sie das heiße Modell zum Einschalten, erwärmt sich innerhalb von 3 Minuten, bis die Bereitschaftsanzeige grün leuchtet.

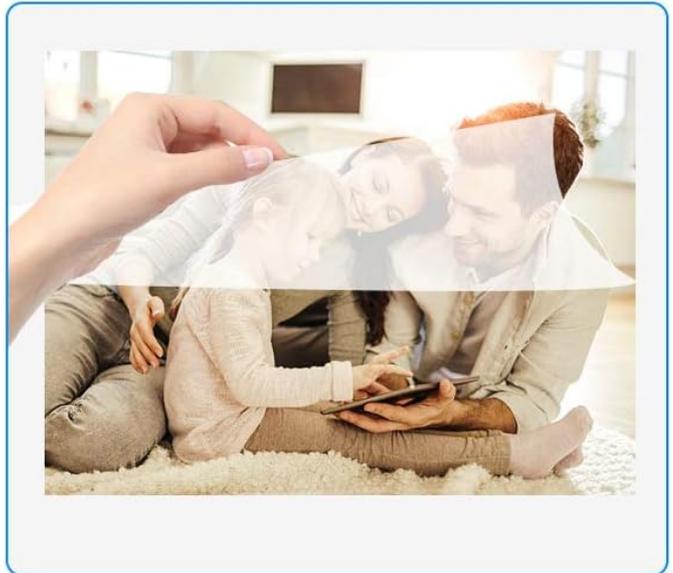

- 2 Legen Sie Ihr Foto oder Dokument in einen Laminierbeutel.



- 3 Setzen Sie den Laminierbeutel mit der Feile in die ein Laminatoreintritt und Laminieren beginnen.

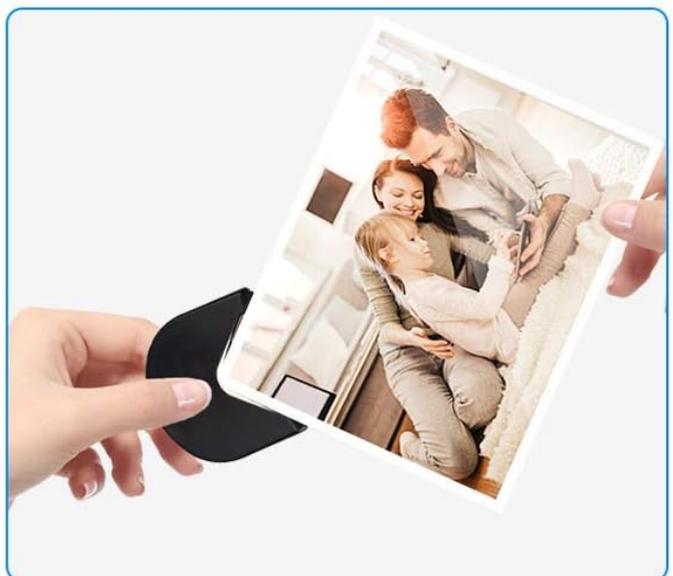


- 4 Schalten Sie das Gerät aus und verwenden Sie den Cutter und den Eckenrunder, um das Laminat fertigzustellen. Beutel, wenn Sie sie brauchen.

Visual guide to the four easy steps of lamination with the Merece device.

Wasserdicht und staubdicht

Cherish every happiness moment

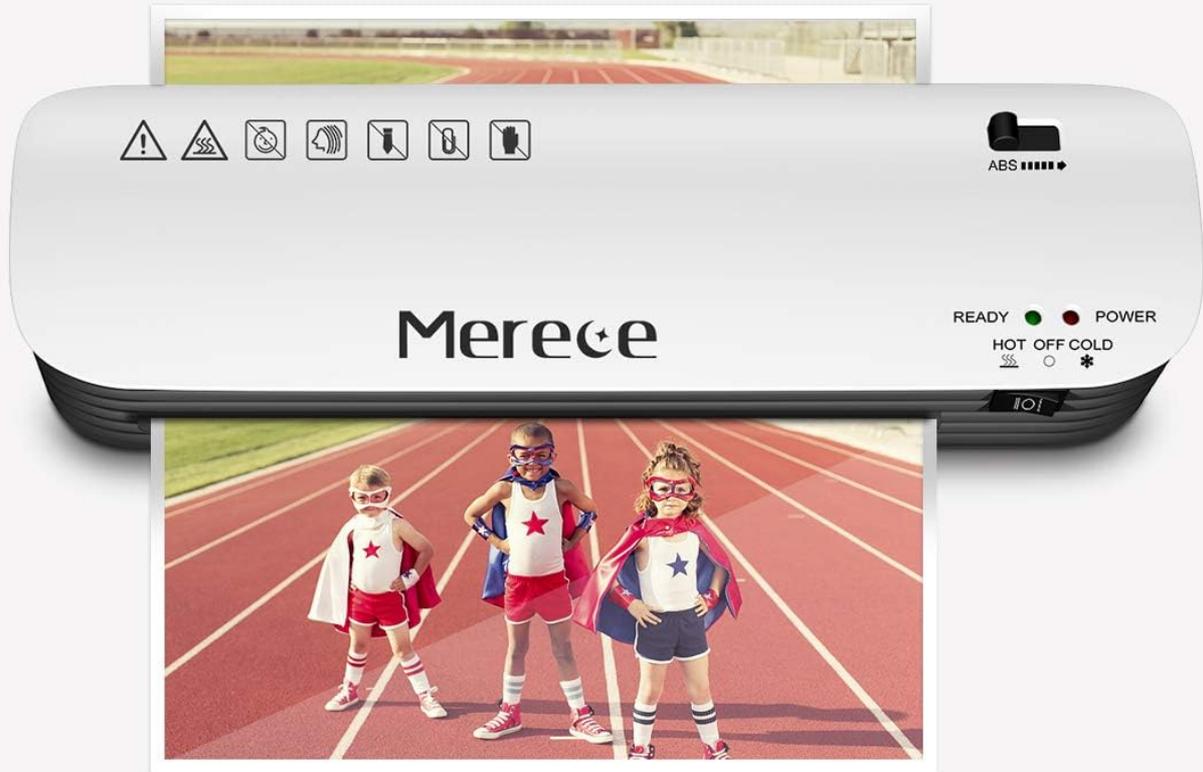

Vorher

**Originales nicht
laminiertes Foto**



Nachher

Laminiertes Foto

Lamination provides a waterproof and dustproof seal, protecting your cherished memories and documents.

MAINTENANCE

To ensure optimal performance and longevity of your Merece laminator, follow these simple maintenance guidelines:

- Always unplug the laminator from the power outlet before cleaning.
- Allow the machine to cool down completely if it was used for hot lamination.

- Wipe the exterior of the laminator with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Regularly check the entrance and exit slots for any debris or adhesive residue. If necessary, use a dry, lint-free cloth to gently clean the rollers.
- Store the laminator in a dry, dust-free environment when not in use.

TROUBLESHOOTING

Document Jam

If a laminating pouch becomes jammed during operation:

1. Immediately press and hold the **ABS Release Button** located on the side of the laminator. This will disengage the rollers.
2. Gently pull the jammed pouch out of the entrance or exit slot. Do not force it, as this may damage the machine or the document.
3. Once the jam is cleared, release the ABS button.
4. Inspect the pouch and document for damage. If the pouch is creased or damaged, discard it and use a new one.
5. Ensure the pouch is inserted straight and centered for subsequent laminations.

Eckrunder

Schützen Sie Ihre und die Haut Ihres Kindes vor Schnittverletzungen



Locating and using the ABS release button to resolve document jams.

Lamination Quality Issues (Bubbles, Wrinkles)

- Ensure the laminator has fully warmed up (green "READY" light).
- Use laminating pouches of the correct thickness (150 to 250 microns total, or 2x75 to 2x125).
- Make sure the document is centered within the pouch and the pouch is inserted straight into the machine.
- Avoid overfilling the pouch.

SPECIFICATIONS

Feature	Detail
Model Number	SL299-EU
Brand	Merece
Warm-up Time	Approx. 3 minutes
Lamination Speed	280 mm/min
Lamination Width	230 mm (A4 Max)
Pouch Thickness	150 (2x75) to 250 (2x125) microns
Lamination Modes	Hot & Cold
Item Weight	1.42 Kilograms
Dimensions (Packaging)	38.9 x 13.5 x 13.2 cm

WARRANTY AND SUPPORT

Warranty Information

Merece offers a 24-month quality assurance for this laminator. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, technical assistance, or warranty inquiries, please contact Merece customer support through the retailer's platform or the official Merece website.

We are committed to providing the best shopping experience for every customer.