

Bestron AAF7003DCO

Bestron Digital XXL Hot Air Fryer User Manual

Model: AAF7003DCO

INTRODUCTION

Welcome to the user manual for your Bestron Digital XXL Hot Air Fryer. This appliance is designed for healthy and efficient cooking, frying, and baking with hot air, reducing the need for oil and fat. Please read this manual carefully before first use to ensure safe and optimal operation.

The Bestron PrepAir technology ensures fast circulating hot air for crispy results without unpleasant odors. With a 4-liter capacity, it is ideal for preparing meals for up to 4 people or up to 1 kg of fries.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has overheating protection.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Bestron Digital XXL Hot Air Fryer.



Figure 1: The Bestron Digital XXL Hot Air Fryer with its basket pulled out, showing crispy fries inside. The digital display shows temperature and time settings.



Figure 2: The main unit of the air fryer with the non-stick inner container and the frying basket detached, illustrating the removable components for easy cleaning.



Figure 3: An internal view of the air fryer demonstrating the PrepAir technology with arrows indicating the rapid circulation of hot air for even cooking.

Components:

- **Main Unit:** Houses the heating element and fan.
- **Digital Touch Screen Display:** For setting temperature and time.
- **Frying Basket:** Non-stick, removable for food placement.
- **Inner Container:** Non-stick, holds the frying basket.
- **Handle:** For safely pulling out the basket and container.

SETUP

1. **Unpacking:** Carefully remove the air fryer and all packaging materials. Keep packaging for future storage or disposal.

- Initial Cleaning:** Before first use, clean the frying basket and inner container with hot water, dish soap, and a non-abrasive sponge. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before use.
- Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is adequate space (at least 10 cm) around the appliance for proper air circulation. Do not place it directly against a wall or under cabinets.
- Power Connection:** Plug the power cord into a grounded wall outlet. Ensure the voltage matches the specifications of your appliance (220 Volts).

OPERATING INSTRUCTIONS

Basic Operation:

- Prepare Food:** Place your ingredients into the frying basket. Do not overfill the basket; ensure air can circulate freely. For best results, shake or turn food halfway through cooking.
- Insert Basket:** Slide the frying basket with the inner container back into the main unit until it clicks into place.
- Power On:** Press the power button on the digital touch screen.
- Set Temperature:** Use the temperature control buttons (usually + and -) to set the desired cooking temperature, up to 200°C.
- Set Timer:** Use the timer control buttons to set the cooking time, up to 30 minutes. The appliance features an automatic shut-off with an end-of-cooking signal.
- Start Cooking:** Press the start/pause button to begin the cooking process.
- Check Food:** During cooking, you can pull out the basket to check or shake the food. The appliance will automatically pause and resume when the basket is reinserted.
- Finish Cooking:** Once the timer reaches zero, the appliance will beep and automatically shut off. Carefully pull out the basket and empty the cooked food.



Figure 4: The air fryer in operation, with the basket pulled out to show chicken pieces being cooked. The digital display is active.



Figure 5: The air fryer on a kitchen counter surrounded by various dishes prepared using the appliance, including fries, chicken, and muffins, showcasing its versatility.

Tips for Best Results:

- For crispier results, lightly brush or spray food with a small amount of oil.
- Preheat the air fryer for 3-5 minutes before adding food for more consistent cooking.
- Smaller food items usually require shorter cooking times than larger ones.
- Refer to the included recipe book for specific cooking times and temperatures for various foods.

MAINTENANCE AND CLEANING

Regular cleaning will ensure the longevity and optimal performance of your air fryer.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Clean Basket and Container:** The non-stick frying basket and inner container are dishwasher safe. Alternatively, they can be washed by hand with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak them in warm soapy water for about 10 minutes.
3. **Clean Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Never immerse the main unit in water or any other liquid.
4. **Clean Heating Element:** Use a cleaning brush to remove any food residue from the heating element inside the appliance.
5. **Storage:** Ensure all parts are clean and dry before storing the appliance. Store it in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your Bestron Digital XXL Hot Air Fryer, please refer to the following

common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working; basket not inserted correctly.	Check power cord connection; try a different outlet; ensure basket is fully pushed in.
Food is not cooked evenly.	Basket is overfilled; food not shaken/turned.	Do not overfill; shake or turn food halfway through cooking.
Food is not crispy.	Not enough oil (if applicable); temperature too low; cooking time too short.	Lightly brush/spray with oil; increase temperature; extend cooking time.
White smoke coming from appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and inner container thoroughly; remove excess fat from food.

SPECIFICATIONS

Detailed technical specifications for the Bestron Digital XXL Hot Air Fryer (Model AAF7003DCO).

Feature	Specification
Brand	Bestron
Model Number	AAF7003DCO
Color	Black/Copper
Dimensions (L x W x H)	32 x 26 x 25 cm
Capacity	4 Liters
Power	1300 Watts
Voltage	220 Volts
Material	Plastic
Special Feature	Touch Screen
Item Weight	5 Kilograms
Cable Length	70 cm


WARRANTY AND SUPPORT

Bestron products are manufactured to high quality standards. In the unlikely event of a defect, please contact your retailer or Bestron customer service. Keep your proof of purchase for warranty claims. For further assistance, recipe ideas, or to register your product, please visit the official Bestron website or contact their customer support.



Figure 6: The product packaging box for the Bestron Digital XXL Hot Air Fryer, highlighting key features and the brand logo.

Related Documents - AAF7003DCO

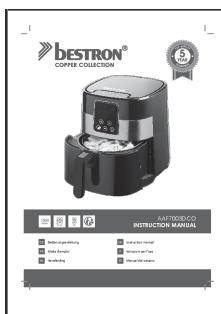

[Bestron AAF7003DCO Copper Collection Air Fryer Instruction Manual](#)

Comprehensive instruction manual for the Bestron AAF7003DCO Copper Collection Air Fryer. Learn about its features, operation, safety guidelines, cleaning, and warranty.

 <p>bestron[®] Digital Hot Air Fryer AF7004D</p>	<p><u>Bestron AAF7004D Digital Hot Air Fryer Instruction Manual</u> Comprehensive instruction manual for the Bestron AAF7004D Digital Hot Air Fryer, covering safety guidelines, operation, cleaning, and technical specifications.</p>
 <p>bestron[®] COPPER COLLECTION DF402CO</p>	<p><u>Bestron DF402CO Deep Fryer: Instruction Manual</u> User manual for the Bestron DF402CO Deep Fryer (Copper Collection). Learn about safe operation, features like the Cool Zone, cleaning, maintenance, and warranty information.</p>
 <p>bestron[®] CRISPY & CO AF357B</p>	<p><u>Bestron Fritteuse AF357B Bedienungsanleitung</u> Umfassende Bedienungsanleitung für die Bestron Fritteuse AF357B. Enthält Sicherheitshinweise, Bedienung, Reinigung und technische Daten für den sicheren und effektiven Gebrauch.</p>
 <p>bestron[®] CRISPY & CO AF357R</p>	<p><u>Bestron AF357R Deep Fryer Instruction Manual</u> User manual for the Bestron AF357R Deep Fryer, providing instructions on safe operation, cleaning, maintenance, and warranty information.</p>
 <p>bestron[®] COPPER COLLECTION DF402CO</p>	<p><u>Bestron DF402CO Copper Collection Deep Fryer Instruction Manual</u> Comprehensive instruction manual for the Bestron DF402CO Copper Collection deep fryer, detailing operation, safety, cleaning, and maintenance. Learn how to use your appliance safely and effectively.</p>