

[manuals.plus](#) /› [WINFLIKE](#) /› [WINFLIKE SE-R0431 Remote Control User Manual for Toshiba DVD/VCR Players](#)

WINFLIKE SE-R0431

WINFLIKE SE-R0431 Remote Control User Manual

For Toshiba DVD/VCR Player Models: BDX2400, BDX3400, BDX5400, BDX6400 Series

1. INTRODUCTION

This manual provides instructions for the WINFLIKE SE-R0431 replacement remote control. This remote is designed to be compatible with various Toshiba DVD/VCR Player models, including the BDX2400, BDX3400, BDX5400, and BDX6400 series. It offers direct functionality without requiring programming.

Please read this manual thoroughly before use to ensure proper operation and to familiarize yourself with the remote's features.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: Batteries are not included with the remote control. Always use new batteries for optimal performance.

2.2 Compatibility

The SE-R0431 remote control is compatible with the following Toshiba DVD/VCR Player models:

- BDX2400, BDX2400KU
- BDX3400, BDX3400KU
- BDX5400, BDX5400KU, BDX5400U
- BDX6400, BDX6400KU
- AH701048, RTAH701048

No programming is required. Once batteries are installed, the remote is ready for use with compatible devices.

3. OPERATING INSTRUCTIONS

The SE-R0431 remote control features a standard layout for DVD/VCR player functions. Refer to the image below for button identification.





Figure 1: Front view of the SE-R0431 Remote Control

This image displays the full layout of the remote control, highlighting the arrangement of power, navigation, playback, and function buttons. The model number "SE-R0431" is visible at the bottom.

3.1 Basic Functions

- **POWER** (red button): Turns the DVD/VCR player on or off.
- **OPEN/CLOSE** (blue triangle button): Opens or closes the disc tray.
- **Number Buttons (0-9)**: Used for direct track/chapter selection or inputting numerical data.
- **GOTO**: Jumps to a specific time or chapter.
- **Clear**: Clears numerical input or selections.

3.2 Playback Controls

- **PLAY/PAUSE** (green triangle/two vertical bars): Starts playback or pauses it.
- **STOP** (red square): Stops playback.
- **REV** (double left arrow): Rewinds playback.
- **FWD** (double right arrow): Fast forwards playback.
- **SKIP** (double arrow with vertical line): Skips to the previous or next track/chapter.
- **STEP/SLOW**: Advances frame by frame or plays in slow motion.

3.3 Navigation and Menu Controls

- **Directional Pad (Up, Down, Left, Right)**: Navigates through menus and options.
- **OK**: Confirms selections in menus.
- **RETURN**: Goes back to the previous menu or screen.
- **HOME**: Accesses the main menu or home screen.
- **SETTING**: Opens the device settings menu.
- **EXIT**: Exits the current menu or function.
- **TOP MENU**: Accesses the disc's top menu.
- **POP UP/MENU**: Displays or hides the disc's pop-up menu.

3.4 Special Functions

- **PIP**: Picture-in-Picture function (if supported by the player).
- **OSC**: On-Screen Display.

- **PROGRAM:** Accesses programming features (e.g., for VCR recording).
- **DIGEST:** Displays a summary or thumbnail view.
- **ZOOM:** Magnifies a portion of the screen.
- **BOOKMARK:** Sets or recalls a bookmark.
- **SUB:** Toggles subtitles on/off or selects subtitle language.
- **AUDIO:** Selects audio tracks or languages.
- **2nd AUDIO:** Selects a secondary audio track.
- **ANGLE:** Changes the camera angle (if available on the disc).
- **A-B:** Repeats a specific section between points A and B.
- **REPEAT:** Repeats the current track, chapter, or disc.
- **DISPLAY:** Shows playback information on screen.
- **NETFLIX (red button):** Direct access to Netflix (if supported by the player and configured).

4. MAINTENANCE

4.1 Cleaning the Remote

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in water.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops functioning. Always replace both batteries at the same time with new AAA batteries. Remove batteries if the remote will not be used for an extended period to prevent leakage.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote has limited range or intermittent response.	Weak batteries; Obstruction between remote and player; Infrared sensor on player is blocked.	Replace batteries. Ensure a clear line of sight to the player. Clean the player's IR sensor.
Certain functions do not work.	Function not supported by your specific player model or disc.	Refer to your Toshiba DVD/VCR player's original manual for supported features.
Remote is physically damaged.	Physical impact or liquid exposure.	The remote may need to be replaced.

6. SPECIFICATIONS

- **Model:** SE-R0431
- **Brand:** WINFLIKE
- **Connectivity Technology:** Infrared (IR)

- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** Approximately 7 x 2 x 0.6 inches (17.8 x 5.1 x 1.5 cm)
- **Item Weight:** Approximately 2.11 ounces (60 grams)
- **Special Features:** Ergonomic design, Lightweight, No programming required
- **Compatible Devices:** Toshiba DVD/VCR Players (BDX2400, BDX3400, BDX5400, BDX6400 series)

7. SUPPORT AND WARRANTY

This WINFLIKE remote control is designed for reliable performance. If you encounter any issues or have questions regarding its operation, please contact WINFLIKE customer support.

For support inquiries, refer to the contact information provided with your purchase or visit the WINFLIKE official website. Please have your product model (SE-R0431) and purchase details ready when contacting support.

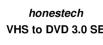 
Note: Specific warranty details may vary. Please consult your purchase documentation for warranty terms and conditions.

© 2023 WINFLIKE. All rights reserved.

WINFLIKE and the WINFLIKE logo are trademarks of WINFLIKE INC.

Related Documents - SE-R0431

	<p><u>Toshiba SE-R0334 Remote Control: Original vs. Replacement Functions</u></p> <p>Detailed comparison of original Toshiba remote control functions and the replacement SE-R0334 model, covering button mappings for various media devices.</p>
<p> honestech VHS to DVD 3.0 SE</p> <p> User Guide</p> <p></p>	<p><u>honestech VHS to DVD 3.0 SE User Guide</u></p> <p>User guide for honestech VHS to DVD 3.0 SE software, detailing how to capture, edit, and burn VHS tapes to DVD or other digital formats. Includes system requirements, step-by-step instructions, and output specifications.</p>
<p> honestech VHS to DVD 3.0 SE</p> <p> Manuel d'utilisation</p> <p></p>	<p><u>Manuel d'utilisation honestech VHS to DVD 3.0 SE</u></p> <p>Ce manuel d'utilisation fournit des instructions détaillées pour le logiciel honestech VHS to DVD 3.0 SE, couvrant l'installation, la capture, l'édition et la gravure de vidéos sur DVD.</p>

 honestech VHS to DVD 3.0 SE User Guide 	<p><u>honestech VHS to DVD 3.0 SE User Guide</u></p> <p>Learn how to archive your precious memories with honestech VHS to DVD 3.0 SE. This user guide provides step-by-step instructions for capturing, editing, and burning your VHS tapes to DVD or CD, ensuring your videos are preserved for years to come.</p>
	<p><u>Schumacher Electric Battery Charger Owner's Manual and Safety Guide</u></p> <p>Comprehensive owner's manual and safety guide for Schumacher Electric battery chargers, covering operation, maintenance, troubleshooting, and warranty information for models like SE-40MAP, SE-70MA, and more. Includes essential safety precautions and usage instructions.</p>
	<p><u>UCEC USB 2.0 UVC Video Capture All in One Quick Start Guide</u></p> <p>This guide provides instructions for setting up and using the UCEC USB 2.0 UVC Video Capture All in One device on both macOS (using QuickTime Player) and Windows (using Honestech VHS to DVD 3.0 SE or OBS Studio). It covers connections, software installation, recording, and troubleshooting.</p>