

[Manuals.plus](#) /

› [Goad](#) /

› Goad Dog Grooming Clippers Instruction Manual

Goad B08L6NZQMH

Goad Dog Grooming Clippers Instruction Manual

Model: B08L6NZQMH

Brand: Goad

INTRODUCTION

Thank you for choosing the Goad Dog Grooming Clippers. This comprehensive kit is designed to provide a safe, efficient, and comfortable grooming experience for your pets, especially those with heavy and thick hair. With its low noise operation, rechargeable cordless design, and versatile blades, you can achieve professional grooming results at home. Please read this manual thoroughly before first use to ensure proper operation and maintenance.

SAFETY INFORMATION

WARNING:

- For canine use only. Keep away from water and other liquids to prevent electric shock.
- Use with care to avoid cuts and skin irritation to your pet.
- Not suitable for human or other animal use.
- Always ensure the clipper is turned off before cleaning or changing blades.
- Keep out of reach of children.

PACKAGE CONTENTS

Your Goad Dog Grooming Kit includes the following items:



Figure 1: Complete Gooad Dog Grooming Kit contents.

- Gooad Pet Clipper (Gold)
- Wide Blade (pre-installed or separate)
- Narrow Blade (for paws, rump, face, ear, beard, mustache)
- 4 Guide Combs (3mm, 6mm, 9mm, 12mm)
- USB Charging Cable
- Cleaning Brush
- Lubricating Oil
- Stainless Steel Comb
- Grooming Scissors
- Nail Clippers
- Nail File
- Organizer Bag



Figure 2: Detailed view of clipper components and accessories.

SETUP

1. Charging the Clipper

Before first use, fully charge the clipper. The 2200mAh High Capacity Li-ion Battery requires approximately 3 hours for a full charge, providing up to 250 minutes of continuous use.

1. Connect the USB charging cable to the clipper's charge port.
2. Plug the other end of the USB cable into a compatible USB power source (e.g., laptop, adapter, power bank).
3. The LCD display on the clipper will show the charging progress (20%, 40%, 60%, 80%, 100%).
4. Once fully charged, disconnect the cable.

SUITABLE FOR CHARGING ALL KINDS OF USB DEVICES



Figure 3: USB charging options for the clipper.



Figure 4: LCD display indicating battery charge.

2. Installing/Changing Blades

The clipper comes with two blades: a wide blade for thick coats and a narrow blade for delicate areas. Ensure the clipper is OFF before changing blades.

1. To remove a blade: Adjust the blade adjustment ring to 2.0mm. Push down on the blade with your thumb until it detaches from the clipper body.
2. To install a blade: Align the blade with the head groove on the clipper. Press the knife head firmly with both hands until it clicks into place.

WATERPROOF DESIGN-2 WASHING METHODS



Disassemble And Install Blade

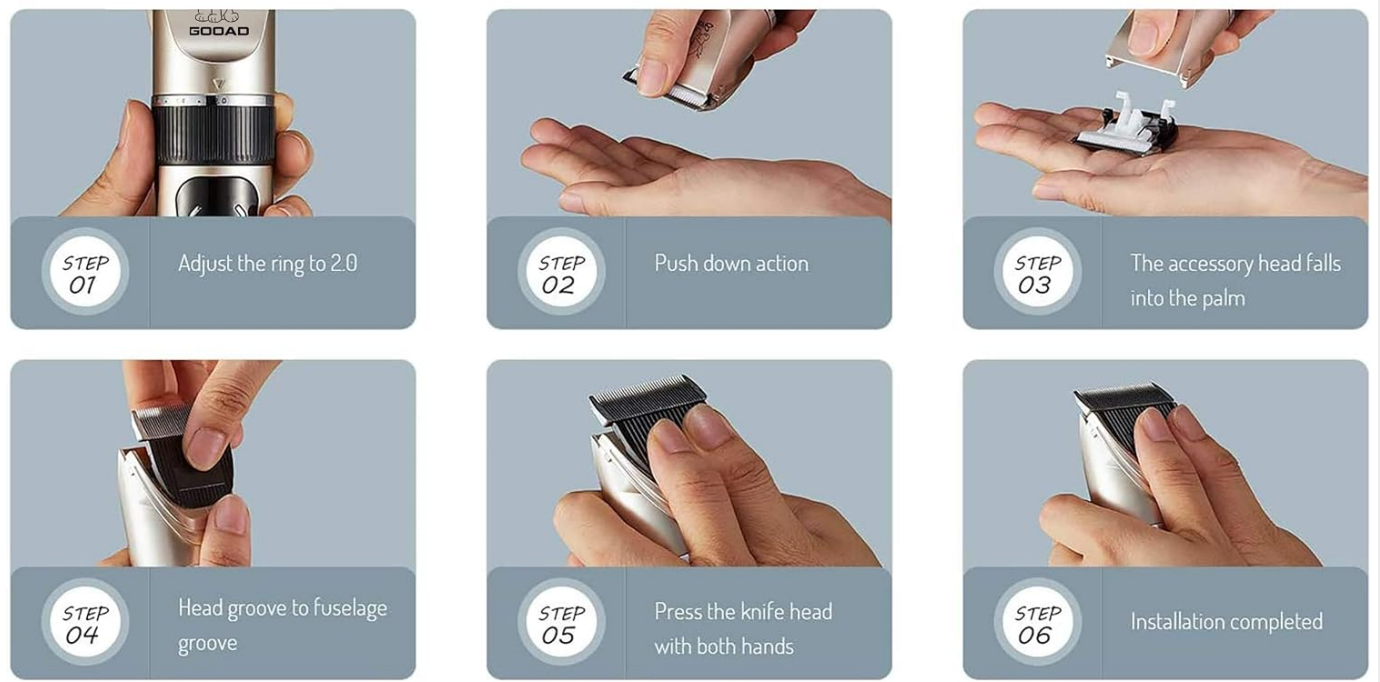


Figure 5: Blade disassembly and installation steps.

OPERATING INSTRUCTIONS

1. Preparing Your Pet

- Ensure your pet's coat is clean, dry, and free of tangles or mats. Brush thoroughly before clipping.
- Familiarize your pet with the clipper's sound and vibration before turning it on. The GoDad clipper features a Q-SUS Low-Noise-Tech, operating at less than 60dB to minimize pet anxiety.



Figure 6: Ultra-quiet design for a stress-free grooming experience.

2. Adjusting Blade Length and Using Guide Combs

The clipper features a 5-size fine-tuning knob (0.8mm-2.0mm) for precise length adjustment. For longer cuts, attach one of the four guide combs.

1. To adjust blade length: Rotate the black ring on the clipper body to select desired length (0.8, 1.1, 1.4, 1.7, or 2.0mm).
2. To attach a guide comb: Slide the comb onto the clipper blade until it securely snaps into place. Choose from 3mm, 6mm, 9mm, or 12mm combs.
3. To remove a guide comb: Gently lift the comb from the back and slide it off the blade.

Turn to 2.0 mm to install the blade and guard
The smaller blade can groom smoothly only by turning to 0.8mm.



Figure 7: Blade adjustment and guide comb options.

3. Grooming Your Pet

- Turn on the clipper using the ON/OFF switch. The silver Pd-alloy 3-speed motor provides strong power for efficient cutting.
- Hold the clipper firmly and move it in the direction of hair growth. Use smooth, even strokes.
- Use the wide blade for general body grooming and the narrow blade for sensitive areas like paws, face, and ears.
- Take breaks as needed to prevent the clipper from overheating and to keep your pet comfortable.



Figure 8: Clipper power and target grooming areas.

MAINTENANCE

1. Cleaning the Blades

Regular cleaning ensures optimal performance and extends the life of your clipper. The blades are detachable for easy cleaning.

1. After each use, turn off the clipper and remove the blade (refer to Setup section).
2. Use the provided cleaning brush to remove any trapped hair from the blade and clipper head.
3. The clipper features a waterproof design. You can rinse the blades under running water. Ensure the clipper body is not submerged.
4. Dry the blades thoroughly before reattaching them to the clipper.

WATERPROOF DESIGN-2 WASHING METHODS



Disassemble And Install Blade



Figure 9: Waterproof design and cleaning methods.

2. Oiling the Blades

To maintain cutting efficiency and prevent blade wear, apply a few drops of lubricating oil to the blades after every few uses or after cleaning.

- Apply 1-2 drops of the provided oil to the teeth of the blade.
- Turn on the clipper for a few seconds to allow the oil to distribute evenly.
- Wipe off any excess oil with a soft cloth.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper not turning on.	Low battery or not charged.	Charge the clipper fully. Check the LCD display for battery level.

Problem	Possible Cause	Solution
Clipper pulling hair or not cutting effectively.	Blades are dull, dirty, or not properly oiled. Pet's hair is tangled.	Clean and oil the blades. Ensure blades are correctly installed. Brush pet's hair thoroughly before grooming. Consider replacing blades if excessively dull.
Clipper making unusual noise.	Blades not properly aligned or internal issue.	Re-install blades. If the problem persists, contact customer support.
Clipper overheating.	Prolonged use or dirty blades.	Allow the clipper to cool down. Clean and oil the blades. Take more frequent breaks during grooming.

SPECIFICATIONS

- **Brand:** Goad
- **Model:** B08L6NZQMH
- **Color:** Gold
- **Blade Material:** High quality 33-tooth titanium blade and ceramic movable blade
- **Motor:** Silver Pd-alloy 3-speed motor
- **Noise Level:** Less than 60dB (Q-SUS Low-Noise-Tech)
- **Battery:** 2200mA High Capacity Li-ion Battery (1 Lithium Ion battery included)
- **Charging Time:** Approximately 3 hours
- **Operating Time:** Up to 250 minutes
- **Adjustable Blade Length:** 0.8mm, 1.1mm, 1.4mm, 1.7mm, 2.0mm
- **Guide Combs:** 3mm, 6mm, 9mm, 12mm
- **Product Dimensions:** 2.87 x 5.94 x 8.43 inches
- **Item Weight:** 1.43 Pounds (650 Grams)
- **Waterproof Design:** Yes (for blades/head, not entire body)
- **First Available Date:** October 14, 2020

WARRANTY AND SUPPORT

Goad is committed to providing quality products and excellent customer service. While specific warranty details are not provided in this manual, Goad aims to provide pets with a loving shaving experience, focusing on safety, efficiency, and comfort. For any questions, concerns, or support needs regarding your Goad Dog Grooming Clippers, please contact Goad customer service through the retailer where you purchased the product or visit the official Goad brand store online. Goad will always help you whenever.

You can visit the Goad Store for more information: [Goad Official Store](#)

