



Manuals.plus /

› **Supersonic** /

› SuperSonic 5.1 Channel DVD Home Theater System User Manual

Supersonic SC-38HT

SuperSonic 5.1 Channel DVD Home Theater System User Manual

Model: SC-38HT

INTRODUCTION

Thank you for purchasing the SuperSonic 5.1 Channel DVD Home Theater System. This manual provides essential information for setting up, operating, and maintaining your new home theater system. Please read this manual thoroughly before use to ensure proper operation and to maximize your listening and viewing experience.

SAFETY INFORMATION

To reduce the risk of electric shock, fire, or damage to the unit, please observe the following safety precautions:

- Do not expose this appliance to rain or moisture.
- Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.

PACKAGE CONTENTS

Please check that all items are present and in good condition:

- Main DVD Player Unit
- Subwoofer
- Satellite Speakers (4 units)
- Center Speaker (1 unit)
- Remote Control
- Audio Cables

- User Manual (this document)

PRODUCT OVERVIEW



This image displays the complete SuperSonic 5.1 Channel DVD Home Theater System. It includes a large subwoofer on the left, a remote control, four compact satellite speakers, and the central DVD player unit with integrated controls.

The SuperSonic SC-38HT system is designed to deliver immersive 5.1 channel surround sound for your home entertainment. It features a main DVD player unit, a powerful subwoofer, and five satellite speakers (four surround, one center) to create a dynamic audio environment. The system also includes a built-in USB input for media playback, FM radio, and two microphone jacks for karaoke functionality.

SETUP

1. Speaker Placement and Connection

Proper speaker placement is crucial for optimal surround sound. Position the speakers as follows:

1. **Center Speaker:** Place directly above or below your TV.
2. **Front Left/Right Speakers:** Place on either side of your TV, equidistant from the viewing position.
3. **Rear Left/Right Speakers:** Place behind or to the sides of your main listening area.
4. **Subwoofer:** Place on the floor, preferably in a corner or near a wall for enhanced bass.

Connect each speaker cable to the corresponding color-coded terminals on the back of the main DVD player unit. Ensure positive (+) and negative (-) terminals are matched correctly.

2. Connecting to Your TV/Audio Source

Connect the main DVD player unit to your television using an appropriate audio/video cable (e.g., RCA, HDMI if available on your model). For audio input from external devices, use the auxiliary input jacks.

3. Power Connection

Once all speakers and audio/video connections are made, plug the power cord of the main DVD player unit into a standard AC power outlet. The system is now ready for initial power-on.

OPERATING INSTRUCTIONS

Basic Playback (DVD/CD)

1. Press the **POWER** button on the unit or remote control to turn on the system.
2. Press the **OPEN/CLOSE** button to open the disc tray.
3. Place a DVD or CD disc gently onto the tray with the label side facing up.
4. Press the **OPEN/CLOSE** button again to close the tray.
5. The system will automatically begin playback or display the disc menu. Use the navigation buttons on the remote to select options.

USB Playback

1. Insert a USB flash drive into the USB input port on the front panel.
2. Press the **MODE** or **INPUT** button on the remote or unit to select USB mode.
3. Navigate through your files using the remote control's directional buttons and press **ENTER** to play.

FM Radio

1. Press the **MODE** or **INPUT** button to select FM radio mode.
2. Press the **SCAN** button to automatically scan and save available radio stations.
3. Use the **PREV/NEXT** buttons to cycle through saved stations.

Karaoke Function

1. Connect up to two microphones to the **MIC 1** and **MIC 2** jacks on the front panel.
2. Adjust microphone volume using the **MIC VOL** knob.
3. Use the **ECHO** knob to add an echo effect to your vocals.

Remote Control Usage

The included remote control provides full functionality for your home theater system. Ensure batteries are inserted correctly. Point the remote directly at the main unit's sensor for best performance.

MAINTENANCE

Cleaning

Wipe the unit and speakers with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents. For stubborn stains, use a slightly damp cloth and then dry immediately.

Storage

If the system will not be used for an extended period, unplug it from the power outlet and store it in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet faulty	Ensure power cord is securely plugged in; Try a different outlet.
No sound	Volume too low; Speakers not connected; Incorrect input selected	Increase volume; Check speaker connections; Select correct input source.
Disc not playing	Disc inserted incorrectly; Disc is dirty/scratched; Unsupported disc format	Reinsert disc correctly; Clean disc; Ensure disc format is supported (DVD/CD/VCD/SVCD/MP3/Picture CD/CD-R/CD-RW).
Remote control not working	Batteries dead/incorrectly inserted; Obstruction between remote and unit	Replace batteries; Ensure correct polarity; Remove obstructions; Point remote directly at sensor.

SPECIFICATIONS

Feature	Detail
Model	SC-38HT
Audio Channels	5.1 Channel Surround Sound
Supported Disc Formats	DVD/CD/VCD/SVCD/MP3/Picture CD/CD-R/CD-RW
Connectivity	USB Input, RCA Audio/Video Output
Special Features	2 Karaoke Microphone Jacks, FM Radio
Product Dimensions (Main Unit)	Approximately 23 x 16 x 18 inches (L x W x H)
Item Weight	Approximately 1 pound (total system weight may vary)
Power Source	Battery Powered (Note: This specification may refer to the remote control or a specific component; the main unit typically requires AC power.)
Manufacturer	Supersonic Inc.

WARRANTY AND SUPPORT

This product is covered by a limited warranty from the date of purchase. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact Supersonic customer service. Contact information can typically be found on the manufacturer's website or on the product packaging.