

[Manuals.plus](#) /

› [YosaToo](#) /

› YosaToo KIDS712 7-inch Kids Tablet User Manual

## YosaToo KIDS712

# YosaToo KIDS712 7-inch Kids Tablet User Manual

Model: KIDS712

## 1. INTRODUCTION

---

This manual provides essential information for the safe and effective use of your YosaToo KIDS712 7-inch Kids Tablet. Please read this guide thoroughly before operating the device and retain it for future reference. This tablet is designed for children aged 3 and up, featuring a durable case and parental control functionalities.



Image: The YosaToo KIDS712 Kids Tablet, showcasing its protective case and user interface.

## 2. WHAT'S IN THE BOX

---

Verify that all items are present upon unboxing:

- YosaToo KIDS712 7-inch Kids Tablet
- Charging Cable
- Power Adapter (Charger)
- User Manual (this document)

## 3. PRODUCT OVERVIEW

---

The YosaToo KIDS712 tablet features a 7-inch HD display and is encased in a durable, child-friendly protective cover, often designed with a penguin theme. It includes dual cameras for photos and videos.

### Key Features:

- **7-inch HD Screen:** Provides clear visuals for educational content and entertainment.
- **Kid-Proof Case:** Designed to protect against drops and bumps, with handles for easy carrying and viewing.

- **Dual Cameras:** Front and rear cameras for capturing moments.
- **Parental Controls:** Integrated software for managing content, screen time, and app access.
- **Expandable Storage:** 32GB internal storage, expandable up to 64GB via TF card.



Image: The tablet's kid-proof case demonstrating its protective capabilities.

## 4. SETUP GUIDE

---

### 4.1 Initial Charging

Before first use, fully charge the tablet using the provided charging cable and power adapter. Connect the cable to the tablet's charging port and the adapter to a power outlet. The charging indicator will show the charging status.

### 4.2 Power On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the screen lights up.
- **To Power Off:** Press and hold the Power button, then select 'Power Off' from the options that appear on the screen.

### 4.3 Wi-Fi Connection

To access online content and download apps, connect the tablet to a Wi-Fi network:

1. Go to **Settings**.
2. Select **Network & Internet**, then **Wi-Fi**.
3. Turn on Wi-Fi and select your desired network from the list.
4. Enter the network password if prompted, then tap **Connect**.

### 4.4 Parental Control Setup (iWawa App)

The tablet comes with the iWawa app, which provides robust parental control features:

1. Launch the **iWawa** app from the tablet's main screen.
2. Enter the parent control mode (usually requires a password setup during initial use).
3. **Create Kid Profiles:** Set up individual profiles for each child.
4. **Manage Apps:** Add or block specific applications.
5. **Filter Content:** Control access to websites and media.
6. **Set Screen Time Limits:** Define daily usage limits for each profile.

These settings can be adjusted as your child grows. You can exit child mode with a password to access the full Android environment.

# Easy-to-Use Parent Control



Image: Demonstrating the easy-to-use parental control features of the tablet.

## 5. OPERATING INSTRUCTIONS

### 5.1 Navigating the Interface

The tablet runs on Android 10. Basic navigation includes:

- **Swipe:** Move your finger across the screen to scroll through pages or lists.
- **Tap:** Touch an icon or item to open or select it.
- **Pinch-to-Zoom:** Use two fingers to zoom in or out on images or web pages.
- **Home Button:** Returns to the main home screen.
- **Back Button:** Returns to the previous screen.

### 5.2 Downloading Applications

The tablet has access to the Google Play Store for downloading additional apps:

1. Ensure the tablet is connected to Wi-Fi.
2. Open the **Google Play Store** app.
3. Search for desired apps.

4. Tap **Install** to download and install the app.
5. Parents can then add these new apps to their child's profile via the iWawa parental control settings.



Image: The Google Certified Play Store, illustrating the variety of available applications.

### 5.3 Managing Storage

The tablet comes with 32GB of internal storage. If more space is needed, a Micro SD (TF) card up to 64GB can be inserted into the designated slot to expand storage for photos, videos, and apps.

### 5.4 Using the Cameras

The tablet is equipped with front and rear cameras. Open the Camera app to take photos or record videos. The resolution for the rear camera is 12 MP.

## Available On the GO

### Essential for Kids Camping/Road Trip



Image: The 7-inch HD screen and dual camera feature of the tablet.

## 6. MAINTENANCE

---

### 6.1 Cleaning

To maintain good touch screen function and overall cleanliness, wipe the tablet screen and case with a soft, dry, lint-free cloth. Do not use liquid cleaners or sprays directly on the tablet. The tablet is **not waterproof**.

### 6.2 Battery Care

To maximize battery life (up to 6 hours on a full charge):

- Always use the original charging cable and adapter.
- Turn off the tablet when not in use to conserve power.
- Avoid extreme temperatures.

### 6.3 Software Updates

Periodically check for system updates in the tablet's settings to ensure optimal performance and security. Updates typically require a Wi-Fi connection.

## 7. TROUBLESHOOTING

If you encounter issues with your YosaToo KIDS712 tablet, refer to the following common solutions:

| Problem                                       | Possible Solution                                                                                                                                                                      |
|-----------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Tablet does not power on                      | Ensure the tablet is fully charged. Connect to the charger for at least 30 minutes before attempting to power on again.                                                                |
| Slow performance or freezing                  | Close unused applications. Clear cache for frequently used apps. Restart the tablet. Consider uninstalling unnecessary apps or moving media to an SD card to free up internal storage. |
| Wi-Fi connection issues                       | Check if Wi-Fi is enabled in settings. Restart your Wi-Fi router. Forget the network and reconnect. Ensure you are within range of the Wi-Fi signal.                                   |
| Charging problems                             | Verify that the charging cable and adapter are securely connected and undamaged. Try a different power outlet. Ensure the charging port on the tablet is clean and free of debris.     |
| Screen unresponsive or partially unresponsive | Restart the tablet. Ensure the screen is clean and dry. If the issue persists, contact customer support.                                                                               |

If these steps do not resolve the issue, please contact YosaToo customer support for further assistance.

## 8. SPECIFICATIONS

Detailed technical specifications for the YosaToo KIDS712 tablet:

- **Model:** KIDS712
- **Screen Size:** 7 Inches
- **Screen Resolution:** 1024x600
- **Operating System:** Android 10
- **Processor:** 1.5 GHz Quad-Core (Allwinner)
- **RAM:** 1 GB
- **Internal Storage:** 32 GB SSD
- **Expandable Storage:** Up to 64 GB via TF Card
- **Graphics Coprocessor:** CORTEX-A35
- **Rear Webcam Resolution:** 12 MP
- **Battery Type:** Lithium-Ion (1 included)
- **Average Battery Life:** Approximately 5-6 Hours
- **Connectivity:** Wi-Fi, Bluetooth
- **Product Dimensions:** 10.04 x 5.79 x 0.59 inches
- **Item Weight:** 14.4 ounces

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official YosaToo website. Protection plans may be available for extended coverage.

For customer service inquiries, please contact the seller directly through your purchase platform or the YosaToo support channels.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B08L744VCP>

More documents and user manuals: <https://manuals.plus/>