

[Manuals.plus](#) /

- › [Epson](#) /
- › Epson VS260 3-Chip 3LCD XGA Projector User Manual

Epson V11H971220

Epson VS260 3-Chip 3LCD XGA Projector User Manual

Model: VS260 (V11H971220)

1. PRODUCT OVERVIEW

The Epson VS260 is a versatile 3-Chip 3LCD XGA Projector designed for clear and bright projections in various environments, from well-lit rooms to outdoor settings. It offers 3,300 lumens of color and white brightness, XGA resolution, and a 15,000:1 contrast ratio for crisp images and text.



Figure 1: Front-right view of the Epson VS260 Projector, showcasing its compact design and lens.

2. WHAT'S IN THE BOX

Upon opening the package, ensure all the following components are present:

- Epson VS260 Projector
- Power Cable
- Projector Remote Control
- Batteries (for remote control)
- Quick Start Guide

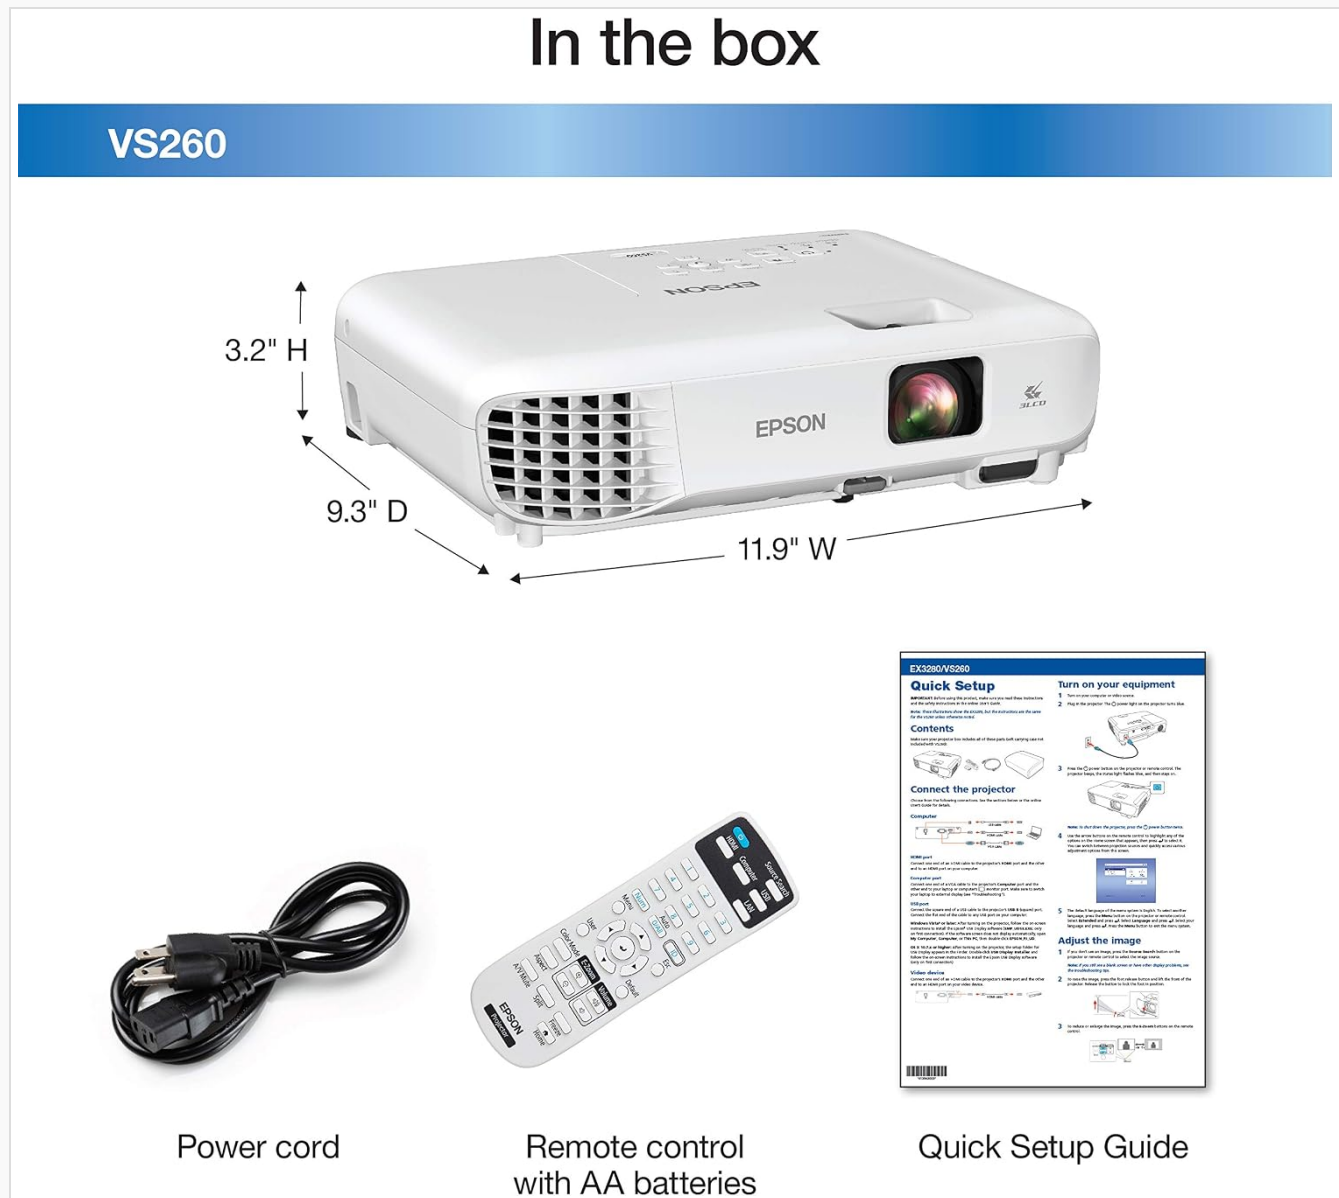


Figure 2: All items included in the Epson VS260 projector packaging.

3. SETUP GUIDE

3.1 Physical Placement

Place the projector on a stable, flat surface. Consider the distance from the projection surface (wall or screen) to achieve your desired image size. The projector measures approximately 14.9 x 13 x 6 inches and weighs 5.3 pounds.

3.2 Power Connection

1. Connect the supplied power cable to the projector's power input port.
2. Plug the other end of the power cable into a working electrical outlet.

3.3 Connecting Devices

The VS260 projector offers versatile connectivity options:

- **HDMI Port:** For high-definition video and audio from devices like laptops, streaming sticks (Fire TV, Apple TV, Roku, Chromecast), and gaming consoles.
- **USB Ports (Type A & Type B):** For connecting USB devices or for direct display from a computer.
- **Computer (VGA) Port:** For connecting older computers or laptops using a VGA cable.
- **Audio/Video (RCA) Ports:** For standard definition video and stereo audio input.
- **S-Video Port:** For S-Video input.



Figure 3: Rear panel of the projector displaying the HDMI, USB, Computer (VGA), and other input ports.

3.4 Image Adjustment

The projector features a built-in picture skew sensor that automatically analyzes the picture and instantly corrects the keystone to help square the image, even if the projector is placed at an angle. Manual adjustments can also be made using the controls on the projector or remote.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

1. To power on, press the **Power** button on the projector's control panel or the remote control. The power indicator light will turn green.
2. To power off, press the **Power** button again. Confirm shutdown if prompted.

4.2 Source Selection

Use the **Source Search** button on the control panel or remote to cycle through available input sources (HDMI, USB, Computer, etc.) until your desired source is displayed.



Figure 4: Top control panel with power, menu, source search, and navigation buttons.

4.3 Image and Audio Adjustments

- **Brightness and Contrast:** The projector delivers 3,300 lumens of color and white brightness and a 15,000:1 contrast ratio. Adjust these settings via the projector's menu to suit your viewing environment.
- **Built-in Speaker:** The VS260 includes a built-in speaker for convenient audio output.
- **External Audio:** For enhanced audio experience, connect external speakers to your source device (e.g., laptop, streaming stick) as the projector itself does not have an audio output jack.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your projector.

- **Lamp Care:** Monitor the 'Lamp Temp' indicator on the control panel. Ensure proper ventilation around the projector to prevent overheating, which can shorten lamp life. Replace the lamp when its lifespan is reached or brightness significantly diminishes.
- **Cleaning:** Regularly clean the projector's lens with a soft, lint-free cloth. Use compressed air to clear dust from the air vents.
- **Storage:** When not in use for extended periods, store the projector in a cool, dry place, ideally in its original packaging or a protective case.

6. TROUBLESHOOTING

If you encounter issues with your projector, refer to the following common problems and solutions:

- **No Image Displayed:**
 - Ensure the projector is powered on and the power indicator is green.
 - Verify that the input source is correctly connected and selected (use the Source Search button).
 - Check the source device (laptop, streaming stick) to ensure it is outputting a signal.
- **Image is Blurry or Distorted:**
 - Adjust the focus ring on the projector lens until the image is sharp.
 - Utilize the keystone correction feature (manual or automatic) to square the image if it appears trapezoidal.
 - Ensure the projection surface is flat and smooth.
- **No Sound:**
 - Check the volume level on both the projector and the source device.
 - If using external speakers, ensure they are properly connected to the source device and powered on.
 - Verify that the audio output from your source device is enabled.
- **Projector Overheating:**
 - Ensure the projector's vents are not blocked and there is adequate airflow around the unit.
 - Clean any dust accumulation from the vents.
 - Operate the projector in a well-ventilated area.

For further assistance, refer to the official User Guide PDF or contact Epson technical support.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	14.9 x 13 x 6 inches
Item Weight	5.3 pounds
Item Model Number	V11H971220
Brand	Epson
Recommended Uses	Education, Home Cinema, Business
Special Feature	Built-In Speaker, Portable

Connectivity Technology	USB, HDMI
Display Resolution	1024 x 768 (XGA)
Color Brightness	3,300 Lumens
White Brightness	3,300 Lumens
Contrast Ratio	Up to 15,000:1

8. WARRANTY AND SUPPORT

The Epson VS260 Projector comes with a standard 1-year limited warranty, which includes full-unit replacement. Free technical phone support is available for the life of the product.

For detailed warranty information or to access the complete user guide, please refer to the official documentation provided with your product or visit the Epson support website.

You can also download the User Guide (PDF) from the following link:[Epson VS260 User Guide](#)