

## Powermatic ANICEMOON

# Powermatic 4 Electric Cigarette Machine User Manual

Model: ANICEMOON

## 1. INTRODUCTION

Thank you for choosing the Powermatic 4 Electric Cigarette Machine. This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your device. Please read this manual thoroughly before first use and keep it for future reference.

The Powermatic 4 is designed to quickly and efficiently produce cigarettes, capable of making approximately one cigarette per second. It features an integrated obstruction indicator and a durable titanium tobacco injection spoon, suitable for both standard and extra-long cigarette filters.

## 2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Do not operate the machine with a damaged cord or plug, or if it has been dropped or damaged.
- Keep the machine away from water or other liquids. Do not immerse the machine in water.
- Unplug the machine from the outlet when not in use and before cleaning.
- Use only the provided power adapter.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Always distribute tobacco evenly across the chamber. **Never overfill** by applying excessive force, as this can damage the machine and lead to blockages.
- Use only dry, shredded tobacco suitable for cigarette machines. Moist or overly coarse tobacco can cause jamming.

### 3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Powermatic 4 machine:



**Main Unit:** The core machine housing, containing the motor and injection mechanism. Features a clear tobacco hopper and a cigarette tube holder.



**Tobacco Hopper:** The transparent container at the top where tobacco is loaded.



**Cigarette Tube Holder:** The brass-colored nozzle on the side where the empty cigarette tube is placed.



**Accessories:** Includes a power adapter, a small cleaning brush, and a cleaning rod for maintenance.



**Power Port:** Located at the rear of the machine for connecting the power adapter.

### 4. SETUP AND FIRST USE

- Unpack:** Carefully remove the Powermatic 4 machine and all accessories from the packaging.
- Placement:** Place the machine on a stable, flat, and dry surface.
- Connect Power:** Insert the small end of the power adapter into the power port at the rear of the machine. Plug the other end into a suitable electrical outlet.
- Prepare Tobacco:** Ensure your tobacco is dry and shredded to an appropriate consistency for cigarette machines. Remove any stems or large pieces.

## 5. OPERATING INSTRUCTIONS

Follow these steps to make a cigarette:

- Load Tobacco:** Place a small amount of prepared tobacco into the tobacco hopper. Use the provided titanium injection spoon to distribute the tobacco evenly across the chamber. **CAUTION:** Do not overfill or pack the tobacco too tightly, as this can cause jamming and damage.
- Insert Cigarette Tube:** Carefully slide an empty cigarette tube onto the brass-colored nozzle on the side of the machine. Ensure it is fully seated.
- Activate:** Press and hold the operating lever (usually located on the side or top). The machine will automatically inject the tobacco into the tube.
- Remove Cigarette:** Once the injection is complete, release the lever and carefully remove the filled cigarette from the nozzle.
- Repeat:** Repeat the process for each cigarette.

The Powermatic 4 is designed for speed, allowing you to make approximately one cigarette per second under optimal conditions.

## 6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your machine.

- Daily Cleaning:** After each use, unplug the machine. Use the provided cleaning brush to remove any loose tobacco from the hopper and around the injection mechanism.
- Clearing Obstructions:** The machine has an integrated obstruction indicator. If the machine stops or struggles, unplug it immediately. Use the cleaning rod to gently clear any tobacco blockages from the injection chamber or nozzle. Never use sharp or metallic objects that could scratch or damage the components.
- External Cleaning:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or immerse the machine in water.
- Storage:** Store the machine in a clean, dry place when not in use.

## 7. TROUBLESHOOTING GUIDE

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet issue; damaged cord/adapter.	Ensure power cord is securely plugged into machine and outlet. Test outlet with another device. Contact customer support if cord/adapter is damaged.
Tobacco not injecting or machine jams.	Tobacco too wet/coarse; overfilling; obstruction.	Use dry, finely shredded tobacco. Do not overfill the hopper. Clear any obstructions using the cleaning rod.
Cigarettes are unevenly filled.	Uneven tobacco distribution; incorrect tobacco type.	Ensure tobacco is evenly distributed in the hopper. Use tobacco specifically designed for electric cigarette machines.
Machine makes unusual noises.	Internal obstruction; mechanical issue.	Unplug and check for any visible obstructions. If the noise persists, discontinue use and contact customer support.

## 8. TECHNICAL SPECIFICATIONS

- Brand:** Powermatic
- Model Number:** ANICEMOON
- Product Dimensions (L x W x H):** 16 x 11.8 x 10.7 cm (approximately 6.3 x 4.6 x 4.2 inches)
- Item Weight:** 1.03 Kilograms (approximately 2.27 lbs)
- Features:** Integrated obstruction indicator, titanium tobacco injection spoon, suitable for standard and extra-long filters.

## 9. WARRANTY INFORMATION

This product comes with a standard manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included in your product packaging or visit the official Powermatic website. Keep your proof of purchase for warranty claims.

## 10. CUSTOMER SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact Powermatic customer support. Contact information can typically be found on the product packaging, the official Powermatic website, or through your retailer.

For online resources, you may visit the official Powermatic website or search for support forums related to Powermatic products.

© 2024 Powermatic. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

## Related Documents - ANICEMOON

	<p><a href="#"><u>Powermatic 4 Plus Cigarette Injector User Manual and Operating Guide</u></a></p> <p>Comprehensive user manual for the Powermatic 4 Plus electric cigarette injector, detailing its features, operation, safety guidelines, and warranty information. Designed for personal use with volume tobacco.</p>
	<p><a href="#"><u>Powermatic 5 Cigarette Injector User Manual</u></a></p> <p>User manual for the Powermatic 5 automatic cigarette tube injector, providing instructions for operation, features, and warranty information in multiple languages.</p>
	<p><a href="#"><u>Powermatic Accu-Fence® and Rail System Operating Instructions and Parts Manual</u></a></p> <p>Comprehensive operating instructions and parts manual for the Powermatic Accu-Fence® and Rail System, designed for 64A, 64B, and PM1000 Table Saws. Includes assembly, adjustments, troubleshooting, and parts lists.</p>
	<p><a href="#"><u>Powermatic Model 87 20" Metal Cutting Band Saw Maintenance Instructions and Parts List</u></a></p> <p>Comprehensive maintenance instructions, parts list, specifications, safety guidelines, and troubleshooting tips for the Powermatic Model 87 20-inch metal cutting band saw.</p>
	<p><a href="#"><u>Powermatic PM2000B &amp; PM2000BT 10-inch Cabinet Saw: Operating Instructions and Parts Manual</u></a></p> <p>This comprehensive manual from Powermatic details the safe operation, setup, maintenance, and parts for the PM2000B and PM2000BT 10-inch Cabinet Saws. Essential reading for woodworking professionals and serious hobbyists.</p>
	<p><a href="#"><u>Powermatic Model 26 Shaper: Maintenance Instructions and Parts List</u></a></p> <p>This manual provides detailed maintenance instructions, safety guidelines, specifications, and a comprehensive parts list for the Powermatic Model 26 Shaper. It covers operation, adjustments, and troubleshooting for woodworking professionals.</p>

