

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [YISENCE](#) /

› [YISENCE DV806 Waterproof Digital Camera User Manual](#)

YISENCE DV806

YISENCE DV806 Waterproof Digital Camera User Manual

Model: DV806 (YSBU-WC001)

Brand: YISENCE

PRODUCT OVERVIEW

The YISENCE DV806 is a versatile waterproof digital camera designed for capturing high-quality photos and videos in various environments, including underwater. It features dual screens for easy selfies and a robust design suitable for active use.

- **High Resolution:** Captures MAX 2.7K 20fps video and 48 MP still images.
- **Waterproof Design:** Submersible up to 11 feet (3.3 meters) for up to one hour per use without additional casing.
- **Dual Screens:** Equipped with a rear 2.7-inch LCD display and a front 1.8-inch LCD display for convenient self-portraits.
- **User-Friendly:** Compact, lightweight, and easy to operate, making it suitable for all ages.
- **Additional Features:** Includes built-in self-timer (2s, 5s, 10s), continuous shooting mode, and supports recording while charging.



Image: Front and back view of the YISENCE DV806 Waterproof Digital Camera, highlighting its dual screen design.

What's in the Box

Upon unboxing your YISENCE DV806 camera, you should find the following items:

- YISENCE DV806 Digital Camera
- USB Cable
- Rechargeable Battery
- Instruction Manual (this document)
- Drawstring Pouch
- Hand Loop String (Rope)
- 32GB Micro SD Card (pre-included)



Camera



charger



Pouch



Battery



Rope



USB cable

Image: All components included with the YISENCE DV806 camera: the camera unit, charger, drawstring pouch, rechargeable battery, hand loop string, and USB cable.

SETUP

Battery and Memory Card Installation

Before first use, ensure the battery is fully charged and the Micro SD card is properly inserted. The battery compartment is designed to be tightly sealed for waterproofing.

1. **Open Battery Compartment:** Locate the battery door on the side of the camera. With one hand, press the cover lock. Simultaneously, use your other hand (or a small tool) to push out the battery cover. This action will release the latch and allow the door to open.
2. **Insert Battery:** Insert the provided rechargeable battery into the compartment, ensuring correct polarity as

indicated inside the compartment.

3. **Insert Micro SD Card:** Locate the Micro SD card slot next to the battery. Gently push the 32GB Micro SD card (or your own up to 128GB) into the slot until it clicks into place.
4. **Close Battery Compartment:** Carefully close the battery door, ensuring it clicks securely into place. **It is crucial that the battery door is well-locked before any water exposure to maintain waterproofing.**

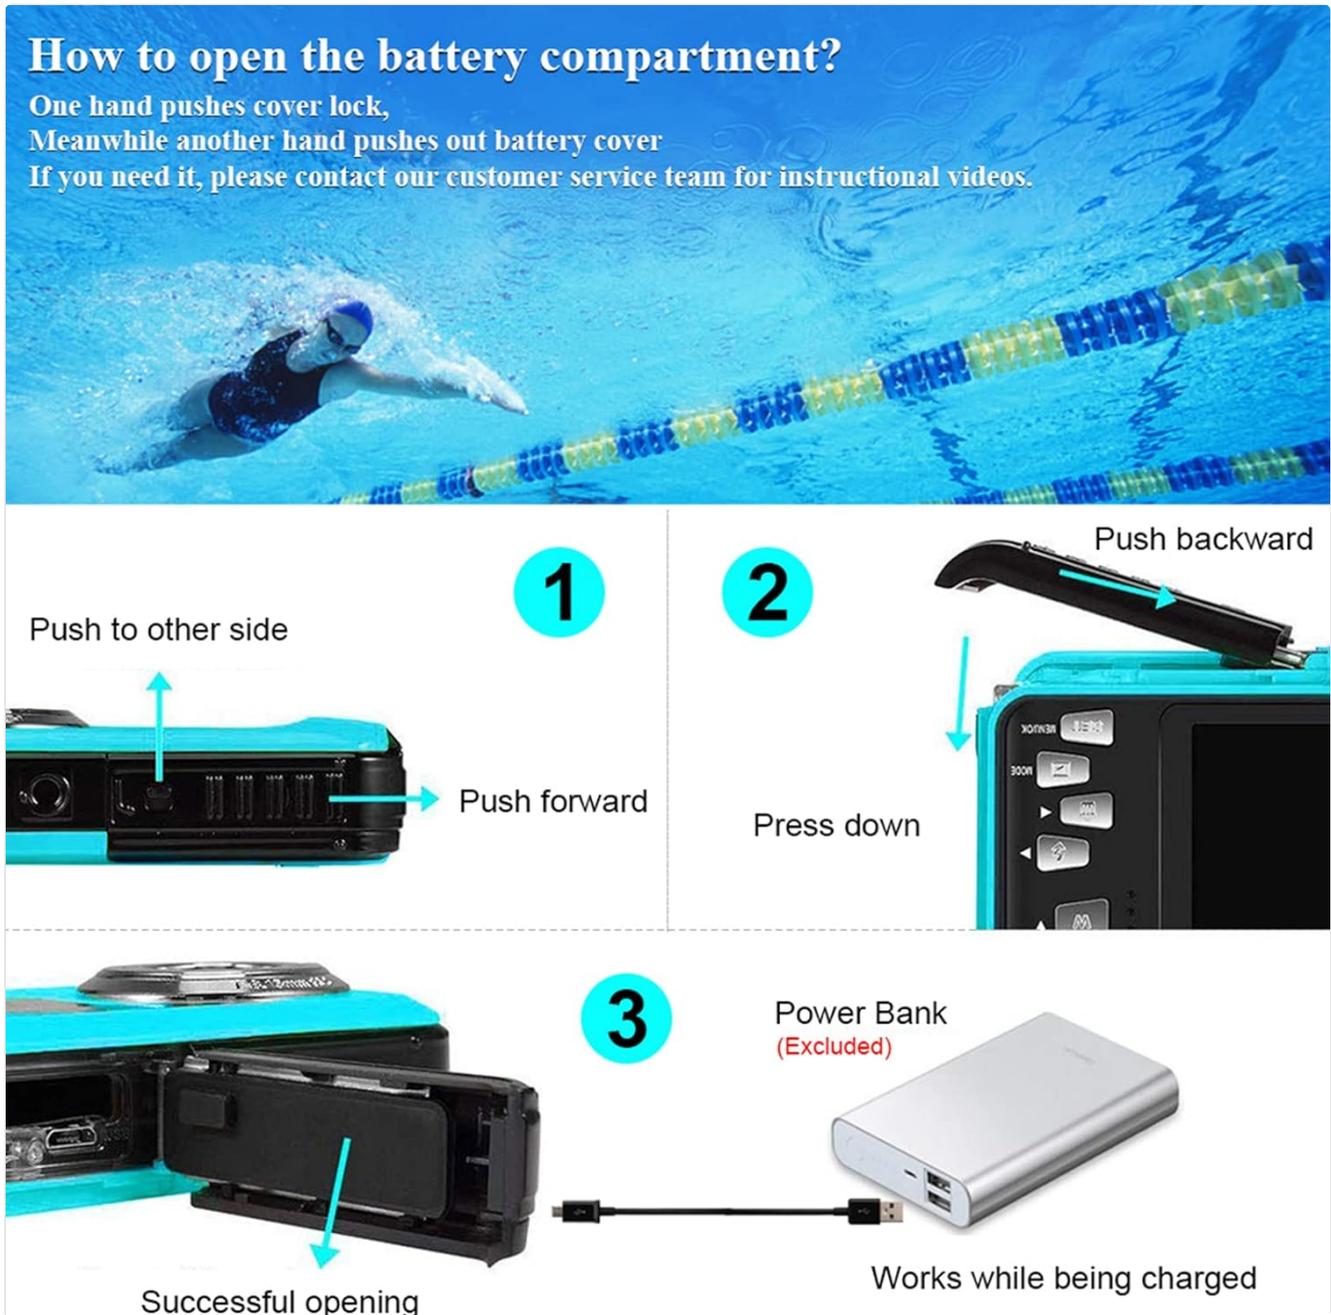


Image: Step-by-step guide on how to safely open the battery compartment of the camera.

Your browser does not support the video tag.

Video: Official Yisence Tech guide on how to open the battery cover of the waterproof camera.

Charging the Battery

Connect the camera to a power source using the provided USB cable. The camera supports recording while charging, allowing for extended use during your adventures.

OPERATING INSTRUCTIONS

Power On/Off

Press and hold the power button (usually located on the top or side) to turn the camera on or off.

Taking Photos and Recording Videos

Use the shutter button to capture photos. To switch to video mode, locate the mode button (often labeled 'MODE') and press it until the video icon appears on the screen. Press the shutter button again to start/stop recording.

Dual Screen Functionality

The camera features a main rear screen and a smaller front screen. The front screen is ideal for self-portraits (selfies) or group photos, allowing you to frame your shot perfectly. The camera also has a built-in self-timer (2s, 5s, 10s) for added convenience.



Image: The dual screen design of the camera, with a girl using the front screen for a selfie, demonstrating its utility for self-portraits.

Continuous Shooting

Activate continuous shooting mode to capture a rapid sequence of photos, ensuring you don't miss any action, especially useful for fast-moving subjects or dynamic scenes.

Continuous Shooting



Record while Charging



Power Bank
Not Included

Image: An underwater shot of a couple, demonstrating the camera's continuous shooting capability and its ability to record while being charged.

Underwater Use

The camera is designed for underwater use up to 11 feet (3.3 meters) for one hour per session. For best results, hold the camera statically for a few seconds when taking photos underwater to ensure clarity. Always double-check that the battery compartment is securely sealed before entering water.

Enjoy Your Life



Image: An illustration of the camera's use in various recreational settings, including surfing, snorkeling, and family activities, highlighting its suitability for diverse "Enjoy Your Life" moments.

Zoom and Flash

The camera features 16x digital zoom. Use the zoom buttons (often labeled 'W' for wide and 'T' for telephoto) to adjust your focal length. The built-in flashlight can be activated for improved visibility in dark or dim lighting conditions.

MAINTENANCE

Waterproofing Precautions

- Always ensure the battery compartment is completely sealed before submerging the camera.
- Do not open the battery compartment when the camera is wet or submerged.
- After using the camera in saltwater, rinse it thoroughly with fresh water and dry it completely before opening any compartments.

Cleaning and Storage

- Wipe the camera body with a soft, damp cloth. Avoid abrasive cleaners.

- Clean the lens gently with a microfiber cloth designed for optics.
- Store the camera in a cool, dry place, away from direct sunlight and extreme temperatures. Use the provided drawstring pouch for protection.

TROUBLESHOOTING

If you encounter issues with your YISENCE DV806 camera, please refer to the following common solutions:

Problem	Possible Solution
Camera does not power on.	Ensure the battery is fully charged and correctly inserted.
Poor image quality (blurry/dark).	Check lighting conditions; use flash if necessary. Ensure the lens is clean. Hold the camera steady, especially underwater.
Camera not recognized by computer.	Ensure the USB cable is securely connected to both the camera and the computer. Try a different USB port.
Water leakage.	Immediately remove the camera from water. Open the battery compartment and dry thoroughly. Ensure the battery door is properly sealed before future use. If leakage persists, contact customer support.
Memory card error.	Ensure the Micro SD card is inserted correctly. Try reformatting the card (this will erase all data). Try a different compatible Micro SD card.

SPECIFICATIONS

Feature	Detail
Brand	YISENCE
Model Name	DV806
Model Number	YSBU-WC001
Maximum Image Resolution	48 MP
Video Resolution	2.7K (20fps), 1080P
Water Resistance Level	Waterproof (up to 11 feet / 3.3 meters)
Front Screen Size	1.8 Inches LCD
Rear Screen Size	2.7 Inches LCD
Digital Zoom	16x
Image Stabilization	Digital
Flash Memory Type	SD, Micro SD (up to 128GB)
Battery Type	Lithium Ion (650 mAh)

Feature	Detail
Item Weight	4.41 ounces (125 grams)
Item Dimensions (D x W x H)	0.79"D x 3.15"W x 2.76"H
Connectivity Technology	USB (Micro USB 2.0)
Continuous Shooting	30 fps
Supported File Format	JPEG (Image), MP4 (Video)

WARRANTY AND SUPPORT

The YISENCE DV806 Waterproof Digital Camera comes with a **1-year manufacturer's warranty**.

For any questions, technical assistance, or warranty claims, please contact YISENCE customer service. Refer to the contact information provided on the product packaging or the official YISENCE website.

YISENCE places great importance on customer feedback and is committed to providing friendly after-sale service.

Documents - YISENCE – DV806

no relevant documents