

## TERIOS B09VGWMLWX

# TERIOS Wireless Controller User Manual

Model: TERIOS P4-SS

## 1. INTRODUCTION

Thank you for choosing the TERIOS Wireless Controller. This controller is designed to provide an immersive and precise gaming experience, compatible with PlayStation 4, PS4 Pro, and PS4 Slim consoles. Featuring a comfortable ergonomic design, responsive controls, and advanced functionalities, it enhances your gameplay across various titles.



Image: Front view of the TERIOS Wireless Controller.

## 2. KEY FEATURES

- **Wide Compatibility:** Fully compatible with PlayStation 4, PS4 Pro, and PS4 Slim consoles.
- **Ergonomic Design:** Designed for comfortable grip and extended gaming sessions, featuring textured handles.
- **Dual Analog Sticks:** Provides precise control for enhanced gameplay accuracy.
- **Built-in Speaker & Stereo Headset Jack:** Offers immersive audio directly from the controller and supports external headsets.
- **Multitouch Pad:** Interactive touchpad for additional control options in supported games.
- **Vibration Feedback:** Dual shock motors provide immersive haptic feedback for realistic in-game sensations.
- **Turbo Function:** Enables rapid-fire functionality for selected buttons with a single click.
- **Rechargeable Lithium Battery:** High-capacity 1000mAh battery provides 12-14 hours of continuous use on a full

charge.



Image: Overview of controller features including 3.5mm jack, speaker, touchpad, wireless, vibration, turbo, and 1000mAh battery.

### 3. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- 1 x TERIOS Wireless Controller
- 1 x USB Charging Cable
- 2 x Thumb Grip Caps (optional use)
- 1 x User Manual (this document)



## 4. SETUP AND CONNECTION

---

### 4.1 Initial Pairing

1. Ensure your PS4 console is powered on.
2. Connect the TERIOS Wireless Controller to your PS4 console using the provided USB charging cable.
3. Press the **PS button** (located between the analog sticks) on the controller. The light bar will flash.
4. Once the light bar turns solid, the controller is successfully paired and ready for use.
5. You can now disconnect the USB cable for wireless play.

### 4.2 Reconnecting Wirelessly

After initial pairing, the controller will automatically connect to your PS4 console when you press the **PS button**, provided the console is on and within range.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Basic Controls

The TERIOS Wireless Controller features standard PlayStation button layouts:

- **Directional Pad (D-Pad):** For directional input.
- **Action Buttons (Triangle, Circle, Cross, Square):** For in-game actions.
- **Analog Sticks (L3/R3):** For movement and camera control. Pressing them down activates L3/R3 buttons.
- **Shoulder Buttons (L1, R1) & Triggers (L2, R2):** For various in-game functions.
- **SHARE Button:** For sharing gameplay screenshots and videos.
- **OPTIONS Button:** For accessing in-game menus and options.
- **PS Button:** For turning on the console, accessing the PS Home screen, and turning off the controller.
- **Touch Pad:** Functions as a clickable button and a multi-touch surface for specific game interactions.



*Image: Close-up view highlighting the dual analog sticks for precise control.*

## 5.2 Turbo Function

The Turbo function allows for rapid, continuous input of a button press. To activate:

1. Press and hold the **TURBO** button.
2. While holding TURBO, press the action button (e.g., X, Square, Circle, Triangle, L1, R1, L2, R2) you wish to apply the turbo function to.
3. Release both buttons. The selected button will now continuously register input when held down.
4. To deactivate the Turbo function for a specific button, repeat the process. To clear all turbo settings, press the **CLEAR** button.



Image: Illustration showing the Turbo button and its application for rapid-fire.

## 5.3 Vibration Feedback

The controller features dual vibration motors that provide tactile feedback during gameplay, enhancing immersion. This feature is automatically enabled when supported by the game.



Image: Visual representation of the dual shock vibration feature.



## 6. CHARGING THE CONTROLLER

The TERIOS Wireless Controller is equipped with a built-in rechargeable lithium battery. To charge the controller:

1. Connect the provided USB charging cable to the micro USB port on the front of the controller.
2. Connect the other end of the USB cable to a USB port on your PS4 console or a compatible USB wall adapter (5V/1A recommended).
3. The light bar on the controller will slowly pulse orange while charging.
4. Once fully charged (approximately 2-3 hours), the light bar will turn off.

A full charge provides approximately 12-14 hours of continuous gameplay.



Image: Diagram illustrating the 1000mAh battery, charging time, and continuous use duration.

## 7. MAINTENANCE AND CARE

- Keep the controller dry and away from moisture.
- Avoid exposing the controller to extreme temperatures.
- Clean the controller with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store the controller in a safe place to prevent damage from drops or impacts.
- Do not attempt to disassemble or modify the controller, as this will void the warranty.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Controller does not connect/pair.	Not properly paired; low battery; interference.	Ensure the controller is charged. Connect the controller to the PS4 via USB cable and press the PS button to re-pair. Try resetting the controller (small hole on the back, use a pin).

Problem	Possible Cause	Solution
Controller disconnects frequently.	Out of range; interference; low battery.	Move closer to the console. Ensure no other wireless devices are causing interference. Charge the controller fully.
Buttons or analog sticks are unresponsive.	Software glitch; physical damage; dirt/debris.	Reset the controller. Ensure the controller firmware is up to date (if applicable, check manufacturer website). Clean around buttons and sticks carefully.
Audio issues (clicking/popping) from headset jack.	Bluetooth audio interference; hardware limitation.	Try using the controller in wired mode for audio (connect USB before powering on controller). Adjust system volume settings. If issues persist, consider using an external audio solution.

## 9. SPECIFICATIONS

Feature	Detail
Model	TERIOS P4-SS
Compatibility	PlayStation 4, PS4 Pro, PS4 Slim
Connectivity	Wireless (Bluetooth), Wired (USB)
Battery Type	Rechargeable Lithium Battery
Battery Capacity	1000mAh
Charging Time	Approx. 2-3 hours
Continuous Use Time	Approx. 12-14 hours
Audio Features	Built-in Speaker, 3.5mm Stereo Headset Jack
Input Features	Multitouch Pad, Dual Analog Sticks, Vibration Feedback, Turbo Function
Manufacturer	TERIOS
Date First Available	March 14, 2022

## 10. WARRANTY AND SUPPORT

TERIOS products are designed for quality and reliability. For technical support, warranty information, or any inquiries regarding your TERIOS Wireless Controller, please refer to the following resources:

- **Online Support:** Visit the official TERIOS website at [www.teriosgaming.com](http://www.teriosgaming.com)
- **Social Media:** Like us on Facebook @TeriosOfficial for updates and community support.

- **QR Code:** Scan the QR code on the product packaging for direct access to support resources.



*Image: Side view of the product box showing the technical support QR code and website/Facebook details.*