

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Godrej](#) /

> [Godrej Edge Pro 190L Direct Cool Single Door Refrigerator User Manual \(Model: RD EDGEPRO 205E 53 TAI JW WN\)](#)

Godrej RD EDGEPRO 205E 53 TAI JW WN

Godrej Edge Pro 190L Direct Cool Single Door Refrigerator User Manual

Model: RD EDGEPRO 205E 53 TAI JW WN

1. PRODUCT OVERVIEW

The Godrej Edge Pro 190L Direct Cool Single Door Refrigerator, Model RD EDGEPRO 205E 53 TAI JW WN, is designed for efficient food preservation. It features advanced inverter compressor technology, providing energy efficiency and consistent cooling. This model offers a generous 190-liter capacity, including the largest shelf space and a 20-liter vegetable tray in its segment, making it suitable for medium-sized families. Key features include toughened glass shelves with a 150 kg load-bearing capacity and an LED light for improved visibility.



Figure 1: Interior view of the Godrej Edge Pro 190L refrigerator, showcasing its spacious compartments, including the freezer, dairy tray, main shelves, and large vegetable crisper, filled with various food items.

2. SAFETY INFORMATION

Read all safety instructions carefully before using the appliance to prevent injury or damage. Keep this manual for future reference.

- **Electrical Safety:** Ensure the refrigerator is connected to a properly grounded power outlet. Do not use extension cords or multiple adapters.
- **Ventilation:** Maintain adequate space around the refrigerator for proper air circulation to prevent overheating.
- **Flammable Materials:** Do not store explosive substances or flammable materials inside or near the refrigerator.
- **Children Safety:** Keep children away from the appliance, especially when the door is open. Ensure they do not play with the refrigerator.
- **Cleaning:** Always unplug the refrigerator before cleaning or performing any maintenance.
- **Damage:** If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.

3. SETUP AND INSTALLATION

3.1 Unpacking

- Carefully remove all packaging materials, including tape and protective films.
- Inspect the refrigerator for any signs of damage during transit. Report any damage to your retailer immediately.
- Retain packaging materials for potential future transport or service.

3.2 Placement

- Place the refrigerator on a firm, level surface to ensure stability and proper operation.
- Ensure there is sufficient space (at least 10 cm) around the sides and back of the appliance for adequate ventilation.
- Avoid placing the refrigerator in direct sunlight or near heat sources such as stoves, radiators, or ovens, as this can increase energy consumption.
- The appliance is designed for indoor use only.

3.3 Electrical Connection

- Before plugging in, ensure the voltage and frequency specified on the rating plate match your household power supply.
- Connect the refrigerator to a dedicated, grounded 3-pin power outlet.
- Do not switch on the refrigerator immediately after moving it. Allow it to stand upright for at least 2-4 hours before plugging it in to allow the refrigerant to settle.

4. OPERATING INSTRUCTIONS

4.1 Temperature Control

The refrigerator features a touch control console for temperature adjustment. Refer to the specific markings on the control panel inside your refrigerator for precise settings. Generally, a medium setting is recommended for everyday use. Adjust to a colder setting if the ambient temperature is high or if you are storing a large quantity of food.

4.2 Food Storage Guidelines

- **General Compartment:** Store fresh foods, dairy products, and cooked meals. Ensure food is covered to prevent drying out and odor transfer.
- **Vegetable Tray:** The large 20-liter vegetable tray is ideal for keeping fruits and vegetables fresh for longer.



Figure 2: A close-up view of the spacious vegetable tray, designed to store a significant quantity of fresh produce.

- **Freezer Compartment:** Use for frozen foods and making ice. The freezer compartment is located at the top.



Figure 3: A detailed view of the freezer compartment labeled 'frozen foods' and the 'dairy' tray located beneath it, providing dedicated storage for specific items.

- **Door Shelves:** Suitable for bottles, jars, and smaller items.

5. MAINTENANCE AND CARE

5.1 Cleaning

- **Interior:** Clean the interior regularly with a solution of mild detergent and warm water. Wipe dry thoroughly. Avoid abrasive cleaners or solvents.
- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. For stubborn stains, use a mild, non-abrasive cleaner.
- **Door Seals:** Clean door seals regularly to ensure a tight seal and prevent energy loss. Use a soft cloth and warm water.
- **Condenser Coils:** Periodically clean the condenser coils at the back of the refrigerator (if accessible) with a soft brush or vacuum cleaner to maintain efficiency.

5.2 Defrosting

This is a Direct Cool refrigerator, which means manual defrosting is required when ice buildup in the freezer

compartment becomes excessive (approximately 5mm thickness).

1. Unplug the refrigerator from the power outlet.
2. Remove all food items from the freezer and refrigerator compartments and store them in a cool place.
3. Leave the refrigerator door open to allow the ice to melt naturally. Place towels at the bottom to absorb melting water.
4. Do not use sharp objects or heating devices to speed up defrosting, as this can damage the appliance.
5. Once all ice has melted, clean and dry the interior thoroughly.
6. Plug the refrigerator back in and allow it to cool down for a few hours before returning food items.

6. TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Refrigerator not cooling	Power cord unplugged; Temperature setting too high; Door not closed properly; Excessive food load.	Check power connection; Adjust temperature setting; Ensure door is sealed; Reduce food load.
Unusual noises	Refrigerator not level; Items inside rattling; Compressor noise (normal).	Adjust leveling feet; Rearrange items; Compressor noise is normal during operation.
Water on floor/inside	Drain hole blocked; Door not sealed properly; Excessive humidity.	Clear drain hole; Check door seal; Avoid opening door frequently in humid conditions.
Door not closing properly	Door gasket dirty/damaged; Refrigerator not level; Obstruction.	Clean or replace gasket; Level the refrigerator; Remove obstructions.

7. SPECIFICATIONS

Feature	Specification
Brand	Godrej
Model	RD EDGEPRO 205E 53 TAI JW WN
Capacity	190 Litres
Energy Efficiency Rating	5 Star
Annual Energy Consumption	104 Kilowatt Hours
Defrost System	Direct Cool
Shelf Type	Toughened Glass (150 kg load capacity)

Feature	Specification
Special Features	Inverter Compressor, Anti Drip Chiller Technology, Largest Dry Storage, Largest Shelf Space, LED Light
Control Console	Touch Control
Installation Type	Freestanding
Item Weight	51 kg
Included Components	1 Refrigerator, User Manual, Ice Tray, Key, Warranty Card

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This refrigerator comes with a manufacturer's warranty. Please refer to the 'Warranty Card' included in the packaging for detailed terms, conditions, and duration of the warranty. Keep your purchase receipt as proof of purchase for warranty claims.

8.2 Customer Support

For any queries, service requests, or technical assistance, please contact Godrej customer support:

- **Telephone:** 080-67436743 / 022-67965656
- **WhatsApp:** Send 'Hi' to 9321665511
- **Email:** smartcare@godrej.com
- **Manufacturer/Importer Address:** Godrej & Boyce Mfg. Co. Ltd., Pirojshanagar, Vikhroli (W), Mumbai - 400 079

You can also visit the official Godrej store on Amazon for more product information: [Godrej Store](#)