

## SingMasters SM-800 PRO

# SingMasters SM-800 PRO Karaoke Machine User Manual

Model: SM-800 PRO

Brand: SingMasters

## 1. INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, and maintenance of your SingMasters SM-800 PRO Karaoke Machine. The SM-800 PRO is a professional karaoke system designed for home entertainment, featuring Wi-Fi connectivity, dual wireless microphones, HDMI output, and song recording capabilities. Please read this manual thoroughly before using the product to ensure proper function and longevity.

## 2. WHAT'S IN THE BOX

---

Upon unboxing your SingMasters SM-800 PRO, verify that all the following components are included:

- 1 SingMasters SM-800 PRO receiver unit
- Song card SD Chip (pre-installed or separate)
- Two wireless Aluminium Metallic Microphones
- Microphone stand/charging base
- Remote Control (with QWERTY keyboard on reverse)
- Power Adaptor
- HDMI cable
- A/V cables
- User Manual



Figure 2.1: All components neatly packed within the SingMasters SM-800 PRO box.

Video 2.1: An unboxing video demonstrating the contents and initial presentation of the SingMasters SM-800 PRO Karaoke System.

## 3. SETUP GUIDE

---

### 3.1 Connecting the System

1. **Power Connection:** Connect the power adaptor to the DC IN port on the back of the SM-800 PRO unit and plug it into a power outlet.
2. **Video/Audio Output:** Connect the SM-800 PRO to your TV or display using the provided HDMI cable for high-definition video and audio. Alternatively, use the A/V cables for standard definition connections.
3. **Sound System (Optional):** For enhanced audio quality, connect the unit to an external sound system (e.g., home theater, amplifier, powered speakers) via the audio output ports.
4. **Wired Microphone (Optional):** If using an additional wired microphone, connect it to the MIC port on the unit.



Figure 3.1: Rear panel connections of the SM-800 PRO unit.

### 3.2 Microphone Setup

1. **Insert Batteries:** Unscrew the bottom part of each wireless microphone and insert 2 AA batteries (not included), ensuring correct polarity.
2. **Power On:** Turn on both wireless microphones using their respective power buttons. They will automatically connect to the main unit.
3. **Placement:** Place the microphones in the provided charging base when not in use.



Figure 3.2: Dual wireless microphones in their charging base.

### 3.3 Wi-Fi Connection

To access online features like YouTube Karaoke, connect your SM-800 PRO to a Wi-Fi network:

1. Navigate to the **Settings** menu on the screen using the remote control.
2. Select **WLAN** or **Wi-Fi**.
3. Choose your desired network from the list and enter the password.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Song Selection

The SM-800 PRO offers multiple ways to select songs:

- **Using the Remote Control:** Use the alphanumeric keypad on the remote to enter song numbers directly or navigate through the song list.
- **Mobile App Control:** Download the free SingMasters Karaoke Mobile App from the App Store or Google Play. Connect your smartphone to the same Wi-Fi network as the karaoke machine to browse, search, and queue songs directly from your device.
- **YouTube Karaoke:** Access the YouTube feature to search for and play karaoke versions of songs available online.

# SingMasters®

## Karaoke Mobile App

### MORE CONVENIENCE

Control everything from your  
smartphone.

Available on:

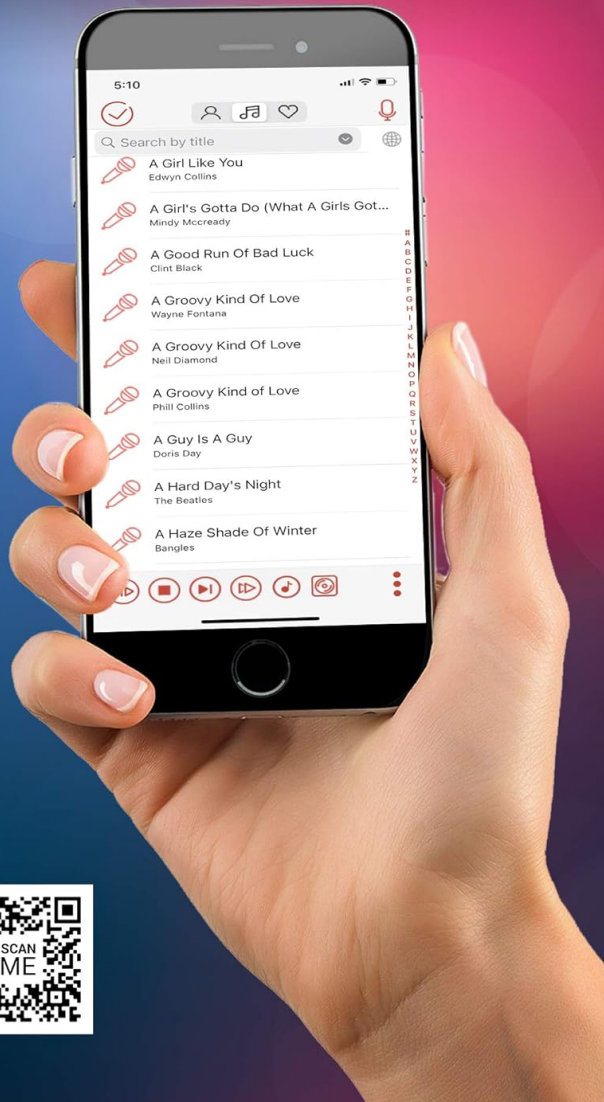


Figure 4.1: SingMasters Karaoke Mobile App for convenient song control. Download the app [here](#).

Video 4.1: A demonstration of the SingMasters SM-800 PRO Karaoke User Interface, showcasing navigation and song selection.

Video 4.2: A sample song demonstration on the SingMasters Karaoke English Edition, illustrating the on-screen lyrics and scoring.

## 4.2 Karaoke Features

- **iFun Intelligent Real-time Feedback & Dual Live Scoring:** The system provides real-time feedback on your singing performance and offers dual live scoring for competitive fun.
- **Competition Mode:** Engage in singing competitions with friends and family.
- **Favorites & Reserve:** Mark your favorite songs for quick access and reserve upcoming songs in a queue.
- **HD Background Video & Pictures:** Customize your karaoke experience with high-definition background videos or images.
- **Tempo/Key Control:** Adjust the tempo and key of songs to match your vocal range and preference.
- **Microphone Echo Adjust:** Fine-tune the microphone echo effect for optimal vocal performance.
- **Song Recording:** Record your performance directly onto the SD card for playback and sharing.

## 5. MAINTENANCE

To ensure the longevity and optimal performance of your SingMasters SM-800 PRO Karaoke Machine, follow

these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the main unit and microphones. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the unit and accessories in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries from microphones if they will not be used for an extended period to prevent leakage.
- **Software Updates:** Periodically check the SingMasters website or app for any available software updates to ensure the best performance and access to new features.

## 6. TROUBLESHOOTING

---

If you encounter any issues with your SM-800 PRO, refer to the following common problems and solutions:

- **No Sound Output:**
  - Check all audio cable connections (HDMI, A/V) to your TV or sound system.
  - Ensure the volume on the karaoke machine, TV, and external sound system is turned up.
  - Verify the audio output setting in the system menu (Settings > Audio Output).
- **Microphones Not Connecting/No Sound:**
  - Ensure batteries are correctly inserted and charged in both microphones.
  - Confirm microphones are powered on.
  - If issues persist, try re-pairing the microphones via the system's **Mic Pair** setting.
- **Wi-Fi Connection Issues:**
  - Check that your Wi-Fi router is powered on and functioning correctly.
  - Ensure the Wi-Fi password entered is correct.
  - Move the karaoke machine closer to the Wi-Fi router to improve signal strength.
- **Voice Delay Through TV Speakers:**
  - This can be a limitation of TV speakers not designed for karaoke use. For optimal sound reproduction and to minimize delay, connect the SM-800 PRO to a dedicated sound system (e.g., home theater, amplifier, or powered speakers).

## 7. SPECIFICATIONS

---

Feature	Detail
Item Weight	5.94 pounds
Package Dimensions	14.29 x 13.58 x 4.53 inches
Item Model Number	SM-800 PRO
Color	Black
Compatible Devices	Amplifier
Connector Type	HDMI

Speaker Count	1 (internal)
Wireless Microphone Frequency	2.4 GHz
Media Format	Digital
Power Source	Battery Powered (microphones), AC Adaptor (main unit)
Special Feature	Wireless, Compact, Wi-Fi, YouTube, Song Recording

## 8. WARRANTY AND SUPPORT

---

The SingMasters SM-800 PRO Karaoke System comes with a full 1-year warranty. In case of any defects or issues, please contact SingMasters customer service for assistance. We offer a 30-day money-back guarantee and 24/7 lifetime friendly customer service.

For further support, please refer to the contact information provided in your product packaging or visit the official SingMasters website.