

[manuals.plus](#) /› [Maxell](#) /› [Maxell 199342 Bluetooth Headphones with Boom Microphone User Manual](#)**Maxell 199342**

Maxell 199342 Bluetooth Headphones with Boom Microphone User Manual

Model: 199342

INTRODUCTION

Thank you for choosing the Maxell 199342 Bluetooth Headphones with Boom Microphone. These headphones are designed to provide high-quality audio and clear communication, ideal for music, calls, and various portable stereo devices. Featuring Bluetooth 5.0 connectivity, a noise-isolating boom microphone, and a comfortable design, they offer a versatile audio experience. Please read this manual carefully to ensure proper use and maintenance of your headphones.

SAFETY INFORMATION

- Do not expose the headphones to extreme temperatures, humidity, or corrosive substances.
- Avoid dropping or subjecting the headphones to strong impacts.
- Do not disassemble or attempt to repair the headphones yourself. This may void the warranty and cause damage.
- Keep the headphones away from water and other liquids.
- Listen at moderate volume levels to prevent hearing damage. Prolonged exposure to loud sounds can cause permanent hearing loss.
- Dispose of batteries and electronic components responsibly according to local regulations.


PACKAGE CONTENTS

- Maxell 199342 Bluetooth Headphones with Boom Microphone
- USB Charging Cable
- 6 ft. 3.5mm Audio Cable
- User Manual

PRODUCT OVERVIEW



Front view of the Maxell 199342 Bluetooth Headphones, showcasing the over-ear design and adjustable boom microphone.

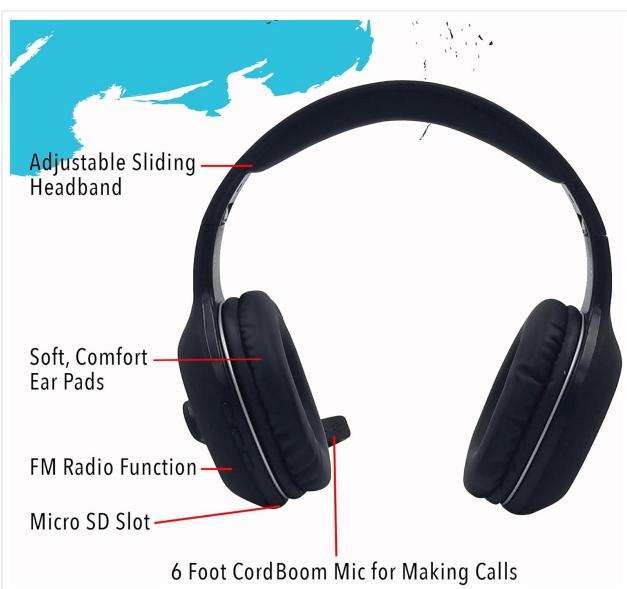

Detailed view of the headphones with key features labeled, including the adjustable sliding headband, soft comfort ear pads, FM radio function, Micro SD slot, and 6-foot cord boom mic for calls.




Image emphasizing the Bluetooth connectivity, up to 12 hours of playtime, and noise-isolating capabilities of the headphones.



View showing the 3.5mm audio jack, indicating the wired backup option with the included 6-foot cord.



A man wearing the Maxell headphones while participating in a video conference, demonstrating their use for professional communication.

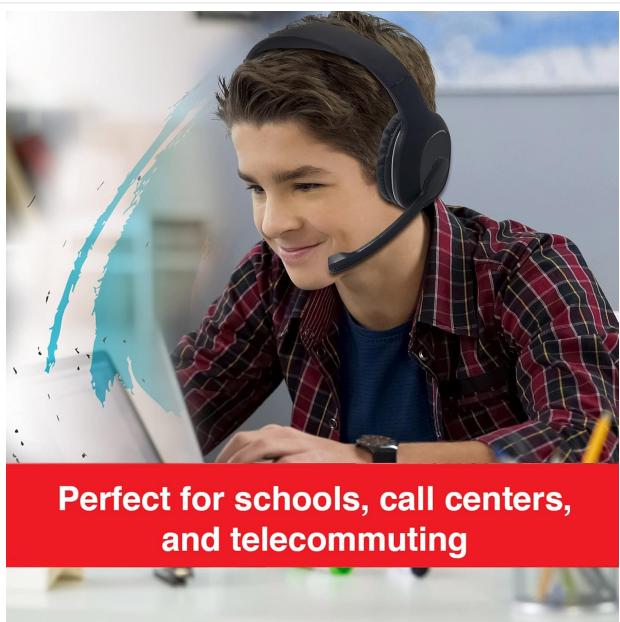

A young boy using the Maxell headphones with a laptop, illustrating their suitability for educational purposes or remote learning/telecommuting.

SETUP

Charging the Headphones

Before first use, fully charge the headphones. Connect the supplied USB charging cable to the charging port on the headphones and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The LED indicator will show the charging status and turn off or change color when fully charged. A full charge provides up to 10 hours of battery life.

Bluetooth Pairing

1. Ensure the headphones are turned off.

2. Press and hold the Power button on the headphones until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "Maxell 199342" or a similar name from the list of found devices.
5. Once connected, the LED indicator will turn solid blue or flash blue slowly.
6. If prompted for a password, enter "0000".

OPERATING

Controls

- **Power Button:** Press and hold to turn on/off. Press briefly to play/pause music or answer/end calls.
- **Volume Up (+):** Press to increase volume. Press and hold for next track.
- **Volume Down (-):** Press to decrease volume. Press and hold for previous track.
- **Boom Microphone:** Adjustable for optimal voice pickup during calls.

Making and Receiving Calls

- **Answering a Call:** When a call comes in, press the Power button once.
- **Ending a Call:** During a call, press the Power button once.
- **Rejecting a Call:** Press and hold the Power button for 2 seconds.
- **Redialing Last Number:** Double-press the Power button.

Music Playback

- **Play/Pause:** Press the Power button once.
- **Next Track:** Press and hold the Volume Up (+) button.
- **Previous Track:** Press and hold the Volume Down (-) button.

Wired Mode

The headphones can be used in wired mode even if the battery is depleted. Simply connect the included 3.5mm audio cable to the headphone's audio jack and the other end to your audio source. In wired mode, Bluetooth functionality and the boom microphone may not be active, depending on the device and cable connection.

FM Radio Function

To use the built-in FM radio, ensure the headphones are powered on. Press the 'M' button (Mode button, if present, or refer to specific button on your model) to switch to FM radio mode. Use the volume buttons to scan for stations. For better reception, extend the boom microphone or move to an open area.

Micro SD Slot

Insert a Micro SD card (not included) with your favorite music files into the designated slot. The headphones will automatically switch to Micro SD playback mode. Use the playback controls (Power button for play/pause, Volume buttons for track navigation) to manage your music.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.

- Storage:** Store the headphones in a cool, dry place when not in use. Avoid direct sunlight and extreme temperatures.
- Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the headphones regularly, even if not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Solution
Headphones do not turn on.	Ensure the headphones are charged. Connect to a power source and try again.
Cannot pair with device.	Ensure headphones are in pairing mode (flashing blue/red). Turn off and on Bluetooth on your device. Move headphones closer to the device.
No sound or low volume.	Check volume levels on both headphones and connected device. Ensure headphones are properly paired. If in wired mode, check cable connection.
Microphone not working.	Ensure the boom microphone is properly positioned. Check microphone settings on your connected device.
Intermittent connection.	Move closer to the connected device. Avoid obstacles between headphones and device. Reduce interference from other wireless devices.

SPECIFICATIONS


Feature	Detail
Model	199342
Connectivity Technology	Bluetooth 5.0, Wired (3.5mm Jack)
Microphone Format	Boom, Noise Isolating
Battery Life	Up to 10 hours (Bluetooth)
Charging Time	Approximately 2-3 hours
Frequency Range	20 Hz - 20,000 Hz
Material	Plastic
Item Weight	272 g
Product Dimensions	20.32 x 17.78 x 19.05 cm
Special Features	Lightweight, Adjustable Headband, FM Radio, Micro SD Slot
Compatible Devices	Multiple (MP3 Players, CD Players, Smartphones, Tablets, Computers)


WARRANTY AND SUPPORT

Maxell products are manufactured to high quality standards. For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official Maxell website. Keep your proof of purchase for any warranty claims.

© 2024 Maxell. All rights reserved.

Related Documents - 199342

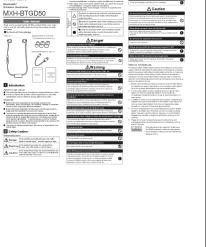	<p><u>Maxell Airlink Air Conduction Headphones User Manual (Model EB-ALBT140)</u> A comprehensive user manual for the Maxell Airlink Air Conduction Headphones (Model EB-ALBT140). This guide provides detailed information on package contents, button functions, controls for power, Bluetooth pairing, music playback, calls, voice assistant, charging, how to wear the headphones, technical specifications, and important safety precautions.</p>
	<p><u>Maxell AirLink Air Conduction Headphones User Manual</u> User manual for the Maxell AirLink Air Conduction Headphones, covering package contents, button functions, controls, charging, wearing instructions, specifications, and important safety precautions.</p>
	<p><u>Maxell Bass 13 Bluetooth Headphones User Manual</u> Comprehensive user manual for the Maxell Bass 13 Bluetooth Headphones (Model B13-HD1). This guide covers product specifications, Bluetooth pairing, music playback controls, call management, safety warnings, and proper disposal procedures.</p>
	<p><u>Maxell MXH-BTGD50 Bluetooth Wireless Earphones User Manual</u> User manual for the Maxell MXH-BTGD50 Bluetooth wireless earphones, covering setup, usage, safety precautions, troubleshooting, and specifications.</p>
	<p><u>Maxell ANC-BT132 Active Noise Cancelling Wireless Headphones User Manual</u> User manual for the Maxell ANC-BT132 Active Noise Cancelling Wireless Headphones, including specifications, pairing instructions, controls, and safety warnings.</p>

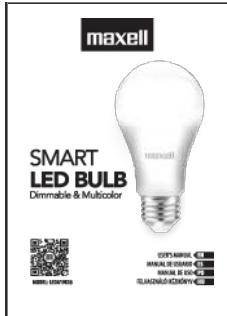

[Maxell Smart LED Bulb LEDA19E26 User Manual](#)

Comprehensive user manual for the Maxell Smart LED Bulb (LEDA19E26), detailing features like Wi-Fi connectivity, voice control, dimming, multicolor options, app setup, device pairing, and various control modes including white, color, scene, timer, schedule, grouping, and music sync.