

ANGELBLISS Folding Playpen

ANGELBLISS Portable Baby Playpen and Playard Instruction Manual

Model: Folding Playpen

1. GENERAL INFORMATION

This instruction manual provides essential information for the safe assembly, operation, and maintenance of your ANGELBLISS Portable Baby Playpen. Please read this manual thoroughly before use and retain it for future reference. This playpen is designed to provide a safe and comfortable environment for babies and toddlers for playtime and rest, both indoors and outdoors.

2. SAFETY WARNINGS

WARNING: Failure to follow these warnings and instructions could result in serious injury or death.

- Always ensure all locking mechanisms are securely engaged before placing a child in the playpen.
- Discontinue use of the playpen when your child is able to climb out, or reaches a height of 35 inches (89 cm), or weighs more than 35 pounds (15.9 kg).
- Never leave your child unattended in the playpen.
- Do not modify the playpen or use accessories not approved by ANGELBLISS.
- Keep the playpen away from open flames, heaters, and other heat sources.
- Ensure the playpen is placed on a flat, level surface.
- Do not use the playpen if any parts are broken, torn, or missing.
- Plastic bags can be dangerous. To avoid danger of suffocation, keep plastic bags away from babies and children.
- The playpen meets all applicable CPSC/ASTM standards for safety.

3. PRODUCT FEATURES

- **Quick & Easy Setup:** Innovative push-button folding design allows for setup and take-down within seconds.
- **Indoor/Outdoor Use:** Includes a compact fold storage bag for portability, suitable for use at home or while traveling.

- **Prioritized Safety:** Constructed from durable 300D Oxford fabric and thickened alloy, meeting CPSC/ASTM safety standards.
- **Zipper Door & Airy Mesh:** Features a convenient zipper activity door for easy access and ventilating mesh sides for visibility and airflow.
- **Spacious Footprint:** Generous dimensions of 42 x 42 x 30 inches (L x W x H) provide ample space for play.
- **Mobility:** Equipped with two large rubber wheels for easy movement.



Image: The ANGELBLISS Playpen featuring a convenient side zipper door for easy access to your child.



Full-Height Mesh Sides

Better visibility for you, safer for infants
with increased breathability

Image: Full-height mesh sides provide better visibility and increased breathability for infants.



Image: Diagram showing the playpen dimensions: 42 inches outer diameter, 40 inches inner diameter, and 30 inches height.

4. PACKAGE CONTENTS

Upon opening the package, please verify that all the following items are included:

- ANGELBLISS Portable Baby Playpen frame
- Removable Mattress
- Custom Fitted Sheet
- Compact Fold Storage Bag

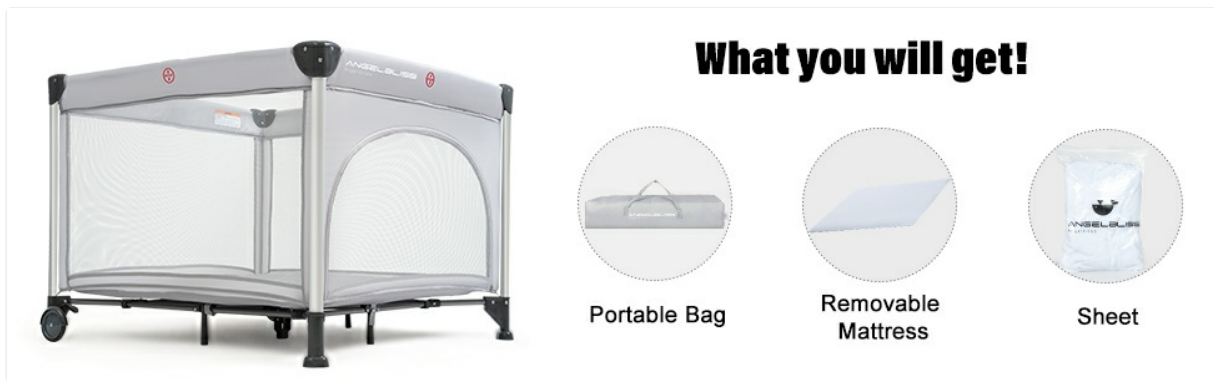


Image: Visual representation of the playpen, portable bag, removable mattress, and sheet included in the package.

5. SETUP INSTRUCTIONS

Follow these steps to set up your ANGELBLISS Portable Baby Playpen:

1. Remove the playpen from its storage bag.
2. Stand the folded playpen upright on a flat surface.
3. Pull the two short side rails upwards until they lock into place. Ensure they are fully extended and locked.
4. Repeat the process for the two long side rails, pulling them upwards until they lock. You should hear an audible "click" for each rail.
5. Push down on the center of the playpen floor until it lies flat and is securely in place.
6. Place the removable mattress inside the playpen, ensuring it fits snugly at the bottom.
7. Cover the mattress with the provided custom fitted sheet.
8. Verify that all four side rails are locked and the bottom is flat and secure before placing your child inside.

Your browser does not support the video tag.

Video: This video demonstrates the quick and easy setup and folding process of the ANGELBLISS Portable Baby Playpen. It shows how to unfold the playpen, lock the side rails, secure the base, insert the mattress, and then reverse the steps for folding and storage.

6. OPERATING INSTRUCTIONS

6.1 Using the Zipper Door

The playpen features a convenient side zipper door. To open, simply unzip the door. This allows for easy access to your child for interaction or to let them crawl in and out independently when supervised. Always ensure the zipper door is fully closed and secured when your child is inside and unsupervised.

6.2 Moving the Playpen

The playpen is equipped with two wheels for easy relocation. To move the playpen, slightly lift the end without wheels and roll it to your desired location. Ensure the wheels are locked once the playpen is in its new position to prevent accidental movement.



Image: Close-up of the playpen wheel with a locking mechanism for stability.

7. MAINTENANCE

7.1 Cleaning

- **Fabric:** The fabric parts of the playpen can be spot cleaned with a damp cloth and mild soap. Allow to air dry completely. Do not use bleach.
- **Mattress and Sheet:** The removable mattress and sheet can be hand washed or machine washed on a gentle cycle with cold water. Air dry or tumble dry on low heat.
- **Frame:** Wipe the metal and plastic parts of the frame with a damp cloth.

7.2 Storage

To store the playpen, follow the folding instructions in reverse. Once folded, place it in the provided compact storage bag. Store in a cool, dry place away from direct sunlight.



Image: The ANGELBLISS Playpen folded compactly and placed in its portable storage bag, ready for travel.

8. TROUBLESHOOTING

- **Difficulty locking side rails:** Ensure the center of the playpen floor is not pushed down before attempting to lock the side rails. The side rails must be locked first. If a rail does not lock, lift the center of the floor slightly and try again.
- **Difficulty folding the playpen:** Ensure the mattress and sheet are removed. Pull the red strap in the center of the playpen floor upwards. Then, locate the release buttons on the side rails (usually in the middle) and press them while pushing the rails downwards.
- **Mattress stitching coming undone:** If the mattress stitching shows signs of wear or coming undone, discontinue use of the mattress and contact customer support for a replacement.

9. SPECIFICATIONS

Brand	ANGELBLISS
Model Number	Folding Playpen
Item Dimensions (L x W x H)	42 x 42 x 30 inches

Floor Area	12 Square Feet
Item Weight	23 Pounds
Maximum Weight Recommendation	35 Pounds
Color	Grey
Material	300D Oxford fabric, Thickened Alloy
Safety Standards	CPSC/ASTM Compliant

10. WARRANTY AND SUPPORT

ANGELBLISS products come with a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty details, product registration, or customer support inquiries, please visit the official ANGELBLISS website or contact their customer service department. Please have your product model number and purchase information ready when contacting support.

Official Website: [ANGELBLISS Store on Amazon](#)