

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [SKMEI](#) /
- › SKMEI Model 1426AGBK Digital Sports Watch User Manual

SKMEI 1426AGBK

SKMEI Model 1426AGBK Digital Sports Watch User Manual

This manual provides detailed instructions for the setup, operation, and maintenance of your SKMEI Model 1426AGBK Digital Sports Watch.

1. PRODUCT OVERVIEW

The SKMEI Model 1426AGBK is a robust digital sports watch designed for active lifestyles. It features a clear LED display, 50-meter water resistance, and multiple functions including time, date, alarm, stopwatch, and countdown timer. Its durable construction ensures reliability in various conditions.



Image 1.1: Front view of the SKMEI Model 1426AGBK Digital Sports Watch.

2. KEY FEATURES

- **Digital Display:** Clear and easy-to-read LED display.
- **Water Resistance:** 50 meters (5ATM) suitable for swimming and showering.
- **Multifunctionality:** Includes time, date, day, alarm, stopwatch, and countdown timer.
- **Backlight:** LED backlight for visibility in low-light conditions.
- **Durable Build:** Constructed with a plastic case, polyurethane strap, stainless steel buckle, and resin glass.
- **12/24 Hour Format:** Selectable time display format.

Key Features

Display
Digital

Dial Shape
Round

Features
2 Time & Chrono

Strap Material
PU Leather

Water Resistance
50 m



Image 2.1: Visual representation of the watch's key features.

3. WATCH COMPONENTS AND BUTTON FUNCTIONS

Your SKMEI watch features four buttons for operation. While specific labels may vary, their general functions are as follows:

- **Light Button (Top Left):** Activates the LED backlight.
- **Mode Button (Bottom Left):** Cycles through different modes (Time, Alarm, Stopwatch, Countdown).
- **Start/Stop Button (Top Right):** Used to start/stop functions in Stopwatch and Countdown modes, and to adjust values in setting modes.
- **Reset Button (Bottom Right):** Used to reset functions in Stopwatch and Countdown modes, and to select items in setting modes.



Image 3.1: Side view of the watch highlighting the control buttons.

4. SETUP INSTRUCTIONS

4.1 Setting Time and Date

1. From the Timekeeping Mode, press the **Mode Button** repeatedly until the seconds begin to flash, indicating you are in setting mode.
2. Press the **Reset Button** to cycle through the settings: Seconds → Hour → Minute → Year → Month → Day → 12/24H Format.
3. Use the **Start/Stop Button** to adjust the flashing value.
4. Once all settings are correct, press the **Mode Button** to exit the setting mode and return to Timekeeping Mode.

4.2 Setting the Alarm

1. From Timekeeping Mode, press the **Mode Button** until you reach the Alarm Mode (indicated by an alarm icon or 'AL').
2. Press the **Start/Stop Button** to select the hour or minute to set. The selected value will flash.
3. Use the **Reset Button** to adjust the flashing value.

4. Press the **Start/Stop Button** again to confirm and move to the next setting.
5. To activate/deactivate the alarm, press the **Light Button** while in Alarm Mode. An alarm icon will appear/disappear on the display.
6. Press the **Mode Button** to exit Alarm Mode.

4.3 Using the Stopwatch

1. From Timekeeping Mode, press the **Mode Button** until you reach the Stopwatch Mode (indicated by 'ST' or 'STOP').
2. Press the **Start/Stop Button** to start the stopwatch.
3. Press the **Start/Stop Button** again to pause the stopwatch.
4. Press the **Reset Button** to reset the stopwatch to zero.
5. Press the **Mode Button** to exit Stopwatch Mode.

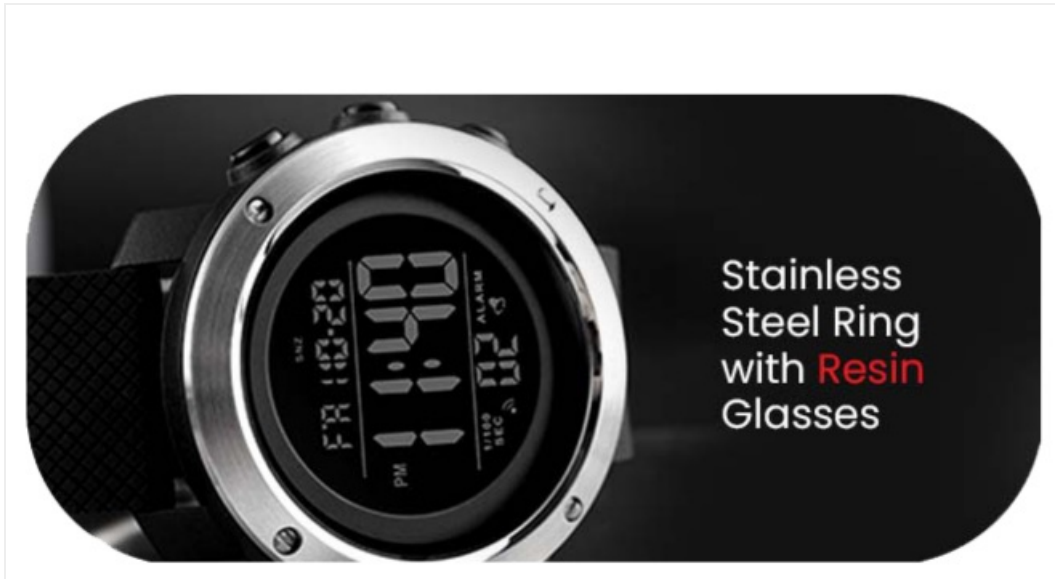


Image 4.1: Chronograph function buttons for stopwatch and alarm.

5. OPERATING INSTRUCTIONS

5.1 Using the Countdown Timer

The watch includes a countdown timer function. To use it:

1. From Timekeeping Mode, press the **Mode Button** until you reach the Countdown Timer Mode (indicated by 'TR' or 'TIMER').
2. Press the **Start/Stop Button** to set the countdown time (hour, minute, second). Use the **Reset Button** to adjust values.
3. Once the desired time is set, press the **Start/Stop Button** to begin the countdown.
4. Press the **Start/Stop Button** again to pause/resume the countdown.
5. Press the **Reset Button** to reset the countdown to its initial set time.
6. Press the **Mode Button** to exit Countdown Mode.

5.2 Activating the LED Backlight

To illuminate the display in dark conditions, press the **Light Button (Top Left)**. The backlight will remain active for a few seconds.



Image 5.1: The watch display with its LED backlight activated.

6. MAINTENANCE

6.1 Water Resistance Guidelines

The watch is rated for 50 meters (5ATM) water resistance. This means it is suitable for:

- Daily use and splashes.
- Showering and bathing (cold water).
- Swimming in shallow water.

Important Precautions:

- Do not operate any buttons while the watch is submerged in water.
- Avoid exposing the watch to hot water, steam, or extreme temperature changes, as this can compromise the water seals.
- Not suitable for diving, snorkeling, or high-pressure water activities.

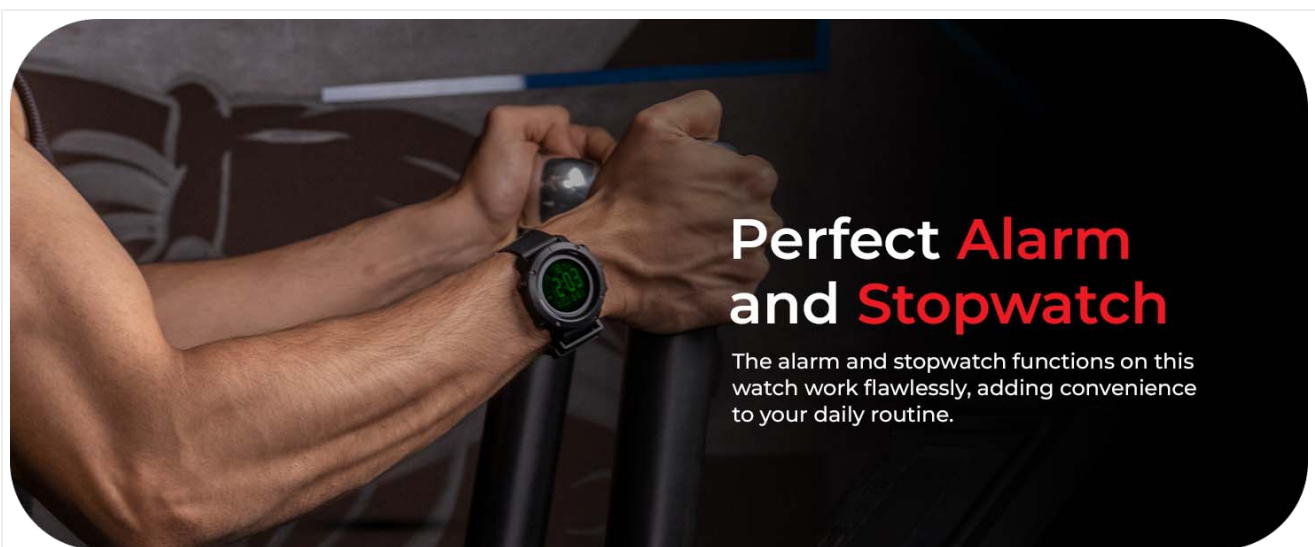


Image 6.1: The watch demonstrating its 50m water resistance.

6.2 Cleaning and Care

- Wipe the watch regularly with a soft, dry cloth to remove dirt and moisture.

- For stubborn dirt, use a slightly damp cloth and mild soap, then rinse with clean water and dry thoroughly.
- Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish and seals.

6.3 Battery Replacement

The watch uses one C battery (included). When the display becomes dim or functions become erratic, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance are maintained.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Time is incorrect.	Time not set correctly or accidental adjustment.	Refer to Section 4.1 to reset the time.
Buttons are unresponsive.	Watch may be in a locked mode or internal issue.	Try pressing all buttons to see if any respond. If not, a battery reset (removal and reinsertion) might be needed by a professional.
Water inside the watch.	Buttons operated underwater, or seals compromised.	Immediately take the watch to a professional for inspection and repair to prevent further damage.

8. SPECIFICATIONS

Feature	Detail
Model Number	1426AGBK
Display Type	Digital LED
Case Material	Plastic
Band Material	Polyurethane
Case Diameter	4.6 Centimeters
Case Height	4.9 Centimeters
Case Thickness	1.4 Centimeters
Strap/Lug Width	2.2 Centimeters
Item Weight	51 Grams
Water Resistance	50 Meters (5ATM)
Battery Type	1 C battery (included)
Movement Type	Quartz



Case Width
46MM

Strap Material
PU Leather

Case Thickness
14MM

Image 8.1: Watch dimensions diagram.



Image 8.2: Back view of the watch.

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This SKMEI watch comes with a limited warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. The warranty typically covers manufacturing defects but may not cover damage resulting from improper use, accidents, or unauthorized repairs.

9.2 Customer Support

For any questions, technical assistance, or warranty claims, please contact the retailer where you purchased the watch or visit the official SKMEI website for support contact information. When contacting support, please have your watch model number (1426AGBK) and proof of purchase readily available.

