

## PULUZ PU3048

# PULUZ 360 Degree Photography Turntable Rotating Display Stand

Model: PU3048 | 5.7 inch (15cm) Diameter

## INTRODUCTION

---

This manual provides essential information for the safe and effective use of your PULUZ 360 Degree Photography Turntable Rotating Display Stand. Please read these instructions carefully before operating the device and retain them for future reference.

## SAFETY INFORMATION

---

- Do not exceed the maximum load capacity of 6.6 lbs (3 kg) to prevent damage to the motor and stand.
- Keep the device away from water or other liquids.
- Avoid exposing the device to extreme temperatures or direct sunlight for prolonged periods.
- Do not attempt to disassemble or repair the unit yourself. Contact customer support for assistance.
- Use only the provided USB cable or a compatible 5V USB power source.

## PACKAGE CONTENTS

---

Please check the package for the following items:

- PULUZ 360 Degree Rotating Display Stand (White, 5.7 inch diameter)
- Micro-USB Power Cable (approximately 5 ft long)
- User Manual (this document)

## PRODUCT OVERVIEW

---

The PULUZ Rotating Display Stand is designed for showcasing small items for photography, video shooting, or general display. It features a simple one-key operation and a quiet motor.



**Image:** Key components of the display stand, including the ON/OFF button, Micro-USB port, and anti-slip rubber pad on the base.

# One Key Switch Design



Image: Detailed view of the single control button and power input.

## SETUP

---

1. **Unpack:** Carefully remove the rotating display stand and USB cable from its packaging.
2. **Placement:** Place the stand on a stable, flat surface. Ensure there is enough clearance around the stand for items to rotate freely.
3. **Connect Power:** Insert the micro-USB end of the provided cable into the USB port on the side of the display stand. Connect the other end (USB-A) to a compatible 5V USB power source, such as a computer, laptop, mobile power bank, or a USB wall charger.

# Round booth Support USB power supply

- 1.Desktop computer charging.
- 2.Laptop charging.
- 3.Mobile power charging.
- 4.Charging plug charging.








<p>1</p>  <p>Computer Host</p>	<p>2</p>  <p>Laptop</p>
	
<p>3</p>  <p>Mobile Power</p>	<p>4</p>  <p>USB Charger</p>

Image: Illustration of compatible USB power sources for the display stand.

## USB Power Supply

	 <p>Computer Host</p>	 <p>Laptop</p>
 <p>Mobile Power</p>	 <p>USB Charger</p>	

**Image:** The display stand with its USB power cable, demonstrating connection to various power sources.

## OPERATING INSTRUCTIONS

1. **Power On/Off:** Press the ON/OFF button located on the side of the stand to turn the rotation on or off.
2. **Change Rotation Direction:** The stand operates with a single button. To change the direction of rotation (clockwise or counter-clockwise), turn the unit off and then on again. Each power cycle will reverse the direction.
3. **Place Item:** Carefully place the item you wish to display onto the center of the rotating platform. Ensure the item is stable and does not exceed the maximum load capacity.

### 360° rotating round turntable

Display from multiple angles



Speed: 25 seconds / circle

Single switch operation, continue to switch on and off until you get desired spin direction

**Image:** Visual guide on how to operate the 360-degree rotation and switch directions.



Toy display



Cosmetic display



Jewelry display



Crafts display

Image: Examples of various items suitable for display on the turntable, such as toys, cosmetics, jewelry, and crafts.

**You can display different items  
with this exquisite stand!**



**Image:** Further examples of small items that can be effectively displayed.

## MAINTENANCE

---

- **Cleaning:** Wipe the surface of the display stand with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the stand in a cool, dry place away from dust and direct sunlight.
- **Avoid Overloading:** Consistently overloading the stand can reduce its lifespan and damage the motor.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Stand does not rotate.	No power or insufficient power.	Ensure the USB cable is securely connected to both the stand and a working 5V USB power source. Try a different USB port or power adapter.
Rotation is jerky or stops.	Overloaded or unevenly distributed weight.	Reduce the weight on the stand. Ensure the item is centered and balanced.
Unusual noise during operation.	Internal obstruction or motor issue.	Ensure no foreign objects are obstructing the rotation. If the noise persists, discontinue use and contact customer support. Note that a slight motor hum (50-60dB) is normal.

# Silent Design ▶



Image: Information regarding the typical noise level of the stand during operation.

## SPECIFICATIONS

Feature	Detail
Model Number	PU3048
Diameter	5.7 inches (14.4 cm)
Height	1.77 inches (4.5 cm)
Base Diameter	5.82 inches (14.8 cm)
Color	White
Material	Acrylonitrile Butadiene Styrene (ABS)
Max Load Capacity	6.6 lbs (3 kg)
Power Supply	USB 5V (Micro-USB cable included)
Rotation Speed	Approximately 25 seconds per full rotation

Feature	Detail
Noise Level	50-60 dB (quiet operation)
Assembly Required	No



Image: Detailed dimensions of the rotating display stand.



Image: The product and its packaging, reiterating key dimensions.

## WARRANTY AND SUPPORT

---

PULUZ products are manufactured to high-quality standards. For any issues or questions regarding your product, please contact PULUZ customer support through the retailer where you purchased the item. Please have your model number (PU3048) and purchase information ready. Specific warranty details may vary by region and retailer. Please refer to your purchase documentation for warranty terms and conditions.