

[Manuals.plus](#) /

› [NKF](#) /

› NKF Universal Remote Control Instruction Manual for RCA and Proscan TVs (Model: PLDED3273A-E)

NKF PLDED3273A-E

NKF Universal Remote Control Instruction Manual

Model: PLDED3273A-E

Brand: NKF

[Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. PRODUCT OVERVIEW

The NKF Universal Remote Control is designed to replace your original remote for various RCA and Proscan TV models. It offers a straightforward, pre-programmed solution, eliminating the need for complex setup in many cases. This remote is compatible with a wide range of televisions, providing essential functions such as power, volume, channel control, and input selection.

NKF



PLDED3272A-E Remote Control For Proscan TV Models:

PLDED5068A-D PLEDV3282A
PLED2243A-I PLED5066B
PLED5066A PLED3273A-E
PLED5066A-B PLED3996A-E
PLED5529A-G PLED4016A-D
PLDED4017 RLDED5099-UHD
RLDED3258A-F RLDED5099



Figure 1: NKF Universal Remote Control with a display of compatible TV models.

Key Features:

- **Broad Compatibility:** Works with numerous RCA and Proscan TV models, including PLDED3273A-E, RLDED3273A-B, RLDED5078A-E, RLED1945A-F, TR3201A, R0032, RTU5540-C, RLD3273A-B, RLD5515A-H, RLDED3205A-C, RLDED3258A-F, RLDED3956A.
- **No Programming Required:** For many compatible models, simply insert batteries and begin use.
- **Full Functionality:** Replaces all essential functions of your original remote control.
- **Durable Design:** Constructed from ABS material for durability.

2. SETUP GUIDE

2.1 Battery Installation

Before using your new remote control, you must install two AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.

2. Slide the battery compartment cover downwards to open it.
3. Insert two new 1.5V AAA alkaline batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 2: Battery compartment for installing two AAA batteries.

2.2 Code Programming (Manual Setup)

If the remote does not work directly after battery installation, you may need to program it using a specific code for your TV brand. Refer to the included code list in your product packaging.

1. Turn on your TV manually.
2. Press and hold the **SETUP** button on the remote until the power indicator light turns solid red.
3. Release the **SETUP** button.
4. Press the **TV** button (or the corresponding device button you wish to program, e.g., STR for streaming, AUD for audio). The power indicator light will blink once.
5. Enter the 3-digit code for your TV brand from the provided code list using the number buttons.

6. If the code is correct, the power indicator light will turn off. If it blinks and stays on, the code was incorrect; try another code.
7. Test the remote's functions (Power, Volume, Channel) to ensure it works correctly.

Your browser does not support the video tag.

Video 1: Demonstrates how to set up the remote control for RCA and Proscan TVs using code programming.

2.3 Automatic Search

If you cannot find a suitable code or prefer an automatic method, use the automatic search function:

1. Turn on your TV manually.
2. Press and hold the **SETUP** button on the remote until the power indicator light turns solid red.
3. Release the **SETUP** button.
4. Press the **TV** button (or the corresponding device button). The power indicator light will blink once.
5. Aim the remote control at the TV.
6. Press the **MUTE** button repeatedly, pausing briefly after each press, until the volume symbol appears on your TV screen.
7. Once the volume symbol appears, immediately press the **POWER** button to save the code and exit the automatic search mode.
8. Test the remote's functions to ensure it works correctly.

Your browser does not support the video tag.

Video 2: Provides a visual guide on how to set up the universal remote control.

3. OPERATING INSTRUCTIONS

3.1 Button Functions

The remote control features clearly labeled buttons for intuitive operation. Below is a general overview of common button functions:



Figure 3: Labeled buttons on the NKF Universal Remote Control.

- **Power (Red Button):** Turns the TV on or off.
- **Mute (Green Button):** Mutes or unmutes the TV audio.
- **Number Keys (0-9):** Directly select channels.
- **VOL (+/-):** Adjusts the volume up or down.
- **CH (Up/Down Arrows):** Changes channels sequentially.
- **INPUT/SOURCE:** Cycles through available input sources (HDMI, AV, etc.).
- **MENU:** Accesses the TV's main menu.
- **OK/ENTER:** Confirms selections in menus.
- **Arrow Keys (Up/Down/Left/Right):** Navigate through menus and options.
- **EXIT:** Exits the current menu or function.
- **INFO:** Displays information about the current program or input.
- **Colored Buttons (A, B, C, D):** May have specific functions depending on the TV model or application.

3.2 Basic Operation

Once programmed, the remote operates like your original TV remote:

- Point the remote directly at your TV's infrared sensor.
- Press the desired button for the function you wish to perform.
- For optimal performance, ensure there are no obstructions between the remote and the TV.

4. MAINTENANCE

4.1 Battery Replacement

When the remote control's performance degrades or the indicator light does not illuminate, it's time to replace the batteries. Follow the battery installation steps (Section 2.1) to replace the two AAA batteries. Always use new, high-quality alkaline batteries for best performance.

4.2 Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the remote's surface or internal components.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote does not work.	Batteries are dead or incorrectly installed.	Replace batteries with new ones, ensuring correct polarity.
Remote does not work after programming.	Incorrect code entered or remote not properly aimed.	Try another code from the code list or use the automatic search method. Ensure the remote is aimed directly at the TV.
Some buttons do not work.	The current code may not fully support all functions of your TV.	Try other codes for your TV brand from the code list. Sometimes different codes offer varying levels of functionality.
Indicator light does not turn on.	Batteries are completely drained or remote is faulty.	Replace batteries. If the issue persists, contact customer support.

6. SPECIFICATIONS

- **Product Dimensions:** 7 x 2.76 x 0.79 inches
- **Item Weight:** 2.39 ounces
- **Power Source:** 2 x AAA batteries (not included)
- **Material:** ABS
- **Color:** Black
- **Compatible Devices:** Television
- **Max Number of Supported Devices:** 1

NKF



Figure 4: Dimensions of the NKF Universal Remote Control.

7. WARRANTY & SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the NKF official website. Keep your purchase receipt for any warranty claims.

© 2026 NKF. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question