

Hotpoint HIO3T141W

Hotpoint HIO3T141W Fully Integrated Dishwasher

User Manual

[Safety Information](#)[Setup](#)[Operation](#)[Maintenance
Support](#)[Troubleshooting](#)[Specifications](#)[Warranty &](#)

INTRODUCTION

Thank you for choosing the Hotpoint HIO3T141W Fully Integrated Dishwasher. This manual provides essential information for the safe installation, efficient operation, and proper maintenance of your appliance. Please read it thoroughly before using the dishwasher for the first time and keep it for future reference.

This dishwasher is designed for domestic use and offers a capacity of 14 place settings, operating with a low noise level of 41 dB. It features 9 programs and a 3D Zone Wash function for enhanced cleaning.

SAFETY INFORMATION

General Safety:

- Ensure the appliance is properly earthed.
- Do not allow children to operate or play with the dishwasher.
- Keep detergents and rinse aid out of reach of children.
- Never touch the heating element during or immediately after a wash cycle.
- Do not open the door during operation, as hot water may spray out.
- In case of malfunction, disconnect the appliance from the power supply before attempting any inspection or repair.

Installation Safety:

- Installation must be carried out by a qualified technician.
- Ensure all water and electrical connections comply with local regulations.
- Do not bend or crimp the water inlet or outlet hoses.
- The appliance is equipped with an Aquastop safety system to prevent water leaks.

SETUP AND INSTALLATION

This section provides guidance for the proper installation of your fully integrated dishwasher.

Installation Dimensions

Refer to the diagram below for the necessary cabinet dimensions for installation. The dishwasher requires a minimum recess width of 600 mm and a height adjustable between 820-900 mm.

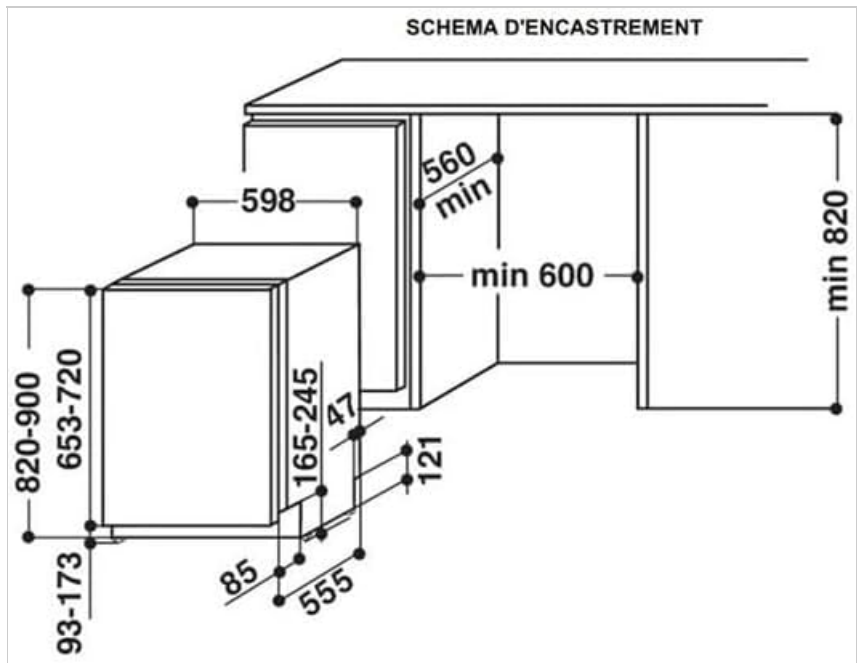 


Figure 1: Installation diagram showing the required recess dimensions for the Hotpoint HIO3T141W fully integrated dishwasher. Key measurements include a minimum width of 600mm and an adjustable height range of 820-900mm.

Connecting Water and Power

- Connect the water inlet hose to a cold or hot water supply (max 60°C).
- Ensure the drain hose is properly connected to a suitable drainage point.
- Plug the power cable (128 cm length) into a grounded electrical outlet (220-240 V, 50 Hz).
- The appliance features an adjustable front rear foot for leveling.
- The maximum weight for the door panel is 10 kg.

OPERATING INSTRUCTIONS

This section guides you through the daily use of your dishwasher.

Control Panel Overview

The dishwasher features a digital interface. Indicators for salt and rinse aid levels are present. The operating light indicator is not present on this model.



Figure 2: Front view of the Hotpoint HIO3T141W fully integrated dishwasher, showing the discreetly located control panel along the top edge of the door.

Loading the Dishwasher

Proper loading ensures optimal cleaning results. This model accommodates 14 place settings.



Figure 3: The Hotpoint HIO3T141W dishwasher with its door open, showcasing the upper and lower baskets loaded with various dishes, including plates, glasses, and cutlery.

- **Lower Basket:** Ideal for large items like plates, serving dishes, and pots. It features 4 foldable tines for flexible loading.
- **Upper Basket:** Suitable for glasses, cups, and smaller bowls. The height is adjustable, and it includes 4 retractable balconies.
- **Cutlery Basket:** A nomadic cutlery basket is provided for forks, knives, and spoons.

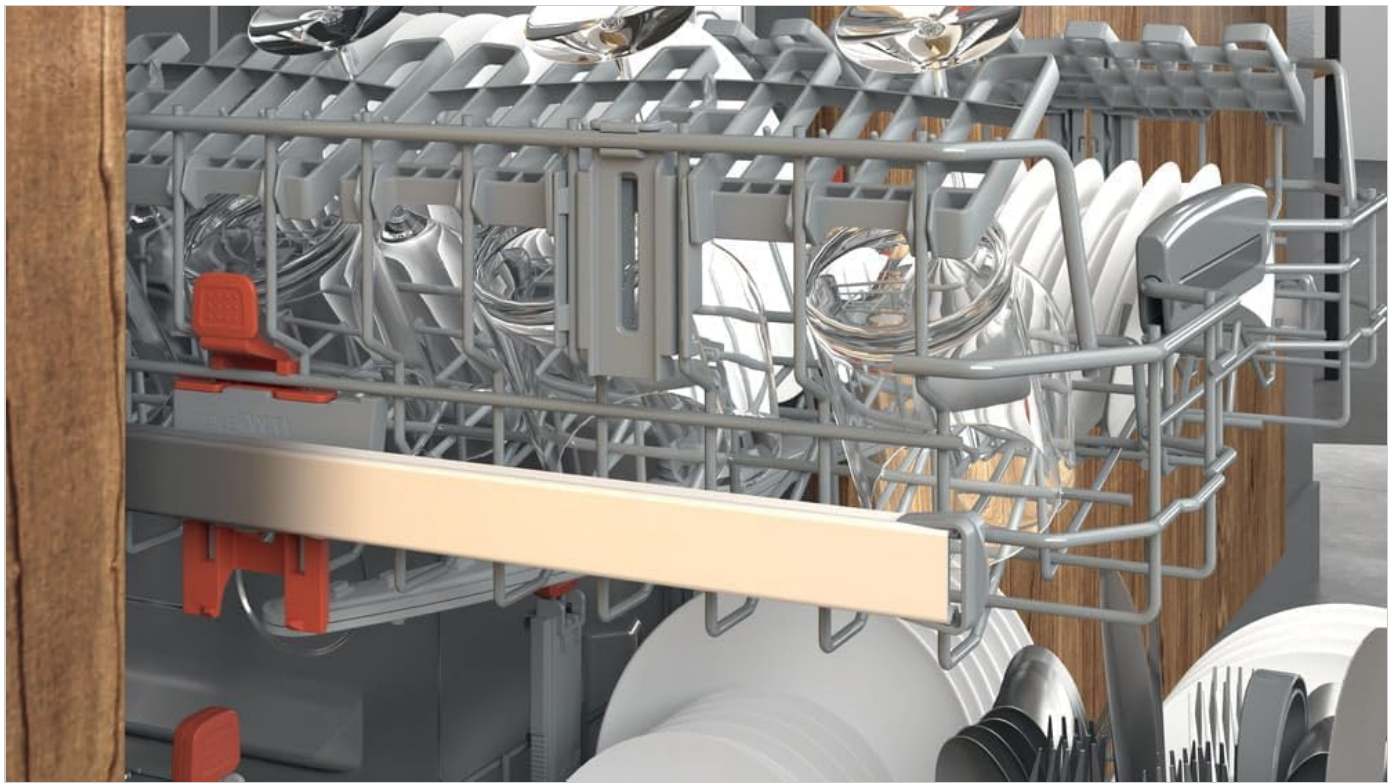 


Figure 4: A close-up view of the upper basket of the Hotpoint HIO3T141W dishwasher, demonstrating how glasses and smaller items can be arranged for effective cleaning.

Adding Detergent and Rinse Aid

- Fill the detergent dispenser with the appropriate amount of dishwasher detergent.
- Check the rinse aid indicator and refill the rinse aid dispenser when necessary.
- If using 'Tablets' (all-in-one detergents), select the 'Tablets' option if available on your control panel.

Program Selection

Your dishwasher offers 9 programs:

- **Eco:** Standard program for normally soiled dishes, most efficient in terms of water and energy consumption.
- **Auto Intensive:** For heavily soiled dishes and pots.
- **Auto Normal:** For normally soiled dishes.
- **Auto Fast Wash:** For lightly soiled dishes requiring a quick wash.
- **Express 30':** A rapid 30-minute cycle for lightly soiled dishes without drying.
- **Good Night:** A quieter program suitable for overnight use.
- **Soak:** For pre-washing dishes that will be washed later.
- **Sanitizer:** For enhanced hygiene.
- **Self-cleaning:** For maintaining the dishwasher's interior.

Special Functions

- **Delayed Start:** Allows you to delay the start of a wash cycle by up to 12 hours.
- **Zone Wash 3D:** This function provides targeted cleaning power to specific areas, enhancing wash performance for heavily soiled items.



Figure 5: A detailed view of the 3D Zone Wash spray arm within the Hotpoint HIO3T141W dishwasher, illustrating its powerful and targeted water jets for intensive cleaning.

MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your dishwasher.

Cleaning Filters

The filter system should be checked and cleaned regularly to prevent blockages and ensure optimal wash performance. Refer to your full manual for detailed instructions on how to remove and clean the filters.

Cleaning Spray Arms

Periodically check the spray arm nozzles for any blockages caused by food particles. If necessary, remove the spray arms and clean the nozzles under running water.

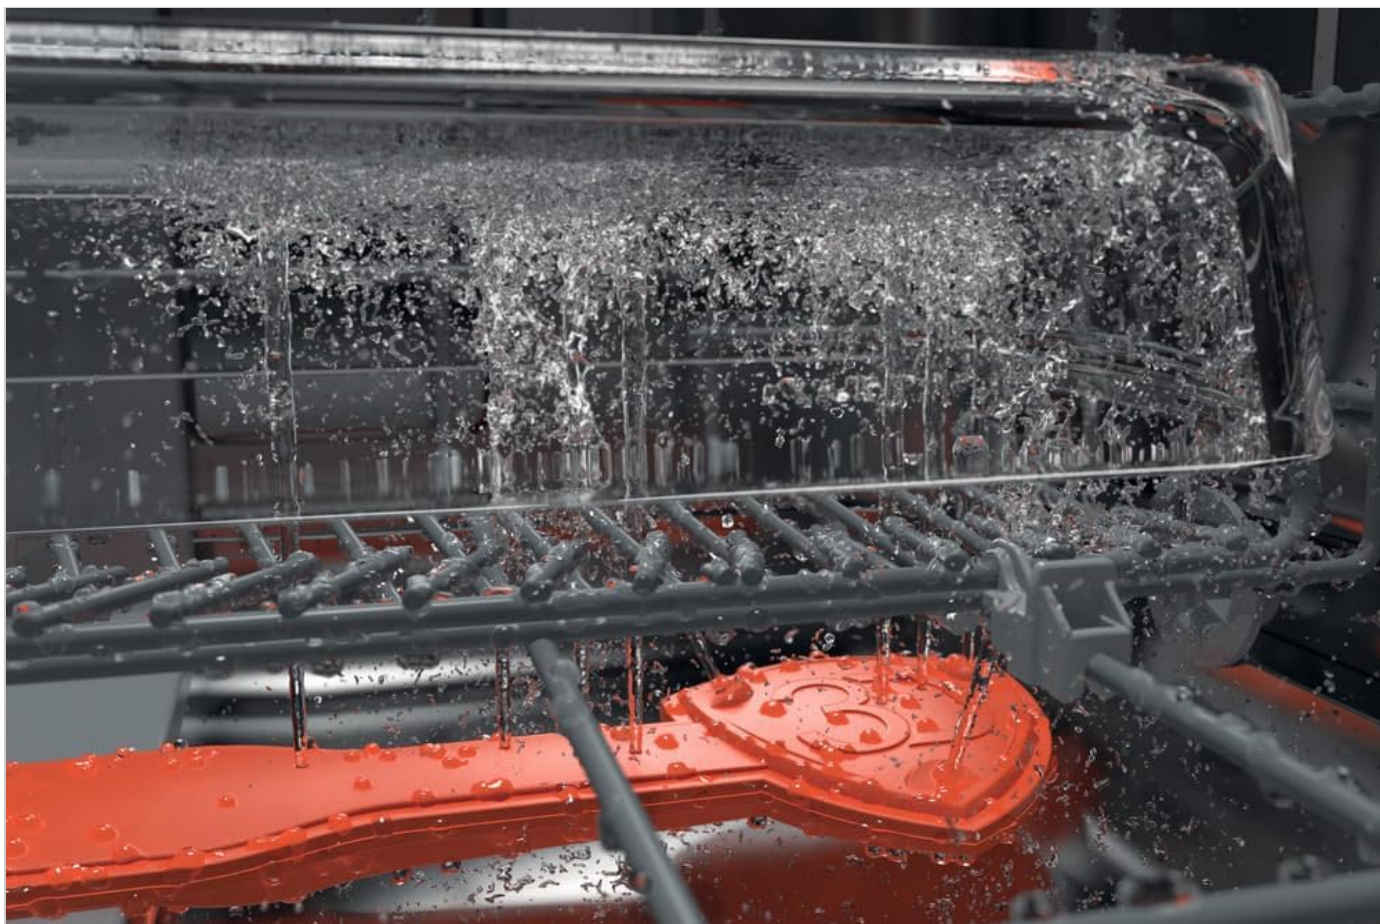 


Figure 6: Water actively spraying from the upper spray arm inside the Hotpoint HIO3T141W dishwasher, demonstrating the water distribution during a wash cycle.

Exterior Cleaning

Wipe the exterior surfaces of the dishwasher with a soft, damp cloth. Do not use abrasive cleaners or solvents.

Salt and Rinse Aid Indicators

Monitor the salt and rinse aid indicators on the control panel and refill as needed to ensure proper functioning and drying results.

TROUBLESHOOTING

Before contacting customer service, please check the following common issues:

- **Dishwasher does not start:** Ensure the door is fully closed, the power cable is connected, and the fuse is not blown.
- **Dishes are not clean:** Check that the spray arms are not blocked, filters are clean, and detergent dispenser is filled correctly. Ensure dishes are loaded properly and not obstructing spray arms.
- **Water remains in the dishwasher:** Check for blockages in the drain hose or filters.
- **Unusual noise:** Ensure dishes are not rattling against each other or obstructing the spray arms.

For more detailed troubleshooting or persistent issues, consult the comprehensive user manual or contact customer support.

SPECIFICATIONS

Model	HIO3T141W
Type	Fully Integrated Dishwasher

Capacity	14 Place Settings
Noise Level	41 dB
Programs	9 (Eco, Auto Intensive, Auto Normal, Auto Fast Wash, Express 30', Good Night, Soak, Sanitizer, Self-cleaning)
Special Functions	Delayed Start (12h), Zone Wash 3D, Tablets option
Water Consumption (Eco Cycle)	9 Liters
Annual Water Consumption	2520 Liters
Energy Consumption (Eco Cycle)	0.93 kWh
Annual Energy Consumption	265 kWh
Motor Type	Induction Motor
Interior Material	100% Stainless Steel Tank
Water Safety System	Aquastop
Net Dimensions (HxWxD)	82 x 59.5 x 57 cm
Built-in Dimensions (WxD)	60 x 57 cm (min height 82 cm)
Net Weight	35.5 kg
Power Supply	220 - 240 V ~ 50 Hz
Power Cable Length	128 cm
Max Door Panel Weight	10 kg

WARRANTY AND SUPPORT

Your Hotpoint HIO3T141W dishwasher comes with a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions, including the duration and coverage.

For technical assistance, spare parts, or to register your product, please visit the official Hotpoint website or contact their customer service department. Keep your purchase receipt and product model number (HIO3T141W) readily available when seeking support.

© 2023 Hotpoint. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question