

[Manuals.plus](#) /

› [Gabba Goods](#) /

› Gabba Goods Rainbow Color Changing LED Light Bulb User Manual

Gabba Goods Rainbow Color Changing LED Light Bulb

Gabba Goods Rainbow Color Changing LED Light Bulb User Manual

Model: Rainbow Color Changing LED Light Bulb (E26/E27 Base)

1. INTRODUCTION

Thank you for choosing the Gabba Goods Rainbow Color Changing LED Light Bulb. This manual provides essential information for the safe and efficient use of your new light bulb. Please read these instructions thoroughly before installation and retain for future reference.



Image 1.1: The Gabba Goods Rainbow Color Changing LED Light Bulb, showcasing its standard shape and colorful illumination.

2. SAFETY INFORMATION

- Ensure power is turned off at the main switch before installing or removing the bulb.
- Do not use with dimmers other than the provided remote control, as this may damage the bulb.
- This bulb is designed for indoor use only.
- Avoid exposing the bulb to water or high humidity.
- Do not disassemble the bulb. There are no user-serviceable parts inside.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Gabba Goods Rainbow Color Changing LED Light Bulb
- 1 x Remote Control (battery not included, typically CR2025 or similar)

4. SPECIFICATIONS

Feature	Specification
Brand	Gabba Goods
Light Type	LED
Special Feature	Color Changing
Wattage	5 watts
Bulb Base	E26/E27 Standard
Incandescent Equivalent	40 Watts
Brightness	450 Lumens (Color), 950 Lumens (White)
Voltage	100-120 Volts
Frequency	60 Hertz
Control Method	Remote Control
Number of Colors	16
Dimmable Grades	5
Material	Copper
Indoor/Outdoor Usage	Indoor

5. SETUP

1. **Power Off:** Before installation, ensure the power to the light fixture is turned off at the wall switch or circuit breaker.
2. **Install Bulb:** Carefully screw the Gabba Goods LED light bulb into a standard E26 or E27 light socket until it is snug. Do not overtighten.
3. **Insert Remote Battery:** Open the battery compartment on the back of the remote control and insert the required battery (typically a CR2025 coin cell, not included), ensuring correct polarity.
4. **Power On:** Restore power to the light fixture. The bulb should illuminate in a default mode or begin cycling through colors.

6. OPERATING INSTRUCTIONS

The Gabba Goods Rainbow Color Changing LED Light Bulb is controlled using the included remote control. Point the remote directly at the bulb for optimal response.

Remote Control Functions:

- **ON/OFF:** Press the power button to turn the bulb on or off.
- **Color Selection:** Use the dedicated color buttons to select one of the 16 available colors.
- **Brightness Adjustment:** Use the brightness up (+) and brightness down (-) buttons to adjust the light intensity across 5 grades.
- **Flash Mode:** Cycles through colors quickly.
- **Strobe Mode:** Flashes a single color.
- **Fade Mode:** Smoothly transitions between colors.
- **Smooth Mode:** Offers a more gradual color change than Fade mode.

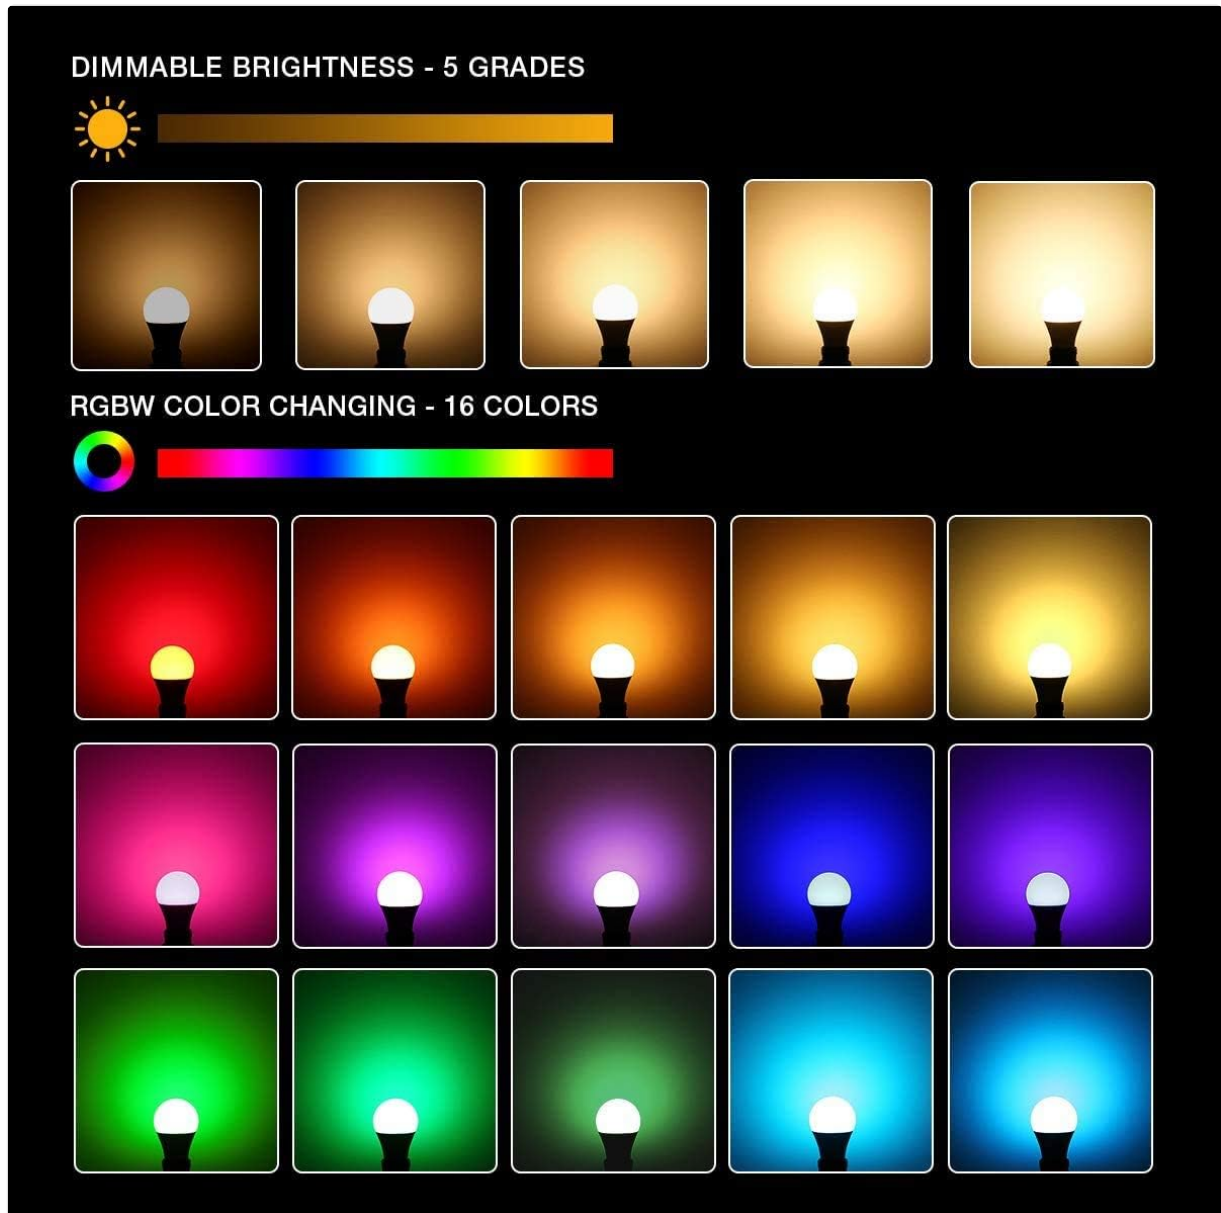


Image 6.1: Visual representation of the 5 dimmable brightness levels and the 16 distinct color options available with the remote control.

Important Operating Note:

When the bulb is turned off and then back on using a standard wall switch, it will typically default to a color cycling mode. To select a specific color or brightness, the remote control must be used after each power cycle from the wall switch.

7. MAINTENANCE

- **Cleaning:** Ensure the bulb is cool and power is off before cleaning. Wipe the bulb with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** If storing the bulb for an extended period, remove it from the fixture, ensure it is clean and dry, and store it in its original packaging or a protective container in a cool, dry place.

8. TROUBLESHOOTING

- **Bulb does not light up:**
 - Check if the power switch is on.
 - Ensure the bulb is screwed in securely.
 - Verify that the light fixture is receiving power.
- **Remote control is not working:**
 - Check if the battery in the remote control is inserted correctly and has sufficient charge. Replace if necessary.
 - Ensure there are no obstructions between the remote and the bulb.
 - Point the remote directly at the bulb.
- **Bulb cycles through colors every time it's turned on via wall switch:**
 - This is expected behavior. To select a specific color or mode, use the provided remote control after turning the bulb on.
- **Colors are not accurate or consistent:**
 - Ensure the bulb is not exposed to extreme temperatures or humidity.
 - Try resetting the bulb by turning it off for 10 seconds and then back on.

9. WARRANTY AND SUPPORT

Gabba Goods products are manufactured to high-quality standards. For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Gabba Goods website. Please have your product model and purchase date available when contacting support.