

ALLIMITY RMC-02

ALLIMITY RMC-02 Remote Control Instruction Manual

For Westinghouse Widescreen TV DVD Combo Models

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your ALLIMITY RMC-02 Infrared (IR) Remote Control. Please read this manual thoroughly before using the remote control to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

The ALLIMITY RMC-02 is a replacement infrared remote control designed for specific Westinghouse Widescreen TV DVD Combo units. It requires no programming; simply insert batteries to begin use.

2.1 Compatible Models

- SK-26H570D
- SK-32H570D
- SK-26H590D
- SK-32H590D
- SK-40H590D
- VK-40F580D

This remote control is also compatible with models SK26H570D, SK32H570D, SK26H590D, SK32H590D, SK40H590D, and VK40F580D.

3. SETUP

3.1 Battery Installation

The RMC-02 remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Figure 1: Battery compartment with cover removed.

4. OPERATING INSTRUCTIONS

To operate the remote control effectively, ensure a clear line of sight between the remote and the infrared sensor on your Westinghouse TV DVD Combo unit. Avoid any obstacles that may block the signal.

1. **Point the Remote:** Aim the front of the remote control directly towards the infrared sensor on your television or DVD player.
2. **Press Buttons:** Press the desired function button (e.g., Power, Volume, Channel, Input) firmly.
3. **Signal Transmission:** The remote control transmits an infrared signal. Ensure no objects are between the remote and the device.

4.1 Button Functions Overview

The RMC-02 remote control features a standard layout for easy navigation and control of your Westinghouse TV DVD Combo. Below is a general overview of key button functions:





Figure 2: Front view of the RMC-02 Remote Control.

- **Power Button (U):** Turns the TV/DVD Combo unit on or off.
- **TV/DVD/PC Buttons:** Selects the operating mode for Television, DVD, or PC input.
- **YPbPr/Video/HDMI Buttons:** Selects specific video input sources.
- **Number Buttons (0-9):** For direct channel selection or inputting numbers.
- **Vol +/-:** Adjusts the volume level.
- **Ch +/-:** Changes channels up or down.
- **Input:** Cycles through available input sources.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Used for menu navigation and selection.
- **Menu:** Accesses the main menu of the TV or DVD player.
- **Setup:** Accesses setup options.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip):** Controls DVD playback functions.

5. MAINTENANCE

5.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, aerosols, or abrasive materials, as these may damage the remote's surface or internal components.

5.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries or different types of batteries.

6. TROUBLESHOOTING

If you experience issues with your RMC-02 remote control, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Remote control is not working.	Dead or incorrectly installed batteries.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).
Remote control has limited range or intermittent response.	Obstruction between remote and device sensor. Weak batteries.	Ensure a clear line of sight to the device's IR sensor. Replace batteries.
Remote control does not operate the TV/DVD Combo.	Incompatible model.	Verify your TV DVD Combo model is listed in the "Compatible Models" section (Section 2.1). If not, contact support.

7. SPECIFICATIONS

- **Model Number:** RMC-02 (AMT-RMC-02)
- **Connective Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 9 x 2 x 0.7 inches (approximately)
- **Item Weight:** 3 ounces (approximately)
- **Compatible Devices:** Television
- **Max Number of Supported Devices:** 1
- **Color:** Silver (as pictured)

8. WARRANTY

Specific warranty details for the ALLIMITY RMC-02 remote control are not provided in this manual. For information regarding warranty coverage, please refer to the product packaging or contact ALLIMITY customer support.

9. SUPPORT

If you have further questions, require assistance, or cannot find your specific model listed, please contact ALLIMITY customer support. They can provide additional guidance and help you find the correct remote control for your device.

Please refer to the contact information provided with your purchase or on the official ALLIMITY website for support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question