



Manuals.plus /

› **LELO** /

› LELO SILA Sonic Clitoral Massager Instruction Manual

LELO 8328

LELO SILA Sonic Clitoral Massager Instruction Manual

Model: SILA (8328)

Brand: LELO

INTRODUCTION


The LELO SILA is a sonic clitoral massager designed for gentle external stimulation. It features innovative sonic wave technology, a large mouth for comfort, 8 pleasure settings, and is crafted from extra-soft, body-safe silicone. This device is fully waterproof and USB rechargeable, offering a versatile and satisfying experience.

WHAT'S INCLUDED

Your LELO SILA package contains the following items:

- LELO SILA Sonic Clitoral Massager
- USB Charging Cord
- Satin Storage Pouch
- Warranty Registration Card
- Detailed Instruction Manual

SILA™
sonic clitoral massager

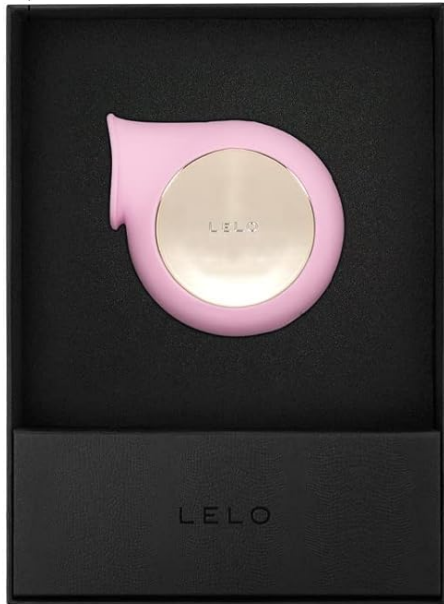

MANUAL
how to use guide



MOISTURIZER SACHET
water-based lubricant
5 ml / 0.17 fl. oz.



CHARGING CORD
USB cable



WARRANTY CARD
verifies product authenticity

SATIN POUCH
for storage

Image: LELO SILA package contents, showing the device, charging cable, pouch, and documentation.

SETUP

Charging Your Device

Before first use, ensure your LELO SILA is fully charged. A full charge typically takes approximately 2 hours.

1. Insert the DC plug of the supplied USB charging cord into the charging port located at the base of your LELO SILA device.
2. Connect the USB end of the cable to any standard USB port (e.g., computer, wall adapter).
3. The LED light on the device will pulsate while charging and switch to a steady glow when fully charged.
4. Always use the LELO charging cable to prevent battery damage. Do not leave it charging overnight.

If the LED light does not turn on immediately when connecting the USB charger, it indicates the battery is completely empty. It may take a few minutes for the charging indicator to appear.



Image: LELO SILA charging port.

Unlocking Your Device

Your LELO SILA is locked for transportation. To unlock it:

- Press and hold the '+' and '-' buttons simultaneously for 3 seconds until the lights turn on.

To lock the device for travel, repeat the same procedure.

OPERATING INSTRUCTIONS

Basic Controls

- **To Turn On:** Press the () button. The LED lights will blink to indicate the battery level.
- **To Increase Intensity:** Press the '+' button.
- **To Decrease Intensity:** Press the '-' button.
- **To Switch Between 8 Pleasure Settings:** Press the () button.

- **To Turn Off:** Press and hold the () button for 3 seconds.

Features



SONSONIC™ TECHNOLOGY

deep and gentle sonic wave stimulation



8 SETTINGS

from a teasing murmur to a satisfying pulse



LONG-LASTING CHARGE

longer time for pleasure



SCULPTED FOR YOUR PLEASURE

fits your body like a glove



WATERPROOF DESIGN

perfect for the bath and shower



EXTRA-SOFT SILICONE

ultra-smooth premium silicone that feels warm to the touch

Image: LELO SILA key features.



How to use

BEFORE FIRST USE

charge your device for 2 hours

TO TURN IT ON

press the () button

THE LED LIGHTS WILL BLINK

to indicate the battery level

TO SWITCH BETWEEN 8 PLEASURE SETTINGS

press the () button

TO INCREASE OR DECREASE THE INTENSITY

use the + or the - button

TO TURN IT OFF

press and hold the () button for 3 seconds

Image: LELO SILA usage guide.

Usage Suggestions

For an enhanced experience, apply LELO Personal Moisturizer to the device and your body. Turn on the device and gently place its mouth above your clitoris. Begin with a low intensity and gradually increase the vibration strength as desired. Explore the 8 different pleasure settings to find what is most comfortable and pleasurable for you. Listen to your body and adjust the settings accordingly.

Your browser does not support the video tag.

Video: Official LELO guide on how to use the SILA device, covering charging, unlocking, and various operational modes.

MAINTENANCE

Cleaning

Always clean your LELO SILA thoroughly before and after each use. The safest method is to use LELO Premium Cleaning Spray. Alternatively, you can wash the device with lukewarm water and a gentle, silicone-safe soap. Avoid using cleaners containing

silicone, alcohol, petrol, or acetone, as these can damage the device.

- Spray LELO Premium Cleaning Spray directly onto the device, leave for 5 seconds, then gently wipe away with a lint-free cloth.
- When cleaning the mouth of the device, avoid applying excessive force to prevent damage to the opening.
- Although LELO SILA is fully waterproof, always ensure the charging port is completely dry before plugging in the charging cable. The port is vacuum-sealed, so water damage is unlikely if properly dried.

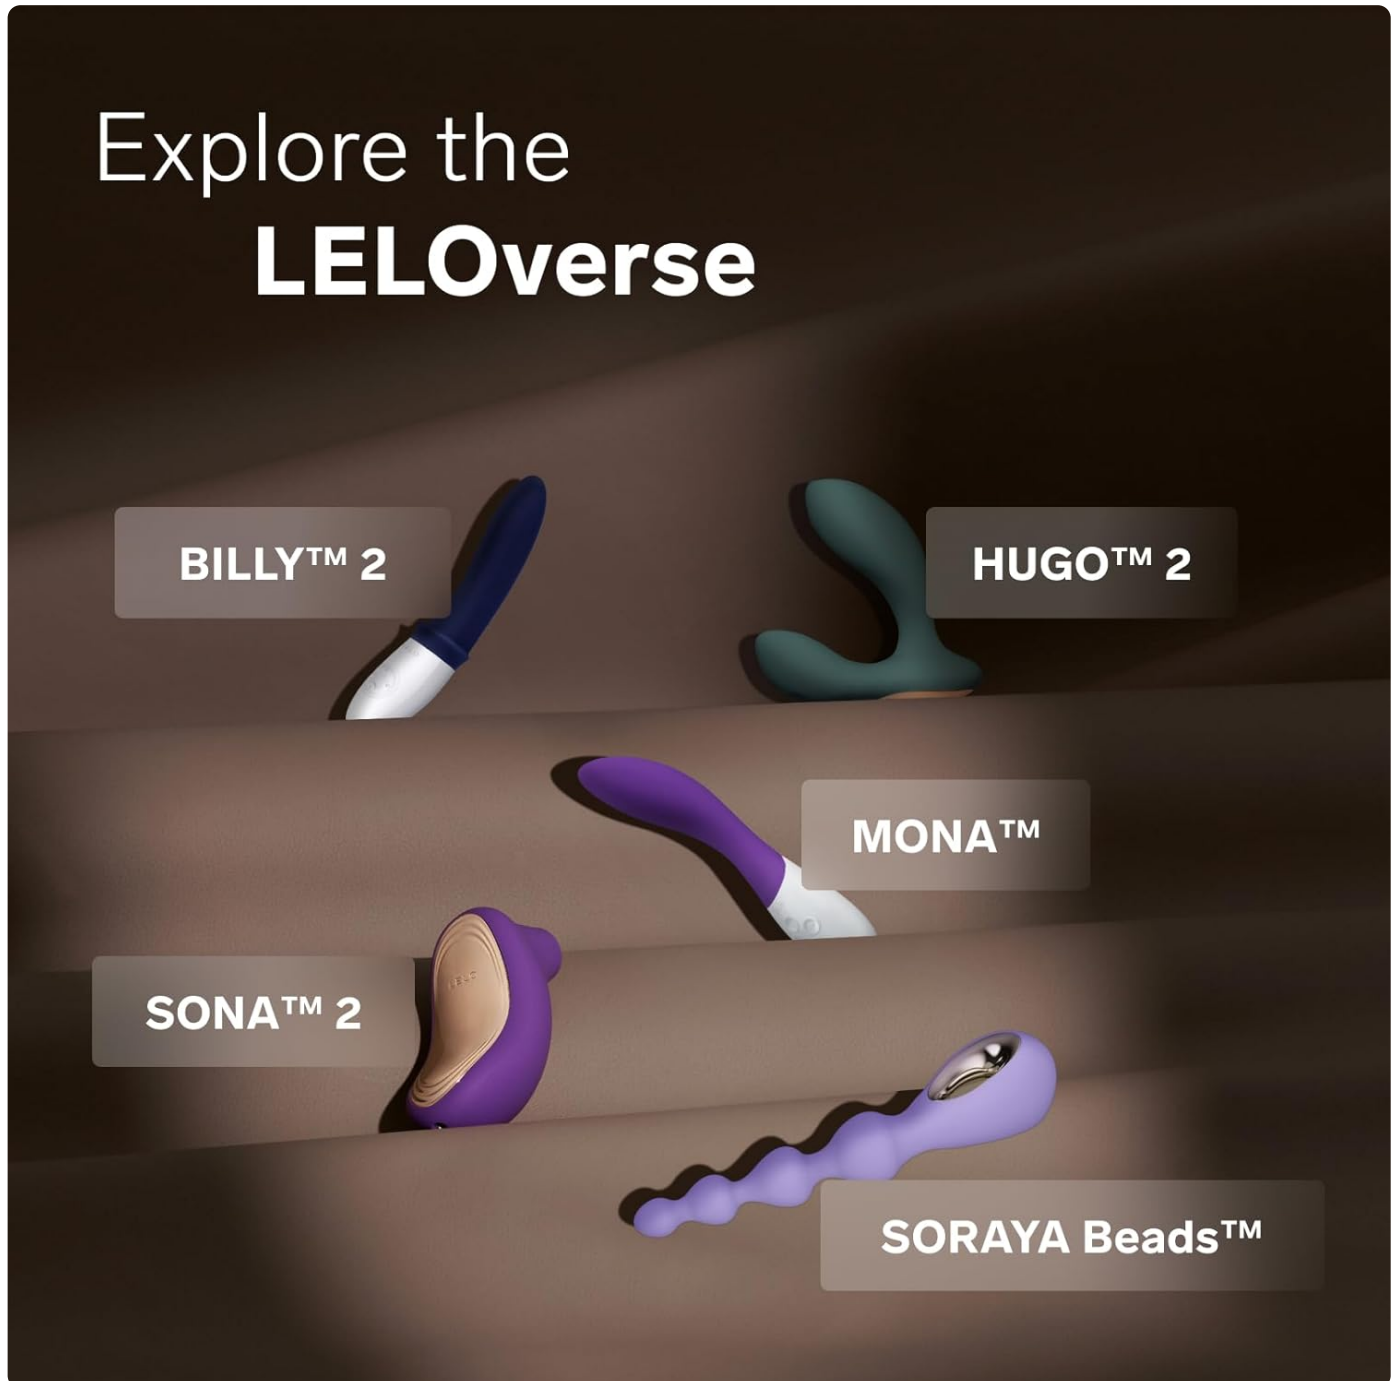


Image: LELO SILA demonstrating its waterproof feature.

Storing

After cleaning, store your LELO SILA in the provided satin pouch. Keep it in a dry and safe place, away from direct heat or sunlight, to maintain its quality and longevity.

TROUBLESHOOTING

If you encounter any issues with your LELO SILA, please consider the following:

- **Device Not Turning On:** Ensure the device is fully charged and unlocked. Refer to the 'Charging Your Device' and 'Unlocking Your Device' sections.
- **Weak or Inconsistent Vibration:** The battery might be low. Charge the device fully.
- **Difficulty Changing Settings:** Ensure you are pressing the correct buttons as described in the 'Basic Controls' section.

For further assistance, please contact LELO Customer Service.

SPECIFICATIONS

Feature	Detail
Product Dimensions	3.1 x 2.9 x 1.4 inches
Weight	3.68 ounces
Item Model Number	8328
Battery Type	1 Lithium Polymer battery (included)
Manufacturer	LELO
ASIN	B08LBPXWYV

WARRANTY & SUPPORT

Warranty Information

LELO offers a 1-year warranty for manufacturing defects and a 10-year quality guarantee for registered products. To claim your warranty, you must first register your product on LELO.com.

Product Registration

To register your LELO SILA:

1. Visit LELO.com.
2. Click on 'REGISTER/LOG IN' at the top right-hand corner of the page.
3. Create an account or log in if you already have one.
4. Navigate to 'Register Product' and fill in the requested details, including the serial number found on your Product Authenticity Card.

If you purchased your LELO SILA from a retailer, please retain your receipt for warranty purposes.

Customer Support

For any further questions or support, please feel free to contact LELO Customer Service at customercare@lelo.com.