

Manuals.plus /

› Aiwa /

› Aiwa CR-15 Alarm Clock Radio User Manual

## Aiwa CR-15

# Aiwa CR-15 Alarm Clock Radio

## USER MANUAL

### Product Overview

---

The Aiwa CR-15 is a compact and versatile alarm clock radio designed for ease of use and reliable performance. It features a clear LED display, dual alarm functionality, and both AM/FM PLL tuner capabilities.

- **Compact Size:** Designed to fit easily on any nightstand or desk.
- **White LED Display:** Clear 0.6-inch display for easy readability.
- **AM/FM PLL Tuner:** Provides stable and clear radio reception.
- **20 Presets:** Store up to 10 FM and 10 AM radio stations for quick access.
- **Dual Alarm:** Set two independent alarms with options for radio or buzzer.
- **Snooze & Sleep Function:** Convenient features for managing your wake-up and sleep routines.
- **Battery Backup:** Ensures time settings are retained during power outages (requires 2 x LR03/AAA batteries, not included).



Front view of the Aiwa CR-15 Alarm Clock Radio, showing its compact design and the digital LED display.

## Controls and Display

---

Familiarize yourself with the buttons and display elements for optimal use of your Aiwa CR-15.



Top view of the Aiwa CR-15, highlighting the control buttons for volume, tuning, alarm, and snooze.

#### Button Functions:

- **RADIO / POWER Button:** Turns the radio on/off.
- **VOLUME +/- Buttons:** Adjusts the audio volume.
- **BAND Button:** Switches between AM and FM radio bands.
- **MEM / MEM SET Button:** Used to store and recall radio presets.
- **SET / SET Button:** Used to enter time and alarm setting modes.
- **HOUR / MIN Buttons:** Adjusts hour and minute settings during time/alarm setup, and tunes radio frequency.
- **SNOOZE Button:** Temporarily silences the alarm for a short period.
- **SLEEP / SLEEP Button:** Activates and adjusts the sleep timer.

#### Display Indicators:

- **Time Display:** Shows the current time in 24-hour format.
- **Alarm 1 Indicator:** Lights up when Alarm 1 is active.
- **Alarm 2 Indicator:** Lights up when Alarm 2 is active.
- **AM/FM Indicators:** Shows the currently selected radio band.

## Initial Setup

---

### Power Connection:

1. Plug the AC power cord into a standard 100-240V, 50/60Hz wall outlet.
2. The display will light up, and the clock will be ready for time setting.

### Battery Backup Installation:

For backup power during outages, install two LR03/AAA batteries (not included).

1. Locate the battery compartment on the bottom of the unit.
2. Open the battery compartment cover.
3. Insert two LR03/AAA batteries, observing the correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

*Note: The battery backup only retains time and alarm settings; it does not power the display or alarm functions during a power outage.*

## Operating Instructions

---

### Setting the Time:

1. Ensure the unit is powered on.
2. Press and hold the **SET** button until the hour digits begin to flash.
3. Use the **HOUR** button to adjust the hour.
4. Press the **SET** button again; the minute digits will flash.
5. Use the **MIN** button to adjust the minutes.
6. Press the **SET** button once more to confirm and exit time setting mode.

### Setting Alarms (Alarm 1 & Alarm 2):

The Aiwa CR-15 allows you to set two independent alarms.

1. Press the **SET** button once (do not hold) to select Alarm 1 or Alarm 2. The corresponding alarm indicator will flash.
2. Press and hold the **SET** button until the hour digits of the selected alarm flash.
3. Use the **HOUR** button to set the desired alarm hour.
4. Press the **SET** button again; the minute digits will flash.
5. Use the **MIN** button to set the desired alarm minutes.
6. Press the **SET** button again to select the alarm source: **Radio** or **Buzzer**. Use **HOUR/MIN** buttons to toggle.
7. Press the **SET** button once more to confirm and exit alarm setting mode.
8. To activate/deactivate an alarm, press the **SET** button repeatedly until the desired alarm indicator (1 or 2) is lit (active) or off (inactive).

### Using the Radio (AM/FM Tuning and Presets):

1. Press the **RADIO** button to turn on the radio.
2. Press the **BAND** button to switch between AM and FM bands.
3. **Manual Tuning:** Use the **HOUR** (tune down) or **MIN** (tune up) buttons to manually adjust the frequency.
4. **Auto Scan:** Press and hold the **HOUR** or **MIN** button to automatically scan for the next available station.
5. **Storing Presets:**
  - a. Tune to the desired station.

- b. Press and hold the **MEM / MEM SET** button until "PXX" flashes on the display (XX is the preset number).
- c. Use the **HOUR** or **MIN** buttons to select the desired preset number (P01-P10 for each band).
- d. Press **MEM / MEM SET** again to confirm and save the station.

6. **Recalling Presets:** While in radio mode, press the **MEM / MEM SET** button repeatedly (do not hold) to cycle through your stored presets.

### Snooze Function:

When an alarm sounds, press the large **SNOOZE** button on top of the unit. The alarm will temporarily stop and sound again after approximately 9 minutes.

### Sleep Timer Function:

The sleep timer allows the radio to play for a set duration before automatically turning off.

1. While the radio is playing, press the **SLEEP** button repeatedly to cycle through available sleep times (e.g., 90, 60, 30, 15 minutes, OFF).
2. The radio will automatically turn off after the selected time duration.

## Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- **Dust:** Keep the unit free from dust accumulation, especially around the speaker grille and buttons.
- **Placement:** Place the unit on a stable, flat surface away from direct sunlight, heat sources, and excessive moisture.
- **Battery Replacement:** Replace backup batteries annually or when the unit is unplugged for extended periods to ensure time retention.

## Troubleshooting

Problem	Possible Cause	Solution
Unit does not power on.	Power cord not securely plugged in.	Check power connection to the wall outlet and the unit.
Display is blank during power outage.	Battery backup not installed or depleted.	Install or replace LR03/AAA backup batteries. Note: Display does not light up on battery power.
Radio reception is poor.	Antenna not extended or positioned correctly; interference.	Extend the FM wire antenna fully. For AM, rotate the unit for best reception. Move away from electronic devices causing interference.
Alarm does not sound.	Alarm not activated; volume too low (for radio alarm); incorrect alarm time.	Ensure alarm indicator is lit. Increase radio volume if using radio alarm. Verify alarm time is set correctly.
Time/Alarm settings reset after power loss.	Backup batteries are missing or dead.	Install new LR03/AAA batteries for backup.

## Technical Specifications

Feature	Detail
Model	CR-15
Display Type	0.6-inch White LED
Tuner Type	AM/FM PLL
Radio Presets	20 (10 FM / 10 AM)
Alarm Functions	Dual Alarm, Snooze, Sleep Timer
Alarm Source	Radio or Buzzer
Power Source	AC 100-240V ~ 50/60Hz
Battery Backup	2 x LR03/AAA (not included)
Product Dimensions (W x H)	4.92" x 1.77" (approximate)
Item Weight	14.5 ounces (approximate)

## Warranty and Support

---

Aiwa products are manufactured to high-quality standards. For detailed warranty information specific to your region, please refer to the warranty card included with your product or visit the official Aiwa website.

For further assistance, product registration, or to explore more features of your Aiwa CR-15, please visit the official Aiwa support resources:

- Official Aiwa Website: [www.eu-aiwa.com](http://www.eu-aiwa.com)
- Product Features Page: [features.eu-aiwa.com/products/?sku=CR-15](http://features.eu-aiwa.com/products/?sku=CR-15)

Please retain your purchase receipt as proof of purchase for warranty purposes.

