

[Manuals.plus](#) /

› [NKF](#) /

› NKF SE-R0295 Remote Control Instruction Manual for Toshiba DVD/VCR Players

NKF SE-R0295

NKF SE-R0295 Remote Control Instruction Manual

For Toshiba DVD/VCR Player Models: D-VR620, D-VR620KU, DVR620, DKVR20U, DKVR2K0, DVR620KU, D-VR610, D-VR610KU, DVR610, DVR610KU, D-KVR2K0, D-KVR60, D-KVR20, D-KVR20U, DKVR60KU, DKVR20, DKVR60

1. PRODUCT OVERVIEW

The NKF SE-R0295 is a direct replacement remote control designed for various Toshiba DVD and VCR player models. It offers immediate functionality without the need for programming or pairing. Simply insert batteries, and it is ready for use.



Figure 1: Front and back view of the SE-R0295 remote control.

This remote control is compatible with the following Toshiba models:

- D-VR620, D-VR620KU, DVR620
- DKVR20U, DKVR2K0, DVR620KU

- D-VR610, D-VR610KU, DVR610
- DVR610KU, D-KVR2K0, D-KVR60
- D-KVR20, D-KVR20U, DKVR60KU
- DKVR20, DKVR60



Figure 2: SE-R0295 remote control highlighting compatible models.

2. GETTING STARTED

2.1 Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the latch and slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Slide the battery compartment cover back into place until it clicks securely.



Figure 3: Correct battery installation for the SE-R0295 remote control.

Note: Always replace both batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote control will not be used for an extended period.

Your browser does not support the video tag.

Video 1: Demonstration of battery installation and general remote control overview.

3. OPERATING INSTRUCTIONS

The SE-R0295 remote control provides full functionality for your compatible Toshiba DVD/VCR player. The buttons are intuitively laid out for ease of use.

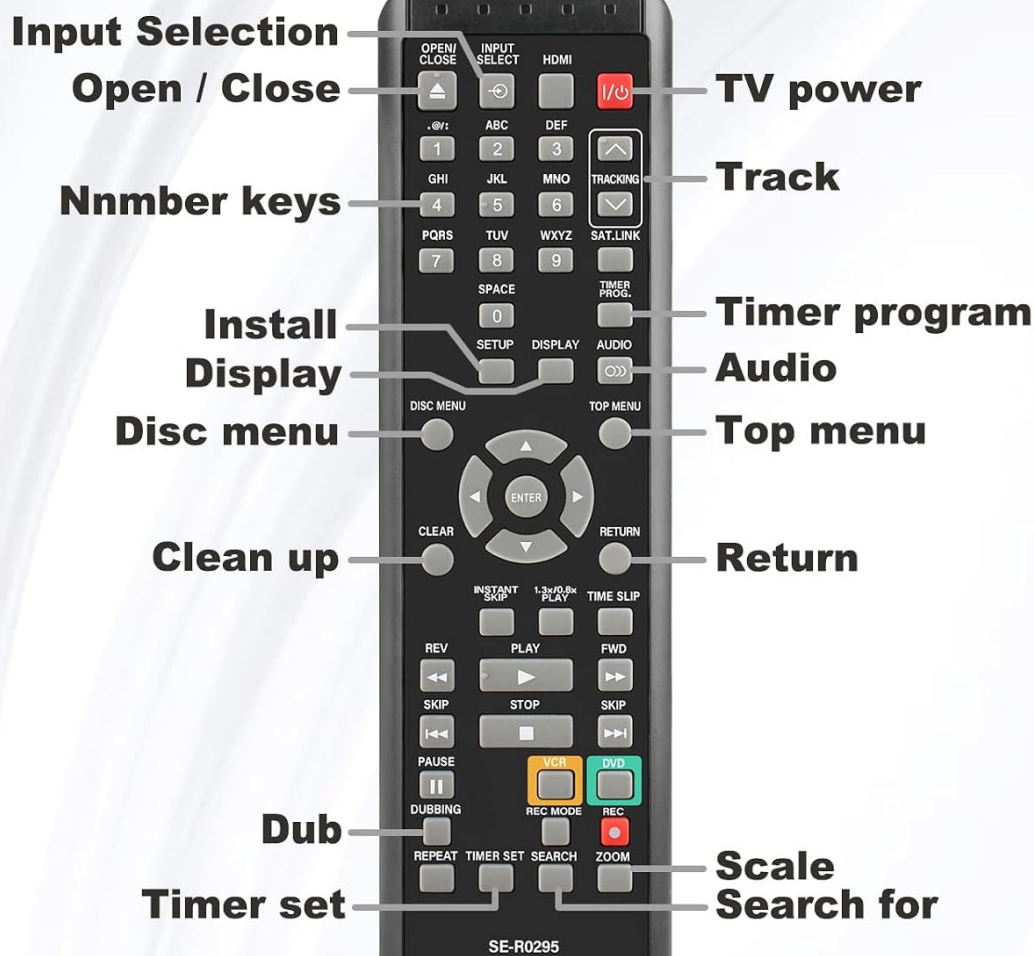


Figure 4: Button layout and functions of the SE-R0295 remote control.

3.1 Key Functions

- **Power (I/O)**: Turns the device on or off.
- **Input Select**: Cycles through available input sources.
- **Open/Close**: Opens or closes the disc tray.
- **Number Keys (0-9)**: Used for direct track selection, channel input, or time entry.
- **Setup**: Accesses the system setup menu.
- **Display**: Shows on-screen information.
- **Audio**: Selects audio tracks or modes.
- **Disc Menu / Top Menu**: Navigates to the disc menu or top menu.
- **Navigation (Up, Down, Left, Right, Enter)**: Used to navigate menus and confirm selections.
- **Clear**: Clears entries or cancels operations.
- **Return**: Returns to the previous menu or screen.
- **Playback Controls (Play, Pause, Stop, FWD, REV, Skip)**: Standard controls for media playback.
- **REC / REC MODE**: Initiates recording or selects recording mode (for VCR functions).

- **Dubbing:** Used for dubbing content (VCR function).
- **Repeat / Timer Set / Search / Zoom** Additional functions for playback, timer settings, searching, and zooming.

4. CARE AND MAINTENANCE

- Keep the remote control dry. Avoid exposure to moisture or liquids.
- Do not drop or subject the remote control to strong impacts.
- Clean the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the remote control in a cool, dry place when not in use for extended periods.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote control and the device's infrared sensor.
 - Ensure you are within the effective operating range (up to 10 meters / 33 feet).
- **Intermittent response:**
 - Batteries may be low; replace them.
 - Ensure a clear line of sight to the device.

6. PRODUCT SPECIFICATIONS

Feature	Specification
Model Number	SE-R0295
Product Dimensions	8.46 x 2.18 x 1.03 inches
Item Weight	3.2 ounces
Batteries Required	2 x AAA batteries (not included)
Material	ABS
Color	Black
Special Feature	No Programming Required

NKF



Figure 5: Physical dimensions of the SE-R0295 remote control.

7. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For specific warranty details or technical support, please refer to the documentation provided with your purchase or contact the retailer. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08LD3537M>

More documents and user manuals: <https://manuals.plus/>