

NKF SE-R0265

NKF SE-R0265 Remote Control User Manual

For Toshiba DVD Players

INTRODUCTION

This manual provides instructions for the NKF SE-R0265 replacement remote control. This remote is designed to function as a direct replacement for the original remote controls of various Toshiba DVD player models, offering full functionality without the need for programming.

Compatible Toshiba DVD Player Models:

- D-R400, D-R400KU
- D-R410, D-R410KU
- D-R420, D-R420KU
- D-R430, D-R430KU
- D-KR10, D-KR10KU
- D-KR40, D-KR40KU

SETUP

The NKF SE-R0265 remote control requires no programming or pairing. Simply install the batteries to begin operation.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two (2) new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image: Back view of the remote control with the battery compartment open, showing where to insert two AAA batteries.

OPERATING INSTRUCTIONS

After installing the batteries, the remote control is ready for immediate use. Point the remote control directly at your Toshiba DVD player.

Basic Functions

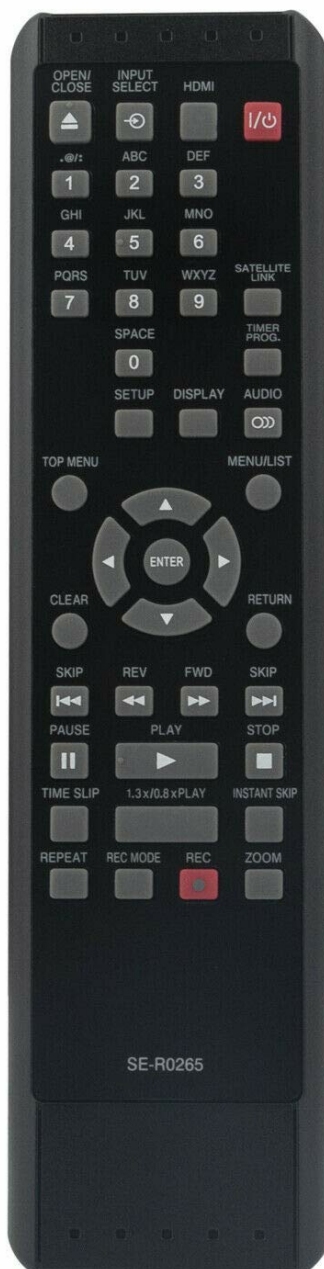


Image: Front view of the NKF SE-R0265 remote control, displaying all 42 buttons for various functions.

- **I/O (Power):** Turns the DVD player on or off.
- **Number Buttons (0-9):** Used for direct track selection or inputting numerical data.
- **Input Select/HDMI:** Switches input sources on the connected display (if supported by the DVD player).
- **Top Menu/Menu List:** Accesses the main menu or disc menu.
- **Directional Pad (Up, Down, Left, Right) & Enter:** Navigates through menus and confirms selections.
- **Play, Pause, Stop:** Controls disc playback.
- **FWD (Fast Forward), REV (Rewind):** Fast forward or rewind playback.

- **Skip (Forward/Backward):** Skips to the next or previous track/chapter.
- **REC (Record):** Initiates recording (if your DVD player supports recording functionality).
- **Volume/Audio:** Adjusts volume or selects audio tracks (if supported by the DVD player).
- **Display:** Shows on-screen information about the current playback.
- **Clear:** Clears input or cancels a selection.
- **Return:** Returns to the previous screen or menu.
- **Zoom:** Zooms in or out on the video playback.

MAINTENANCE

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

Battery Care

- Replace batteries when the remote's performance diminishes or stops working.
- Always replace both batteries at the same time with new ones of the same type (AAA alkaline).
- If the remote control will not be used for an extended period (e.g., one month or more), remove the batteries to prevent leakage and potential damage.
- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Remote Control Not Responding

- **Check Batteries:** Ensure the batteries are inserted correctly with the correct polarity (+/-).
- **Replace Batteries:** If the batteries are old or depleted, replace them with two new AAA alkaline batteries.
- **Line of Sight:** Ensure there are no obstructions between the remote control and the infrared sensor on your DVD player. The remote requires a clear line of sight to function.
- **Distance:** Make sure you are within the effective operating range (approximately 10 meters or 33 feet) of the DVD player.
- **Infrared Interference:** Bright light sources, such as direct sunlight or certain types of fluorescent lighting, can interfere with the remote's infrared signal. Try using the remote in a different lighting condition.

Specific Buttons Not Working

- This remote is a direct replacement. If specific functions are not working, ensure your Toshiba DVD player model supports that particular function. Some buttons may be specific to certain DVD player models or features.
- Clean the remote control surface, especially around the non-working buttons, to ensure no debris is obstructing the button mechanism.

SPECIFICATIONS

Model Name	SE-R0265
Brand	NKF

Connectivity Technology	Infrared
Compatible Devices	Toshiba DVD/Blu-ray Players (specific models listed in Introduction)
Number of Buttons	42
Maximum Range	10 Meters (approx. 33 feet)
Battery Type	2 x AAA Alkaline Batteries
Color	Black
Item Weight	0.2 Pounds

WARRANTY INFORMATION

This product is covered by a standard manufacturer's warranty. For specific details regarding warranty coverage, duration, and claims process, please refer to the product packaging or contact the seller directly. Please retain your proof of purchase for any warranty-related inquiries.

SUPPORT

For further assistance, technical support, or if you encounter any issues not covered in this manual, please contact the retailer or manufacturer from whom you purchased the NKF SE-R0265 remote control. When contacting support, please have the following information ready:

- Product Model Number: **SE-R0265**
- Date of Purchase
- Description of the issue

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question