

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Acekool](#) /

› [Acekool MC1 7.5QT 660W 10-Speed Tilt-Head Stand Mixer Instruction Manual](#)

Acekool MC1

Acekool MC1 7.5QT 660W 10-Speed Tilt-Head Stand Mixer Instruction Manual

Model: MC1 (MK-5101)

INTRODUCTION

Thank you for choosing the Acekool MC1 7.5QT 660W 10-Speed Tilt-Head Stand Mixer. This appliance is designed to simplify your baking and cooking tasks with its powerful motor and versatile attachments. Please read this manual thoroughly before initial use to ensure safe and optimal operation. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always unplug the mixer from the power outlet before cleaning, assembling, or disassembling parts.
- Do not immerse the motor unit in water or any other liquid.
- Keep hands, hair, clothing, as well as spatulas and other utensils away from moving beaters during operation to prevent injury and/or damage to the mixer.
- Never operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use outdoors.
- Ensure the tilt-head is securely locked down before operating the mixer.
- The mixer is equipped with a safety lock feature; it will not operate if the head is tilted up.

PACKAGE CONTENTS

Your Acekool Stand Mixer package includes the following items:

- Acekool Stand Mixer Motor Unit
- 7.5-Quart Stainless Steel Mixing Bowl with Handle
- Dough Hook
- Flat Beater
- Whisk

- Splash Guard



Image: Acekool Stand Mixer with 7.5QT bowl, dough hook, flat beater, and whisk.

PRODUCT OVERVIEW

The Acekool MC1 Stand Mixer features a robust 660W pure copper motor and a tilt-head design for easy access to the mixing bowl and attachments. It includes anti-slip silicone suction cups for stability during operation.

Upgrade Design



Image: Detailed view of the mixer's design elements, including the speed knob with LED indicator, tilt-head lock, and suction feet.

SETUP

- Placement:** Place the mixer on a dry, flat, and stable surface. Ensure the anti-slip suction cups are firmly attached to the countertop.
- Tilt-Head Up:** Push the tilt-head release lever (located on the side of the mixer) and lift the motor head until it locks in the upright position.
- Attach Bowl:** Place the 7.5QT stainless steel mixing bowl onto the base, aligning the tabs on the bowl with the slots on the base. Turn the bowl clockwise until it locks securely.
- Attach Accessory:** Select the desired attachment (dough hook, flat beater, or whisk). Insert the attachment shaft into the accessory port on the motor head. Turn the attachment counter-clockwise until it locks into place.
- Tilt-Head Down:** Push the tilt-head release lever again and gently lower the motor head until it locks into the operating position.
- Attach Splash Guard:** If desired, place the splash guard over the mixing bowl. Ensure the pouring chute is positioned for easy ingredient addition.

OPERATING INSTRUCTIONS

The Acekool Stand Mixer features 10-speed options, allowing for precise control over various mixing tasks. The speed knob is illuminated with an LED light during operation.

10 Speeds Mixer



1–3 Speeds

Heavy mixtures—Bread, Pizza, Spaghetti



4–7 Speeds

Medium-heavy mixtures—Salad, Cookie, Crepes



8–10 Speeds

Light mixtures—Cream, Egg, Cake, Sauces



Image: Visual guide indicating recommended speed levels for dough hook, flat beater, and whisk.

- 1. Add Ingredients:** Place your ingredients into the mixing bowl.
- 2. Select Speed:** Turn the speed control knob to the desired setting (0-10). Refer to the guide below for recommended speeds for each attachment.
- 3. Mixing:** The mixer will begin operation. You can add additional ingredients through the splash guard's pouring chute if needed.
- 4. Stop:** Turn the speed control knob back to '0' to stop the mixer.

Recommended Speed Settings:

- **Speed 1-3 (Dough Hook):** Ideal for heavy mixtures such as bread dough, pizza dough, and spaghetti dough.

- **Speed 4-7 (Flat Beater):** Suitable for medium-heavy mixtures like salads, cookies, and crepes.
- **Speed 8-10 (Whisk):** Best for light mixtures including cream, egg whites, cake batter, and sauces.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your Acekool Stand Mixer.

- Always unplug the mixer before cleaning.
- **Motor Unit:** Wipe the exterior of the motor unit with a damp cloth. Do not immerse in water.
- **Mixing Bowl & Attachments:** The 7.5QT stainless steel bowl, dough hook, flat beater, and whisk are all dishwasher safe for convenient cleaning.
- **Splash Guard:** The splash guard can be washed by hand with warm, soapy water or placed in the dishwasher.
- Ensure all parts are completely dry before reassembling or storing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Mixer does not start.	Not plugged in, power switch off, or tilt-head not locked.	Ensure power cord is securely plugged in, power switch is on, and the tilt-head is fully lowered and locked.
Attachments are difficult to install/remove.	Incorrect alignment or debris in the port.	Ensure the tilt-head is in the upright position. Align the attachment correctly and twist to lock/unlock. Clean the accessory port if necessary.
Mixer vibrates excessively during operation.	Unstable surface or heavy load.	Ensure the mixer is on a flat, stable surface and suction cups are engaged. Reduce the amount of ingredients if exceeding capacity.
Motor overheats.	Continuous use for too long or excessive load.	Turn off the mixer and let it cool down for at least 30 minutes. Reduce load for future use.

SPECIFICATIONS

- **Brand:** Acekool
- **Model Name:** MC1
- **Item Model Number:** MK-5101
- **Power:** 660W
- **Capacity:** 7.5 Quarts
- **Product Dimensions:** 6.89"D x 12.68"W x 13.9"H
- **Item Weight:** 12.12 pounds
- **Controls Type:** Knob

- **Special Feature:** Safety Lock
- **Is Dishwasher Safe:** Yes (for accessories)



Cookbook



Low Noise



Speak
60dB



Stand Mixer
75dB



CarSound
90dB



Chainsaw
100dB

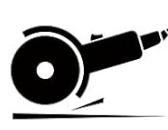


Image: Acekool Stand Mixer illustrating its dimensions and low noise operation.

WARRANTY AND SUPPORT

Acekool offers a 3-year guarantee for replacement or refund. For any issues or support, please contact Acekool customer service. Additionally, activating your warranty may provide extended benefits such as free returns, priority customer service, and discounts.

For more information or to register your product, please visit the official Acekool website or refer to the warranty card included in your package.

