

[manuals.plus](#) /

› [Acekool](#) /

› [Acekool Stand Mixer MC1 \(MK-5101\) - 7.5QT 660W 10-Speed Tilt-Head Food Mixer Instruction Manual](#)

Acekool MC1

Acekool Stand Mixer MC1 (MK-5101) Instruction Manual

7.5QT 660W 10-Speed Tilt-Head Food Mixer

1. INTRODUCTION

Thank you for choosing the Acekool Stand Mixer. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read all instructions carefully before use and retain this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Always unplug the mixer from the power outlet before cleaning, assembling, or disassembling parts.
- Do not immerse the motor unit in water or any other liquid.
- Keep hands, hair, and clothing, as well as spatulas and other utensils, away from moving beaters during operation to prevent injury and/or damage to the mixer.
- The tilt-head design includes a safety lock feature: the mixer will stop operating if the head is lifted during use.
- Ensure the mixer is placed on a stable, flat, and dry surface during operation. The anti-slip silicone suction cups help maintain stability.
- This appliance is for household use only.

3. PRODUCT OVERVIEW

The Acekool Stand Mixer is designed for versatile kitchen tasks, featuring a powerful motor and multiple speed settings. Below is an overview of its main components:

- Main Unit:** Houses the 660W pure copper motor and speed control knob.
- 7.5QT Stainless Steel Bowl:** Large capacity bowl with a convenient handle for easy handling.
- Speed Control Knob:** Offers 10 stepless speeds with an LED light indicator.
- Tilt-Head Release Lever:** Allows easy lifting of the mixer head for attachment changes and bowl access.
- Anti-slip Silicone Suction Cups:** Located on the base for enhanced stability during operation.

- **Ventilation Holes:** Designed to cool the motor during extended use.



Figure 1: Acekool Stand Mixer with its primary attachments and stainless steel bowl.

4. PACKAGE CONTENTS

Upon unpacking, ensure all the following items are present:

- 1 x Acekool Stand Mixer Main Unit
- 1 x 7.5QT Stainless Steel Mixing Bowl with Handle
- 1 x Dough Hook
- 1 x Flat Beater
- 1 x Whisk
- 1 x Splash-Proof Cover
- 1 x Instruction Manual

7.5QT Larger Capacity



One-handed Handle



304 Stainless Bowl



Dishwasher-Safe



Figure 2: The 7.5-quart stainless steel mixing bowl, featuring a convenient handle for easy lifting and pouring.



Cookbook



Low Noise



Speak
60dB



Stand Mixer
75dB



CarSound
90dB



Chainsaw
100dB



Figure 3: Overview of the Acekool Stand Mixer, highlighting its compact dimensions (12.68"W x 6.89"D x 13.9"H) and low noise operation ($\leq 75\text{dB}$).

5. ASSEMBLY

1. Place the mixer on a clean, dry, and stable surface.
2. Lift the mixer head by pushing the tilt-head release lever.
3. Place the 7.5QT stainless steel bowl onto the base, aligning the notches, and turn clockwise until it locks securely.
4. Select the desired attachment (dough hook, flat beater, or whisk). Align the attachment with the shaft and push upwards, then turn counter-clockwise until it locks into place.
5. Lower the mixer head by pushing the tilt-head release lever and gently pushing the head down until it clicks into place.
6. If desired, attach the splash-proof cover over the bowl.

Upgrade Design

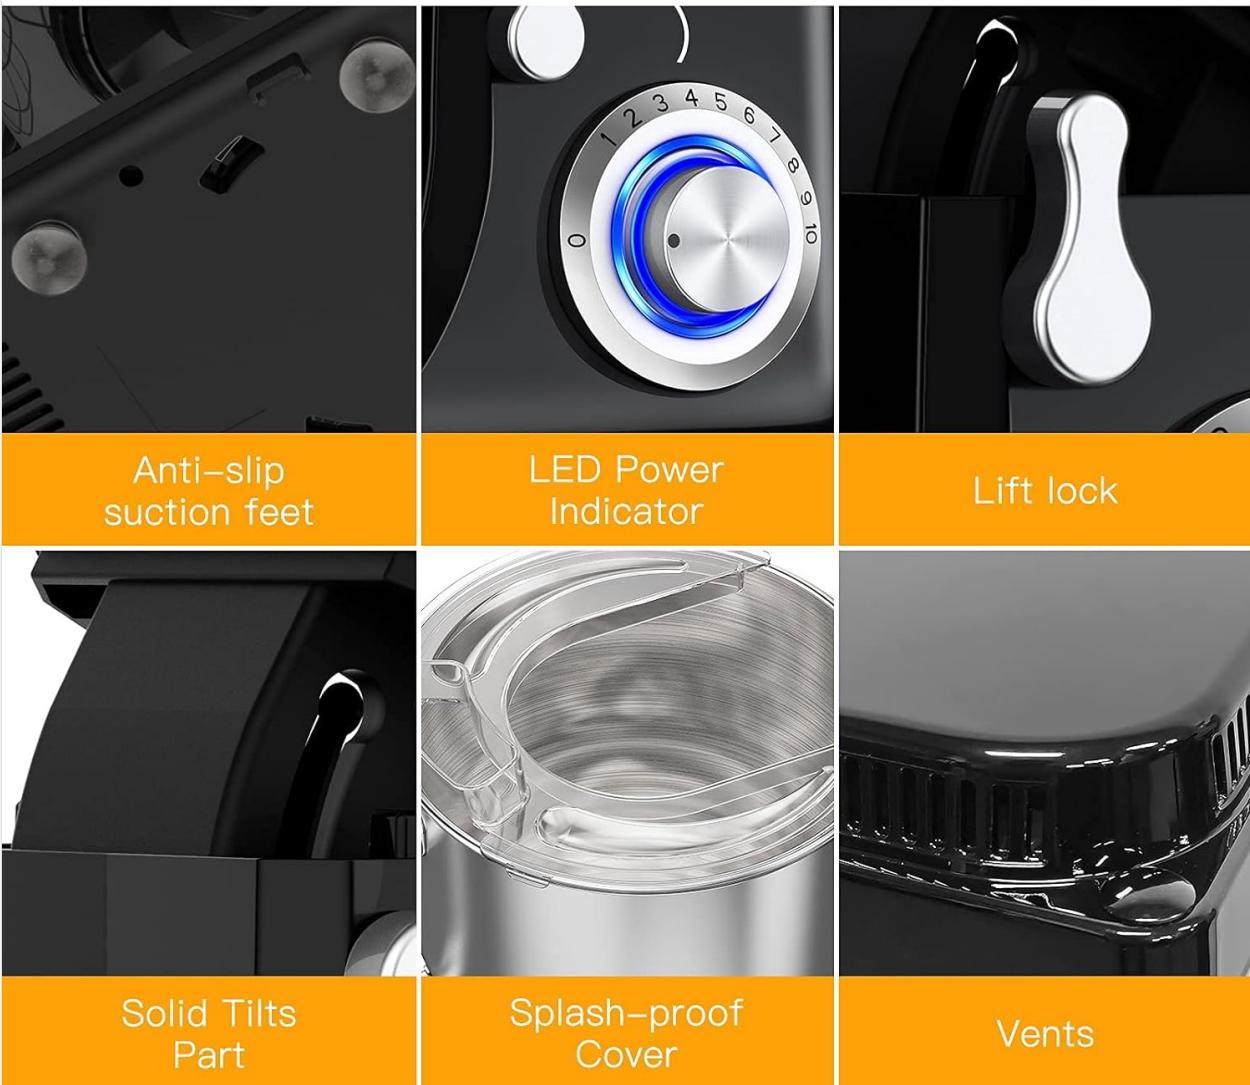


Figure 4: Close-up of the mixer's design, showing the tilt-head mechanism, LED power indicator, and anti-slip suction feet.

6. OPERATING INSTRUCTIONS

6.1 Speed Settings and Attachment Usage

The Acekool Stand Mixer features 10 stepless speed options, allowing precise control for various recipes. Refer to the guide below for optimal usage:

- **Speeds 1-3 (Dough Hook):** Ideal for heavy mixtures such as bread dough, pizza dough, and spaghetti.
- **Speeds 4-7 (Flat Beater):** Suitable for medium-heavy mixtures like salads, cookie dough, and crepes.
- **Speeds 8-10 (Whisk):** Best for light mixtures including cream, egg whites, cake batter, and sauces.

10 Speeds Mixer



Figure 5: Visual guide to the 10-speed settings and their corresponding attachments for various mixing tasks.

6.2 Power and Performance

Equipped with a 660W high-performance pure copper motor, the mixer provides ample power for whipping, beating, and kneading. The robust motor ensures efficient mixing and consistent results.

660 Powerful Motor Mixer

Speed Controller–Pure copper motor 660W
Fast Rotation and Sufficient Mixing



Figure 6: Illustration of the 660W pure copper motor and its effectiveness in kneading dough.

6.3 Official Product Videos

Watch these official videos for a comprehensive overview and demonstration of the Acekool Stand Mixer's features and operation:

Your browser does not support the video tag.

Video 1: Detailed demonstration of the Acekool Stand Mixer's features and how to use it effectively for various tasks.

Your browser does not support the video tag.

Video 2: A review highlighting the capabilities of the 7.5QT Kitchen Electric Food Mixer.

Your browser does not support the video tag.

Video 3: An overview of the Acekool 10-Speed 7.5QT Kitchen Stand Mixer, showcasing its design and functionality.

7. CLEANING AND MAINTENANCE

- Always unplug the mixer before cleaning.
- The stainless steel mixing bowl, dough hook, flat beater, whisk, and splash-proof cover are all dishwasher safe.
- Wipe the main unit with a damp cloth. Do not immerse the motor unit in water.

- Ensure all parts are completely dry before reassembling or storing the mixer.

8. TROUBLESHOOTING

- **Mixer does not turn on:** Ensure the power cord is securely plugged into a working outlet. Check that the mixer head is fully lowered and locked into place.
- **Attachments are difficult to install/remove:** Ensure the mixer head is in the fully lifted position. Refer to the assembly instructions.
- **Excessive vibration or noise:** Verify that the mixer is on a stable, flat surface and that the anti-slip suction cups are engaged. Ensure the mixing bowl and attachment are correctly installed and locked.
- **Motor overheating:** If the mixer feels hot or stops unexpectedly, turn it off and unplug it. Allow it to cool down for at least 30 minutes before resuming use. Avoid overloading the mixer with ingredients beyond its capacity.

9. SPECIFICATIONS

Feature	Detail
Brand	Acekool
Model Name	MC1 (Item model number: MK-5101)
Color	Black
Power	660W
Capacity	7.5 Quarts
Speed Options	10-Speed (Stepless)
Controls Type	Knob
Product Dimensions	6.89"D x 12.68"W x 13.9"H
Item Weight	12.12 pounds
Special Feature	Safety Lock
Is Dishwasher Safe	Yes (Accessories)

10. WARRANTY AND SUPPORT

Acekool offers a 3-year guarantee for replacement or refund on this product. If you encounter any problems or require assistance, please do not hesitate to contact Acekool customer support. We are committed to providing the best possible service.

For support, please refer to the contact information provided with your purchase or visit the official Acekool website.