

Cecotec Tasty&Grill 2000 InoxStone

Cecotec Tasty&Grill 2000 InoxStone Electric Griddle Instruction Manual

INTRODUCTION

Thank you for choosing the Cecotec Tasty&Grill 2000 InoxStone electric griddle. This manual provides important information for the safe and efficient use of your appliance. Please read it thoroughly before first use and keep it for future reference.

The Cecotec Tasty&Grill 2000 InoxStone is a powerful 2000W electric griddle designed for quick and precise cooking of various foods. It features a RockStone non-stick coating for healthy cooking without oils and easy cleaning. The adjustable thermostat with 5 power levels ensures optimal cooking results.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions carefully before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or heating unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any

control to "off", then remove the plug from the wall outlet.

- Do not use the appliance for other than intended use.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your electric griddle:

- **Cooking Plate:** Features RockStone non-stick coating. Available in smooth (plancha), ribbed (grill), or mixed surfaces.
- **Thermostat Control:** Detachable unit with 5 adjustable power levels.
- **Stainless Steel Body:** Provides durability and resistance.
- **Grease Drip Tray:** Collects excess fat and liquids during cooking.
- **Power Cord:** Connects the griddle to the electrical outlet.



Image: The Cecotec Tasty&Grill 2000 InoxStone electric griddle set up on a kitchen counter, ready for use.

SETUP

1. **Unpacking:** Carefully remove all packaging materials and inspect the griddle for any damage.
2. **Placement:** Place the griddle on a stable, heat-resistant, and dry surface. Ensure there is adequate ventilation around the appliance.
3. **Initial Cleaning:** Before first use, wipe the cooking plate with a damp cloth and dry thoroughly. The grease drip tray should also be cleaned.
4. **Attach Thermostat:** Insert the detachable thermostat control into the designated slot on the griddle until it clicks securely into place.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

1. **Preheating:** Turn the thermostat control to the desired temperature setting (1-5). The indicator light will illuminate, signaling that the griddle is heating. Allow 5-10 minutes for the griddle to reach the set temperature. The light will turn off when ready.
2. **Cooking:** Place food directly onto the preheated cooking surface. The RockStone non-stick coating allows for cooking with minimal to no oil.
3. **Temperature Adjustment:** Adjust the thermostat as needed during cooking to maintain the desired heat level.
4. **Monitoring:** Use heat-resistant utensils (plastic or wood) to turn food. Avoid metal utensils that could damage the non-stick coating.
5. **Completion:** Once cooking is complete, turn the thermostat control to the "OFF" position and unplug the griddle from the outlet.



Image: A close-up view of the detachable thermostat control with 5 power levels, attached to the griddle.



Image: Various vegetables, including corn on the cob, zucchini slices, and bell pepper strips, cooking on the electric griddle.

Your browser does not support the video tag.

Video: A short preview showcasing the Cecotec Tasty&Grill 2000 InoxStone electric griddle in action, highlighting its cooking capabilities and ease of use.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your griddle.

1. **Cool Down:** Always allow the griddle to cool completely before cleaning.
2. **Remove Thermostat:** Detach the thermostat control unit. This unit is NOT dishwasher safe and should never be immersed in water. Wipe it with a damp cloth if necessary.
3. **Remove Cooking Plate:** The cooking plate is fully removable for easy cleaning.
4. **Clean Cooking Plate:** The cooking plate is dishwasher safe. Alternatively, wash it by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely.
5. **Clean Grease Drip Tray:** Empty and clean the grease drip tray after each use. It is also dishwasher safe.
6. **Clean Body:** Wipe the stainless steel body with a damp cloth. Do not use abrasive cleaners or scouring pads.

7. **Storage:** Store the clean and dry griddle in a safe place.



Image: A hand demonstrating the removal of the cooking plate from the electric griddle, highlighting its easy-to-clean design.



Image: The electric griddle with its cooking plate removed, emphasizing its dishwasher-safe feature for convenient cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Griddle does not heat up.	Not plugged in; thermostat not properly inserted; power outlet malfunction.	Ensure the griddle is securely plugged into a working outlet. Check if the thermostat is fully inserted. Test the outlet with another appliance.
Food sticks to the cooking surface.	Cooking surface not properly cleaned; non-stick coating damaged; insufficient preheating.	Ensure the cooking surface is clean before use. Avoid using metal utensils. Allow sufficient time for preheating.
Uneven heating.	Thermostat not set correctly; griddle not on a flat surface.	Adjust the thermostat to a higher setting. Ensure the griddle is placed on a flat, stable surface.

If you encounter issues not listed here, please contact Cecotec customer support.

SPECIFICATIONS

Feature	Detail
Model	Tasty&Grill 2000 InoxStone
Power	2000 W
Voltage	240 V
Cooking Surface Dimensions	37.5 x 24.5 cm (approx.)
Product Dimensions (DxWxH)	36.5 x 13.5 x 50 cm
Weight	2.35 kg
Material	Stainless Steel, RockStone non-stick coating (BPA-free)
Temperature Control	Adjustable thermostat with 5 power levels
Special Features	Removable plate, Dishwasher safe plate and drip tray, Integrated heating element
Components Included	Electric griddle, Grease drip tray



Image: Diagram showing the dimensions of the Cecotec Tasty&Grill 2000 InoxStone electric griddle, with measurements in centimeters.

WARRANTY AND SUPPORT

This product comes with a 3-year limited warranty. For warranty claims or technical support, please contact Cecotec customer service. Keep your proof of purchase for warranty validation.

Replacement parts are available for up to 10 years in the EU.

For further assistance, visit the official Cecotec website or contact their support channels.

© 2026 Cecotec. All rights reserved.

Model: Tasty&Grill 2000 InoxStone | Brand: Cecotec