

manuals.plus /

› **KITCHEN MOVE** /

› **KITCHEN MOVE BAT-97965 50L Metal Pedal Bin Instruction Manual**

KITCHEN MOVE BAT-97965

KITCHEN MOVE BAT-97965 50L Metal Pedal Bin Instruction Manual

Model: BAT-97965

INTRODUCTION

Thank you for choosing the KITCHEN MOVE BAT-97965 50L Metal Pedal Bin. This manual provides essential information for the safe and efficient use, setup, and maintenance of your new pedal bin. Please read it thoroughly before use and retain it for future reference.



Image: The KITCHEN MOVE BAT-97965 50L Metal Pedal Bin, featuring a brushed stainless steel finish, positioned next to a kitchen island. This image illustrates the bin's sleek design and how it integrates into a contemporary kitchen environment.

SAFETY INFORMATION

- Keep the bin away from open flames or heat sources.
- Do not overload the bin beyond its 50L capacity.
- Ensure the bin is placed on a stable, level surface to prevent tipping.
- Keep out of reach of small children to prevent accidents.
- Avoid using abrasive cleaners or harsh chemicals that may damage the stainless steel finish.

PACKAGE CONTENTS

Please check that all components are present:

- 1 x KITCHEN MOVE BAT-97965 50L Metal Pedal Bin (Brushed Stainless Steel)

- 1 x Removable Inner Bucket (Plastic)



Image: An exploded view of the KITCHEN MOVE BAT-97965 pedal bin, showing the outer stainless steel body and the removable black plastic inner bucket. This image highlights the bin's internal structure and its components.

SETUP

1. **Unpacking:** Carefully remove all packaging materials from the bin and its components.
2. **Insert Inner Bucket:** Place the black plastic inner bucket inside the stainless steel outer shell. Ensure it sits securely at the bottom.
3. **Attach Bin Liner:** Drape your preferred 50L bin liner over the rim of the inner bucket. The design allows for a "hidden bag" appearance, where the excess liner can be tucked between the inner bucket and the outer shell, or through the designated hole at the back of the inner bucket.
4. **Positioning:** Place the bin in your desired location. The non-slip base ensures stability.



Image: A close-up view of the removable black plastic inner bucket. This component is designed to hold the bin liner and facilitate easy waste disposal and cleaning.

OPERATING INSTRUCTIONS

1. **Opening the Lid (Pedal):** Gently press down on the foot pedal located at the base of the bin. The lid will open smoothly. Release the pedal to allow the lid to close.
2. **Soft-Close Mechanism:** The bin is equipped with a soft-close mechanism. After releasing the pedal, the lid will descend slowly and silently, preventing abrupt closures and extending product life.
3. **Keeping the Lid Open:** For longer tasks, you can manually lift the lid to a 90-degree angle until it locks into an open position. To close, gently push the lid down from the locked position.
4. **Moving the Bin:** Use the sturdy carry handle located at the back of the bin for easy transportation.

FACILE À TRANSPORTER

EASY TO MOVE

La poubelle dispose d'une poignée vous facilitant le transport.



OUVERTURE À PÉDALE

PEDAL OPENING

Large pédale pour une ouverture facile de la poubelle.



Image: A composite image showing the "Easy to Move" handle at the back of the bin and the "Pedal Opening" mechanism at the base. This illustrates the convenience features for operation and portability.

FERMETURE DOUCE ET SILENCIEUSE

SOFT AND SILENT CLOSING



OUVERTURE MAINTENUE À 90°

OPENING MAINTAINED AT 90°

Soulevez le couvercle manuellement jusqu'à son point de verrouillage.

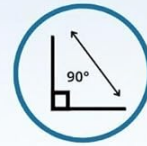


Image: A composite image demonstrating the "Soft and Silent Closing" feature with an animated lid closing, and the "Opening Maintained at 90°" feature, showing the lid locked in an open position. These visuals explain the lid's functionality.

MAINTENANCE AND CLEANING

Regular cleaning will help maintain the appearance and hygiene of your pedal bin.

- **Outer Shell:** Wipe the brushed stainless steel exterior with a soft, damp cloth and a mild detergent. Dry immediately with a clean, soft cloth to prevent water spots. The anti-fingerprint coating helps resist smudges.
- **Inner Bucket:** The plastic inner bucket can be easily removed for thorough cleaning. Wash with warm soapy water, rinse, and dry completely before placing it back into the bin.
- **Avoid:** Do not use abrasive pads, steel wool, or harsh chemical cleaners on any part of the bin, as these can scratch or damage the finish.

POUBELLE À PÉDALE

PEDAL BIN

ADMIRAL



Image: The KITCHEN MOVE BAT-97965 pedal bin with icons indicating its anti-odor, anti-fingerprint, and non-slip base features. This visual emphasizes the bin's hygienic and user-friendly design aspects.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lid does not close softly.	Soft-close mechanism may be obstructed or damaged.	Check for any obstructions around the lid hinge. If the mechanism is damaged, contact customer support.
Pedal mechanism is stiff or unresponsive.	Debris caught in the pedal mechanism or internal linkage issue.	Inspect the pedal area for any foreign objects. Gently clean around the pedal. If the issue persists, avoid forcing it and contact customer support.
Bin is unstable or wobbles.	Uneven surface or damaged non-slip base.	Ensure the bin is placed on a flat, level surface. Check the non-slip base for any damage.

SPECIFICATIONS

Model Number:	BAT-97965
Capacity:	50 Liters
Material:	Metal (Stainless Steel)
Finish Type:	Brushed Stainless Steel
Opening Mechanism:	Step-On Pedal
Product Dimensions (L x W x H):	43 cm x 37 cm x 66 cm (16.93"L x 14.57"W x 25.98"H)
Item Weight:	5.1 kg (11.22 pounds)
Special Features:	Odor Seal, Pedal, Soft-Close Lid, Anti-fingerprint, Non-slip Base, Removable Inner Bucket, Carry Handle



Image: A detailed graphic illustrating the dimensions (43x37x66 cm) of the KITCHEN MOVE BAT-97965 pedal bin and highlighting key features such as "Hidden Bag", "Glossy Finish", "Bucket Included", and "Capacity 50L". This provides a comprehensive overview of the product's physical attributes and benefits.

WARRANTY AND SUPPORT

Specific warranty information is not provided in the product details. For any support inquiries, troubleshooting assistance beyond this manual, or warranty claims, please refer to the retailer or manufacturer's official website for contact information.



