

[Manuals.plus](#) /

› [ReplacementScrews](#) /

› ReplacementScrews Stand Screws Compatible with Hisense 75H78G - Instruction Manual

ReplacementScrews Hisense 75H78G

Instruction Manual

ReplacementScrews Stand Screws Compatible with Hisense 75H78G

Model: Hisense 75H78G

1. PRODUCT OVERVIEW

This product provides a complete set of replacement stand screws specifically designed for the Hisense 75H78G television model. The kit includes four black machine screws, which are essential for securely attaching the original factory stand or legs to your television.



Image 1.1: A set of four black machine screws, designed for TV stand attachment.



Image 1.2: Another perspective showing the heads of the four black machine screws.

These screws are manufactured with black oxide plating, providing both corrosion resistance and a finish that matches the aesthetic of your television. Their precise sizing and threading ensure compatibility with the Hisense 75H78G base stand/legs, fitting into pre-threaded metal holes or inserts.

2. SETUP AND INSTALLATION

Follow these steps to properly install the stand screws for your Hisense 75H78G television:

1. **Verify Compatibility:** Before beginning, locate the model number on the back label of your television. Ensure it explicitly states "75H78G" to confirm these screws are compatible.
2. **Identify Screw Locations:** Refer to your television's original user manual for the exact locations where the stand legs attach to the TV chassis. These are typically pre-threaded holes on the bottom or back of the television.
3. **Position the Stand:** Carefully align the television stand legs with the corresponding attachment points on the TV. Ensure the stand is correctly oriented as per your TV's design.
4. **Insert Screws:** Insert one of the provided black machine screws into each designated hole. There are four screws in total, one for each attachment point.
5. **Tighten Screws:** Using an appropriate screwdriver (typically a Phillips head), gently tighten each screw. Tighten them firmly but avoid over-tightening, which can strip the threads or damage the TV chassis. Ensure all four screws are securely fastened to prevent wobbling.

Important Note: This screw kit is exclusively designed for attaching the original factory stand or legs to your television. It is not intended for use with universal stands or wall mounting applications, as those systems typically require different types and sizes of fasteners.

3. OPERATING GUIDELINES

Once installed, these screws function as the secure connection between your television and its stand. Proper 'operation' involves ensuring they remain tight and provide stable support.

- **Stability Check:** After installation, gently test the stability of the television on its stand. It should feel firm and not wobble.
- **Periodic Inspection:** Periodically (e.g., every 6-12 months), inspect the screws to ensure they have not loosened over time. If any screw feels loose, gently re-tighten it.

- **Avoid Excessive Force:** Do not apply excessive force or weight to the television stand, as this could stress the screws and potentially compromise stability.

4. MAINTENANCE

These screws require minimal maintenance. To ensure their longevity and effectiveness:

- **Storage:** If the screws are not immediately used, store them in a dry, cool place away from direct sunlight and moisture to prevent any potential corrosion, although they are black oxide plated for resistance. Keep them in their original packaging or a small, sealed container.
- **Cleaning:** If necessary, wipe the screws with a dry, soft cloth to remove dust or debris. Avoid using harsh chemicals or abrasive cleaners.

5. TROUBLESHOOTING

If you encounter issues during installation or with the stability of your TV stand, consider the following:

- **Screws Do Not Fit:**
 - **Cause:** Incorrect TV model or stripped threads in the TV.
 - **Solution:** Double-check your TV's model number (75H78G) on the back label. If the model is correct, inspect the TV's screw holes for any damage or stripped threads. These screws are precisely threaded for the specified model.
- **TV Stand is Wobbly:**
 - **Cause:** Screws not fully tightened, stand not properly aligned, or damaged stand components.
 - **Solution:** Ensure all four screws are tightened securely. Verify that the stand legs are correctly inserted and aligned with the TV's attachment points. Inspect the stand legs themselves for any damage or bending.
- **Screw Head Stripped:**
 - **Cause:** Using an incorrect screwdriver size or applying excessive force during tightening.
 - **Solution:** Always use the correct size Phillips head screwdriver. If a screw head is stripped, it may need to be carefully extracted and replaced. Avoid over-tightening.

6. SPECIFICATIONS

Brand	ReplacementScrews
Compatible Model	Hisense 75H78G
Fastener Type	Machine Screw
Quantity	4 Screws (One Set)
Exterior Finish	Black Oxide

Thread Coverage	Fully Threaded
Item Weight	0.48 Ounces (total package)
Package Dimensions	6.5 x 3.5 x 0.5 inches
Country of Origin	USA

7. WARRANTY AND SUPPORT

For any questions regarding the compatibility or installation of these replacement screws, please contact the manufacturer, ReplacementScrews, directly. While specific warranty details are not provided, the quality of the screws is designed to ensure secure attachment when used as intended.

For further assistance, you may visit the official ReplacementScrews store or contact their customer support channels as listed on their product pages or website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question