

## Mediashop M24329

# Livingston Prime Everyday Cordless Handheld Vacuum Cleaner

Model: M24329

Brand: Mediashop

## 1. INTRODUCTION

Thank you for choosing the MediaShop Livingston Prime Everyday Cordless Handheld Vacuum Cleaner M24329. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before first use and keep them for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance, including the following:

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner).
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not charge the unit outdoors.
- Recharge only with the charger specified by the manufacturer.

### 3. PACKAGE CONTENTS

---

Please check the package for the following components:

- 1 x Livingston Prime Everyday Cordless Handheld Vacuum Cleaner Main Unit
- 1 x Charging Adapter
- 1 x Crevice Nozzle
- 1 x Brush Nozzle
- 1 x Washable Filter

### 4. PRODUCT OVERVIEW

---

Familiarize yourself with the different parts of your Livingston Prime Everyday vacuum cleaner.



Image: The Livingston Prime Everyday Cordless Handheld Vacuum Cleaner, showing its compact design and main body. This image illustrates the overall appearance of the vacuum cleaner.

1. **Main Unit:** Contains the motor, dustbin, and battery.
2. **Power Button:** Located on the handle for easy on/off control.
3. **Dustbin Release Button:** For detaching the dustbin for emptying.
4. **Charging Port:** Where the charging adapter connects.
5. **Crevice Nozzle:** Ideal for narrow gaps and corners.
6. **Brush Nozzle:** Suitable for upholstery and delicate surfaces.

### 5. SETUP

---

#### 5.1 Initial Charging

Before first use, fully charge the vacuum cleaner. Connect the charging adapter to the charging port on the unit and plug it into a power outlet. The charging indicator light will illuminate. Charging typically takes approximately 3-4 hours. Once fully charged, the indicator light may change color or turn off, depending on the model. Disconnect the charger once charging is complete.

## 5.2 Attaching Accessories

To attach a nozzle, align the accessory with the suction opening of the main unit and push firmly until it clicks into place. To remove, pull the accessory away from the unit while holding the main unit steady.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Turning On/Off

Press the power button located on the handle to turn the vacuum cleaner on. Press it again to turn the unit off.

### 6.2 Using the Vacuum Cleaner

Select the appropriate nozzle for the cleaning task. The crevice nozzle is suitable for tight spaces, while the brush nozzle is effective for dusting and upholstery. Move the vacuum cleaner slowly over the surface to be cleaned to ensure thorough dirt collection.

### 6.3 Emptying the Dustbin

Empty the dustbin regularly to maintain optimal suction power. Press the dustbin release button and detach the dustbin from the main unit. Hold the dustbin over a waste bin and open its lid to empty the collected debris. Reattach the dustbin securely after emptying.

## 7. MAINTENANCE

---

### 7.1 Cleaning the Dustbin and Filter

After emptying the dustbin, it is recommended to clean the filter. Remove the filter from the dustbin. Tap the filter gently to remove loose dust. If necessary, rinse the filter under running water. Ensure the filter is completely dry before reinserting it into the dustbin and reattaching the dustbin to the main unit. Do not operate the vacuum cleaner without a dry filter.

### 7.2 General Cleaning

Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure no water enters the electrical components.

### 7.3 Battery Care

To prolong battery life, avoid completely discharging the battery frequently. Charge the unit when the power is low, and store it in a cool, dry place if not used for extended periods.

## 8. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Battery is not charged.	Charge the battery fully.
Reduced suction power.	Dustbin is full. Filter is clogged. Suction opening is blocked.	Empty the dustbin. Clean or replace the filter. Remove any blockages from the suction opening.

Problem	Possible Cause	Solution
Unusual noise during operation.	Foreign object caught in the suction path.	Turn off the unit and carefully check for and remove any foreign objects.
Charging indicator light not working.	Charger not properly connected. Power outlet not working.	Ensure charger is securely connected. Test the power outlet with another device.

## 9. SPECIFICATIONS

---

- **Model Number:** M24329
- **Brand:** Mediashop
- **Power:** 90 Watts
- **Voltage:** 22.2 Volts
- **Item Weight:** 1.8 Kilograms
- **Package Dimensions:** 51.5 x 35.9 x 18.2 cm
- **Form Factor:** Handheld
- **Special Feature:** Lightweight
- **Surface Recommendation:** Upholstery
- **Power Source:** Battery Powered (Cordless)

## 10. WARRANTY AND SUPPORT

---

This product is covered by the standard manufacturer's warranty. For detailed warranty information, service, or support, please refer to the warranty card included with your purchase or contact MediaShop customer service directly. Keep your proof of purchase for any warranty claims.