

[Manuals.plus](#) /

› [NKF](#) /

› Instruction Manual for NKF RC-1189 Remote Control

NKF RC-1189

Instruction Manual

NKF RC-1189 Remote Control

INTRODUCTION

This manual provides instructions for the NKF RC-1189 Replacement Remote Control, designed to operate various Denon AV Receiver models. This remote control is a direct replacement and requires no programming or pairing for most compatible devices.

PACKAGE CONTENTS

- 1 x RC-1189 Remote Control

Please note: Batteries and user manual are not included in the package. This document serves as the user manual.

SETUP

Battery Installation

The RC-1189 remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Back view of the RC-1189 remote control with the battery compartment open, illustrating the battery insertion process. Once batteries are installed, the remote control is ready for use with compatible Denon AV Receivers without additional programming.

OPERATING INSTRUCTIONS

The RC-1189 remote control is designed to replicate the functions of the original Denon AV Receiver remote. Most buttons will correspond directly to the functions on your receiver.





Image: Front view of the RC-1189 remote control, displaying the layout of all control buttons.

Key Functions Overview

- **POWER:** Turns the AV Receiver on or off.
- **SOURCE:** Selects the input source (e.g., CBL/SAT, DVD/Blu-ray, Game, AUX, Media Player, TV Audio, Tuner, iPod/USB, Online Music, Bluetooth, Internet Radio).
- **VOLUME +/-:** Adjusts the master volume level.
- **MUTE:** Toggles sound muting on or off.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Used for menu navigation and selection.
- **INFO:** Displays information about the current input or settings.
- **OPTION:** Accesses context-sensitive options.
- **SOUND MODE (MOVIE, MUSIC, GAME, PURE):** Selects different audio processing modes.
- **CHANNEL +/-:** Changes channels (if applicable to the selected source).
- **BACK:** Returns to the previous menu or screen.
- **SETUP:** Accesses the receiver's main setup menu.
- **QUICK SELECT (1-4):** Allows for quick recall of preferred settings or input configurations.
- **Playback Controls (Play/Pause, Stop, Skip Forward/Backward):** Controls media playback.

For detailed functionality of specific buttons, refer to your Denon AV Receiver's original user manual.

COMPATIBILITY

This RC-1189 remote control is compatible with the following Denon AV Receiver models:

- AVR-X1200W
- AVR-S700W
- AVR-S710W
- AVR-S720W
- AVR-X1100W

It is designed to work immediately with these models upon battery insertion, requiring no additional setup or programming.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote control from physical shocks and drops, which can damage internal circuitry.

TROUBLESHOOTING

If you experience issues with your RC-1189 remote control, try the following troubleshooting steps:

Problem	Possible Cause / Solution
Remote control is not working.	Check if batteries are inserted correctly with correct polarity (+/-). Replace old batteries with new AAA alkaline batteries. Ensure there are no obstructions between the remote control and the AV Receiver's infrared sensor. Confirm the remote control is pointed directly at the AV Receiver.
Some buttons are not responding.	Ensure the remote control is compatible with your specific Denon AV Receiver model. Clean the remote control's surface and buttons to remove any dirt or debris that might be obstructing button presses. Test with new batteries.
Remote control range is reduced.	Batteries may be low; replace them. Ensure no strong light sources (e.g., direct sunlight, fluorescent lights) are interfering with the IR signal.

If the problem persists after trying these steps, please contact the seller for further assistance.

SPECIFICATIONS

- **Model:** RC-1189
- **Brand:** NKF
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Product Dimensions:** 9.06 x 3.15 x 0.79 inches (approximately)
- **Item Weight:** 3.2 ounces (approximately)
- **Compatible Devices:** Denon AV Receivers (AVR-X1200W, AVR-S700W, AVR-S710W, AVR-S720W, AVR-X1100W)

SUPPORT

For any questions or issues not covered in this manual, please contact the seller or manufacturer directly. Refer to your purchase documentation for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08LGGQVDC>

More documents and user manuals: <https://manuals.plus/>